


INSTALLATION DIAGRAM

Symbol	Name
	3-way valve
	2-way valve
	Ball valve
	Non-return valve
	Filter
	Water pump
	Temp sensor
	Release valve
	Expansion tank

Notice:

1. Pls select the right modes according to your demand and then install it according to the installation diagram. If only hot water function required, pls select heating+hot water mode, and then put the hot water sensor into the hot water tank.
2. Two-way valve and BV valve are optional for installation. Only If you need to control the temperature by different zone, then pls install both.
3. Fan coil can be controlled by linkage with the secondary circulation pump. Meanwhile, a passive linkage thermostat shall be installed.

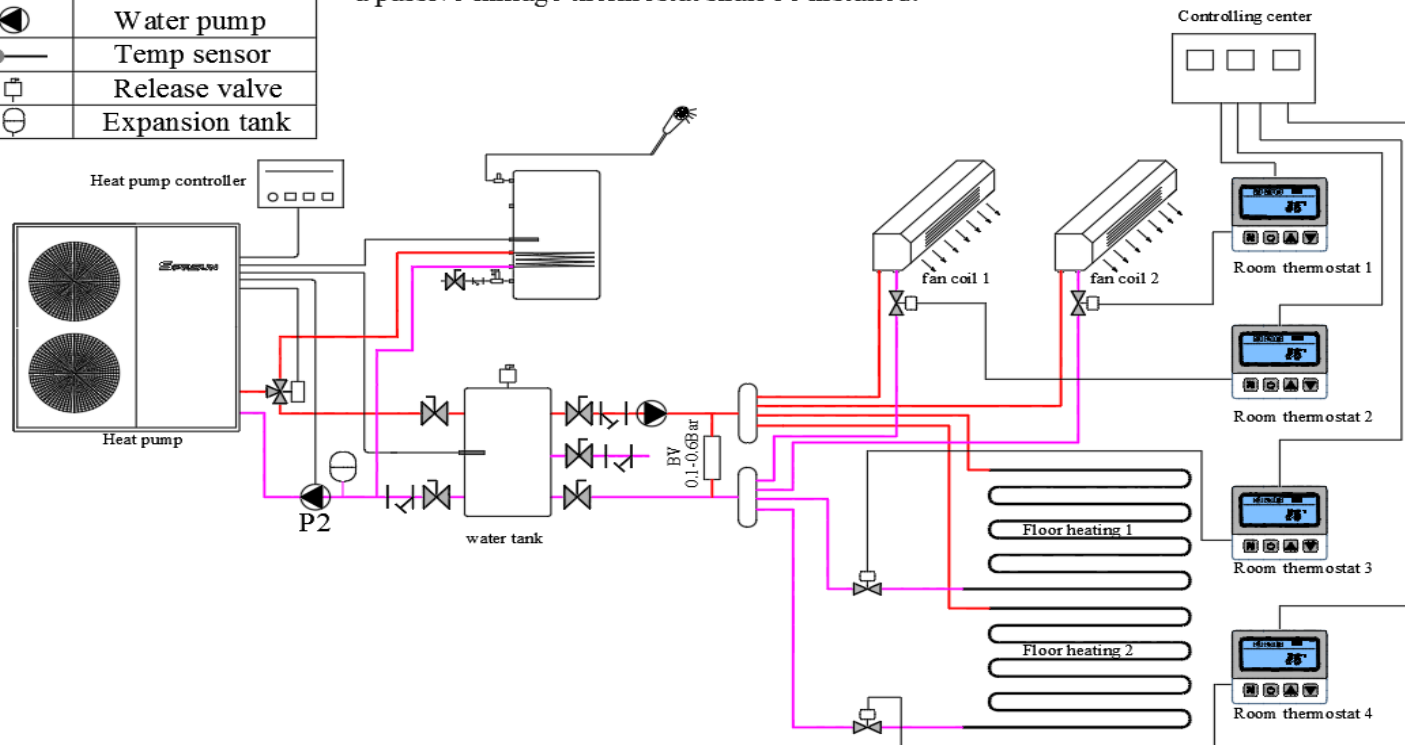

SPRSUN DC inverter air source heat pump