

# Safety Warning



Take off electric supply before acting on any electric devices.

Keeping this instructions inside boiler documentation is advised.

## Installation

### Replacing and connection



Be sure that electric supply has been switched OFF!

- ▶ Open the electrical box to get access to the main PCB, following instructions on User Manual;
- ▶ Take off every wire and unscrew the fixing screws;
- ▶ Take off old PCB and insert new one on the same spot, re-connecting both wires and connectors as before and as written on User Manual,




Close plastic panel correctly in order to not lose IP protection!

### Configuration Code

Taking off metal cover, close to the buttons, you can read a "Configuration Code".

**(i)** This code is important in order to know how to set any eventual PCB replaced on this boiler and later checking if configuration has been correct or not.

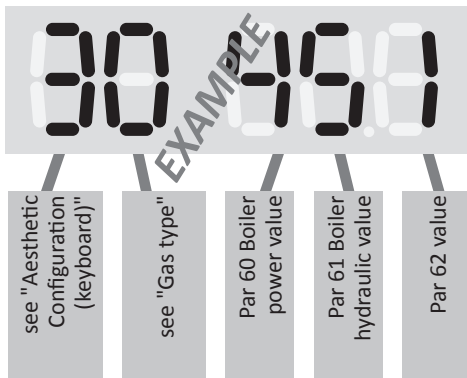

**Remark:** Current Code Configuration is showed immediately after electric power ON, in order to be checked easily.



### Activation and configuration


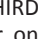
#### Aesthetic Configuration (keyboard)


This PCB has to be set for boiler where it is mounted on.


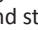
- ▶ Switch ON boiler
- ▶ Display shows "CONF.E" (which means Configuration Aesthetic)
  - If "CONF.E" is not showed, see "Total reset" and make it.
- ▶ Keep on pressing both buttons  and  for 8 sec
  - This operation gives to PCB right information about boiler type.

After Aesthetic Configuration, boiler shows other 2 parameter to be set: Par 60, 61 and 62.

#### Parameters 60, 61 and 62 configuration

**Par. 60** - On display, on the left, the parameter ID is shown (alternatively as "tS" and "60"). On the right there is the value of parameter. Using buttons  and , put this value equal to THIRD digit on Configuration Code (sticker on Plastic Panel) and press **RESET** for confirming and storing value.

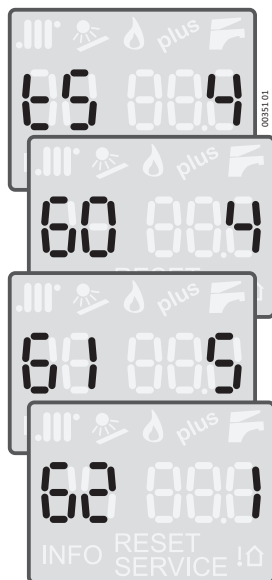

**Par. 61** - On display, on the left, the parameter ID is shown (alternatively as "tS" and "61"). On the right there is the value of parameter. Using buttons  and , put this value equal to FOURTH digit on Configuration Code (sticker on Plastic Panel) and press **RESET** for confirming and storing value.

**Par. 62** - Set it in the same way as previous ones, putting this value equal to FIFTH digit on Configuration Code (sticker on Plastic Panel) and press **RESET** for confirming and storing value.

### End of configuration

This configuration is now stored on PCB.

No more configuration is required until next PCB change or after making "Total Reset" of it (see "Total reset").

### Switching on boiler

#### Gas type

- ▶ When boiler is turned ON, display shows **E 25** - Automatic Boiler Calibration needed
  - **Last check to be done** is type of Gas used: it is handled by the value of **Parameter 01**:
    - **0 = G20** (factory setting);
    - **1 = G31/LPG**
    - **2 = Don't use this value as it's for G230 and it's not allowed outside Italy.**
- ▶ Before igniting the burner, modify this parameter according to Gas used.

If value of Parameter 1 = 1 (G31/LPG), **Configuration Code** sticker on control panel when taking off metal cover will be different, in terms of 2 digit, from what is showed on boiler switching ON.

#### Other parameters





- ▶ If eventual particular plant applications required changing other parameters; they have to be re-set again in new PCB mounted (i.e. *Max Heating Outlet Power, Modulating Pump...*)
- ▶ For any doubt, please check and read relevant paragraph explaining Boiler Parameters.

#### Combustion

- ▶ Set Parameter **49** to **5** and launch **Automatic Calibration** as described in User Manual.

### Total reset

This procedure allows Technician to force PCB to "factory Settings" in order to start again "Activation and configuration":

- ▶ Boiler status **OFF** ;
- ▶ keep pressing for 15 sec these 3 buttons
  - **Aesthetic with 8 buttons:**  
 **INFO** and **PLUS**
  - **Aesthetic with 6 buttons (without buttons INFO - PLUS) or with knobs:**  
  and 
- ▶ Symbol "-" will be showed sliding on display. Pressing **RESET**, **Total reset** is confirmed and starts;

Once Total reset starts, display is OFF and it restarts automatically again showing "CONF.E".

At this point, Technician can re-set boiler following procedure explained in this instructions sheet, starting from "Aesthetic Configuration (keyboard)".