

Data Sheet

Thermot

Thermal Actuator

Application

The thermal actuator is a small actuator for electrical on/off controls and PWM to activate several types of valves and floor heating manifolds.

The actuator is equipped with a visual position indicator to show the open or closed position of the valve.

The product range covers actuators for 24 V (SELV) or 230 V supply in both normally closed (NC) or normally open (NO) versions (valve positions with no supply voltage to the actuator).

The actuator can be connected to valves with Heimeier/MNG/Oventrop M30×1,5 connection. Other valves must be verified individually to ensure correct valve closing measurement and valve top geometry.



Ordering

Actuator	Connection type	Supply voltage	Function	Code no.
Thermot	M30 × 1,5*	24 V AC/DC	NC	088H3216
Thermot	M30 × 1,5*	24 V AC/DC	NO	088H3218
Thermot	M30 × 1,5*	230 V AC	NC	088H3220
Thermot	M30 × 1,5*	230 V AC	NO	088H3222

^{*} Connection to Heimeier, MNG and Oventrop valves with $M30\times1,5$ connection. Other valves must be verified individually to ensure correct valve closing measurement and valve top geometry (see "Dimensions" on page 2).

Technical Specifications

Supply voltage	24 V (Class II (SELV**)) and 230 V (3 A pre-fuse)	
Max. inrush current	24 V: 350 mA; 230 V: 250 mA	
Frequency	50-60 Hz	
Running power consumption	2 W	
Spindle travel time	~3 min.	
Ambient temperature	0 °C to 60 °C	
Stroke	2,4 mm (minimum after 5 years)	
Actuating force	NC: 100 N,	
Actuating force	NO: 140 N	
Closing measurement	11,8 ± 0,3 mm	
Approval	CE	
Enclosure	IP 41	
Cable length	950 mm	


^{**} SELV: Safety Extra Low Voltage

If the actuator should be a 24 V or 230 V and normally open (NO) or normally closed (NC) depends mainly on the application, control strategy and the controller connected to the actuator.

© Danfoss | FEC | 2020.07 Al179686462452en-000501 | 1



Electrical Connection

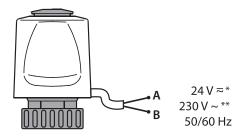



A: Blue B: Brown

- * 24 V Class III transformer (SELV)
- ** 230 V max. 3 A pre-fuse

Mounting

All NC versions are equipped with a red mounting split on the position indicator to secure easy valve connection. When mounted this split must be removed for correct operation.

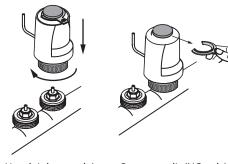

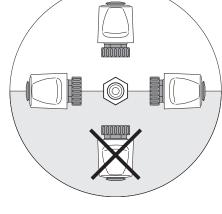



Hand tighten only!

Remove split (NC only)

Mounting positions

Dimensions

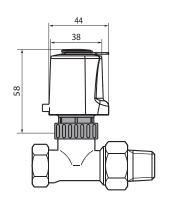

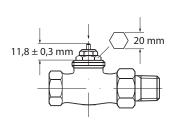

Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com