Display

The keypad shows the status of the security system. When several events occur, the keypad shows each event in order of priority.

Status indicators

The indicators show how your system is operating.

Part On status

Green - Ready to turn Part On (part arm). Red - Part On (part armed).

Blue - AC power present.

Trouble

Yellow - A Trouble condition exists.



All On status

Green - Ready to turn All On (arm). Red - All On (armed).

Navigation and Function keys

These keys start the backlighting and the tones.

PREV (▲) and NEXT (▼)

Use [PREV] (previous) and [NEXT] to scroll through lists and text.

Use [ENTER] after entering your passcode, to select an item, or to enter Yes to a request.

ESC (*)

Use [ESC] (escape) to exit from menus and functions, or to delete letters or numbers.

CMD (#)

Use [CMD] (command) in combination with one or two number keys to perform select functions.

Commands

You can operate functions with the [CMD] plus one or two digits.

Touch the [CMD] key, then enter the command.

After you press [CMD], then use [PREV] and [NEXT] to move through the commands. To engage the command, touch [ENTER].

Use [CMD]8 to open the Main menu.

Command	Function
[CMD] 0	Bypass
[CMD] 0 0	Unbypass
[CMD] 1	All on (with delay)
[CMD] 1 1	All On, Instant
[CMD] 2	Part On, Instant
[CMD] 3	Part On (with delay)
[CMD] 4	Silence Trouble Sounders
[CMD] 4 0	See Alarms
[CMD] 4 1	Test Report
[CMD] 4 2	Status Report
[CMD] 43	RPS Answer
[CMD] 4 4	Intrusion Walk Test
[CMD] 4 5	Date and Time
[CMD] 4 6	Door Control Menu
[CMD] 4 7	Reset Sensors

Command	Function
[CMD] 4 9	Change Display
[CMD] 5 0	Go to Area
[CMD] 5 1	Extend Close
[CMD] 5 2	SKED Menu
[CMD] 5 3	Delete User
[CMD] 5 4	Output Change Menu
[CMD] 5 5	Change Passcode
[CMD] 5 6	Add User
[CMD] 5 7	Default Text
[CMD] 5 8	Fire Walk Test
[CMD] 5 9	Show Revision
[CMD] 6	Watch Mode
[CMD] 7*	Special Alert
[CMD] 8	Open Main Menu
[CMD] 9*	Special Alert

BOSCH

Area 1 Ready to turn on

ENTER (—)

2

5

8

0

 $\overline{\mathbb{A}}$

 $\bigcap \dot{\mathbf{A}}$

NEXT (▼)

3

6

9

CMD (#)

PREV (▲)


1

4

ESC (*)


Menu tree

[CMD] [8] shows the menu tree. Each option has a number. Touch the number for the desired menu, or use [PREV] or [NEXT] to review your options, and then touch [ENTER] when you see the desired option.

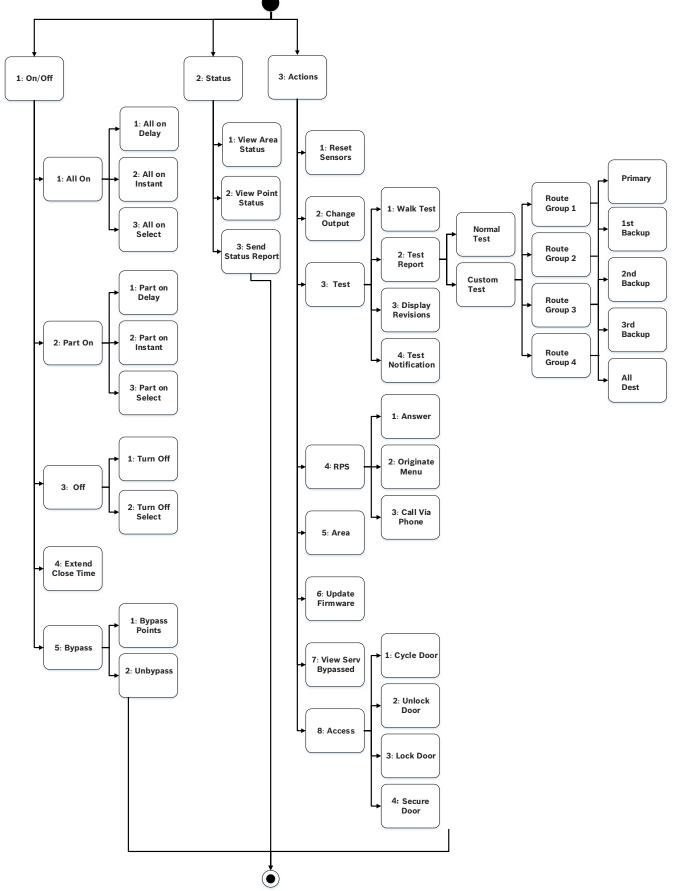

^{*}As configured by your security company.

NOTICE! The Access menu and the option to configure a card are available on compatible security systems only.

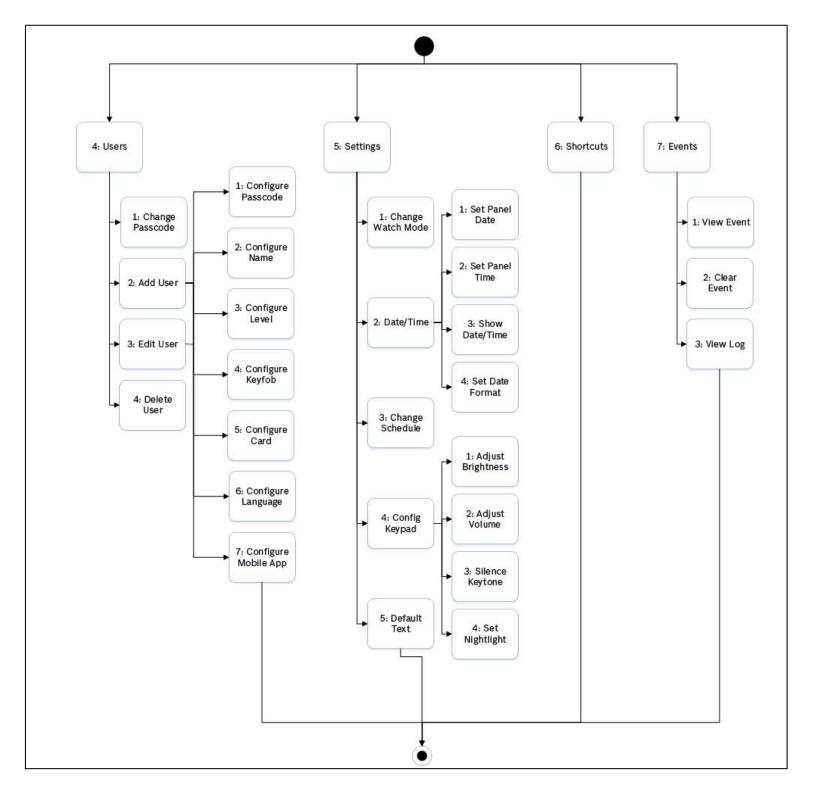

2 | Turn on (arm) your system

To set All On with a delay, enter your passcode, then [ENTER].

Use one of the commands: For All On: [CMD][1] For All On, Instant: [CMD][1][1] For Part On, Instant: [CMD][2] For Part On: [CMD][3]

To open the Main menu use [CMD][8]. For All On: Go to [1] On/Off > [1] All On > [1] All On Delay. For All On, Instant: Go to [1] On/Off > [1] All On > [2] All On Instant. For Part On: Go to [1] On/Off > [2] Part On > [1] Part On Delay For Part On, Instant: Go to [1] On/Off > [2] Part On > [2] Part On Instant. The menu options allow you to choose individual areas to turn on. Open the All On or Part On menu, press [3] to open the Select menu, and then use [NEXT] and [ENTER] to choose On Instant or On Delay and the area to turn on.

3 | Turn off (disarm) your system

Do one of the following:

Enter your passcode.

Use the menus:

Press [CMD][8] to open the Main menu.

- For Turn Off: Go to [1] On/Off > [3] Off > [1] Off.
- For Turn Off Select: Go to [1] On/Off > [3] Off > [2] Off Select. Use [NEXT] and [ENTER] to select the area to turn off.

4 | Change your passcode

Use [CMD][5][5], then the prompts.

Press [CMD][8], Go to [4] Users > [1] Change Passcode, and then follow the prompts.

5 | Edit users

You can change passcodes, and add, remove, and replace keyfobs and cards (if supported by your security system).

5.1 | Add users

Use the command: [CMD][5][6]

Use [CMD][8].

Go to [4] Users > [2] Add User.

5.2 | Edit Users

Use [CMD][8].

Go to [4] Users > [3] Edit User.

5.3 | Delete users

Use the command: [CMD][5][3]

Use [CMD][8] to open the Main menu. Go to [4] Users > [4] Delete User.

6 | Alarms

When the security system is in alarm, the number of alarms shows on

Enter your passcode to stop the alarms. If the system is armed, stopping silencing the alarm also stops the system.

The system shows Alarm Silenced, and the number and names of points in alarm, in the order they occurred.

7 | Shortcuts

- Open the Main menu.
- Touch [CMD][8].
- Go to [6] Shortcuts.
- To choose the shortcut, touch [NEXT] and [ENTER].

8 | Keypad cleaning

Use a soft cloth or a non-abrasive cleaning solution. Spray the cleaner onto the cloth, not the keypad.

El-gr: Μεταβείτε στη διεύθυνση https://gr.boschsecurity.com/el/ για την τεκμηρίωση σε αυτήν τη νλώσσα

Es-es: Visite https://es.boschsecurity.com/es/ para obtener documentación en

Fr-fr: Accédez à l'adresse https://fr.boschsecurity.com/fr/ pour obtenir la documentation dans cette langue.

Hu-hu: A honosított dokumentációt lásd a https://hu.boschsecurity.com/hu/ oldalon.

It-it: Andare a https://it.boschsecurity.com/it/ per la documentazione in questa

Pl-pl: Dokumentacja w tym języku znajduje się w witrynie https:// pl.boschsecurity.com/pl/

Pt-br: Acesse http://pt.boschsecurity.com/pt/ para obter a documentação neste

This document is the intellectual property of Bosch Security Systems, Inc. and is protected by copyright. All rights reserved.

Trademarks

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.





Basic Keypad B915/B915I



en User's Quick Reference Guide

Bosch Security Systems, B.V. Torenallee 49

5617 BA Eindhoven Netherlands

www.boschsecurity.com

© 2019 Bosch Security Systems B.V.

F.01U.297.874 | 08 | 2019.05