



MADE IN ITALY



ENGLISH



EPIC 1D

RANGE 0,37÷15 kW
0,50÷20 Hp

Installation
ad use
manual

Introduction

1.1 PRESENTATION	pag. 3
1.2 DESCRIPTION	pag. 3
1.3 HANDLING	pag. 3

Safety informations

2.1 WARNINGS	pag. 4
2.2 CAUTION	pag. 4

Installation

3.1 ASSEMBLING	pag. 5
3.2 ELECTRICAL CONNECTIONS	pag. 6
3.3 ADJUSTMENTS AND SETTINGS (INITIALIZATION)	pag. 8
3.4 ADJUSTMENTS AND SETTINGS (ADVANCED MENU)	pag. 10
3.5 TRIMMER SETTINGS	pag. 26
3.6 CONTACT ALARM OUTPUTS	pag. 26

General use

4.1 KEYPAD AND LIGHTS INDICATIONS	pag. 27
4.2 ALARMS	pag. 28
4.3 TYPICAL INSTALLATIONS	pag. 30

Maintenance

5.1 PUMPS STOP	pag. 32
5.2 SERVICE	pag. 32
5.3 SPARE PARTS	pag. 32
5.4 WASTE DISPOSAL	pag. 32

Certifications

6.1 CERTIFICATE OF CONFORMITY	pag. 33
-------------------------------	---------

1.1 PRESENTATION

The purpose of this manual is to provide the necessary information for the proper installation, use and maintenance of EPIC 1D.

The user should read this manual before operating the unit. Improper use may cause damage to the machine and lead to the forfeiture of the warranty coverage. Always specify the model identification code and the construction number when requesting technical information or spare parts from our Sales and Service department. The instruction and warnings given below concern the standard version; refer to the sale

contract documentation for modifications and special version characteristics. For instructions, situations and events not considered in this manual or in the sale documents, please contact our customer service.

Our units must be installed in sheltered, well-ventilated, non-hazardous environments and must be used at a maximum temperature of +40°C and minimum of -5°C.

1.2 DESCRIPTION

These control panels are designed for controlling 1 motor or electric pump used in pressurization systems or in applications for emptying wells or water tanks. In case of any failure of the main pump, the reserve pump start automatically.

Atlantic Power Control S.r.l.s. shall not be liable for any damage caused or suffered by the unit as a result of its unauthorised or improper use.

TECHNICAL FEATURES

Self learning of the motor data; min-max amperage protection (A); dry running protection

made by cosφ and min Amperage; min and max voltage protection (V); phase failure protection; start and stop delay; delay network restore, protection delay, frequency 50-60Hz.

OUTPUT ALARMS AND PROTECTIONS

Acoustic alarm; light alarm, alarm output Relais 220 V - 400 V CA, alarm output Relais 12 V CC, alarm output with Buzzer 12 V; min-max water level; min-max Voltage; phase failure; frequency failure alarm; min-max motor Amperage; min cosφ; motor klixon alarm; water in oil chamber alarm.

1.3 HANDLING

The control panel must be handled with care, as falls and knocks can cause damage without any visible external signs.

PRELIMINARY INSPECTION

After you have removed the external packaging, visually inspect the control panel to make sure it has suffered no damage during shipping. If any damage is visible, inform an Atlantic dealer as soon as possible, no later than five days from the delivery date.

STORED

If for any reason the unit is not installed and starter immediately after it has reached its destination it must be stored properly. The external packaging and the separately packed accessories must remain intact, and the whole must be protected from the weather, especially from freezing temperatures, and from any knocks or falls.

2.1 SAFETY INFORMATION



RISK OF ELECTRIC SHOCK

Failure to follow the instructions in this manual, carries a risk of electric shock.



RISK FOR PEOPLE AND PROPERTY

Failure to follow the prescriptions in this manual, carries a risk of damage to persons and/or property.



WARNING

Failure to observe the prescriptions in this manual, cause damage to the pump, the unit or the system.

2.2 CAUTION



ATTENTION: PUMP

- Make sure the pump is fully primed before you start it.
- Make sure the pump is running with the correct rotation.
- The electric pump or the motor can start up automatically.



ATTENTION: ELECTRICAL CONNECTION

- The control panel must be connected by a qualified electrician in compliance with the electrical regulations in force.
- The electric pump or the motor and the panel must be connected to an efficient grounding system in compliance with the electrical regulations locally in force.
- Ground the unit before carrying out any other operation.



ATTENTION: SERVICE

As a general rule, always disconnect the power supply before proceeding to carry out any operation on the electrical or mechanical components of the unit or system.

LINE OF SUPPLY CURRENT

Connect the unit at ground before carrying out any other operation.

The voltage input corresponds to the data written on the panel and on the pump:

- (400V $\pm$ 10% 50/60Hz x il EPIC 1D -400/...)
- (230V $\pm$ 10% 50/60Hz x il EPIC 1D -230)

Make sure that the power-supply-cable can bear the nominal current and connect it to the terminals of the general switch of the control panel. If the cables are exposed, they must be appropriately protected. The line must be protected with an Earth leakage and magnetic switch measured in accordance with the regulations locally in force.

LINE OF MOTOR POWER SUPPLY

The voltage input corresponds to the data written on the motor:

- (400V $\pm$ 10% 50/60Hz three-phase)
- (230V $\pm$ 10% 50/60Hz single-phase)

Doing some starting make sure that the motor respects the right direction of rotation usually indicated by an arrow printed on the motor.


3.1 ASSEMBLING

Fix the control panel for a stable support with screws and screw anchor using the holes arranged in the box.

To fix the cables in their terminals use a tool of the proper size to avoid the damaging of the screws or of their seat.



If use an electric screwier pay attention not to spoil the thread or the screws.

After the fixing, remove every plastic or metallic surplus (ex. pieces of copper of the cables or plastic shavings of the box) inside the box before supplying power.


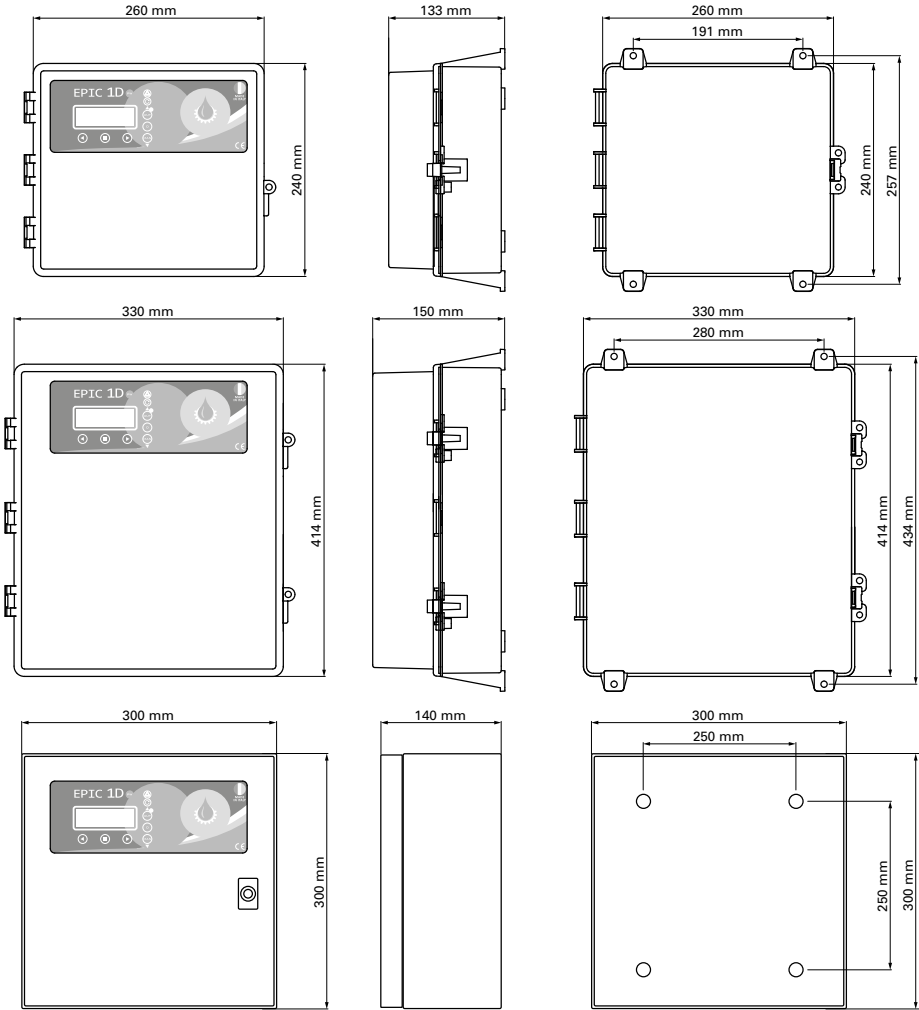


3.2 ELECTRICAL CONNECTIONS

EPIC 1D 230

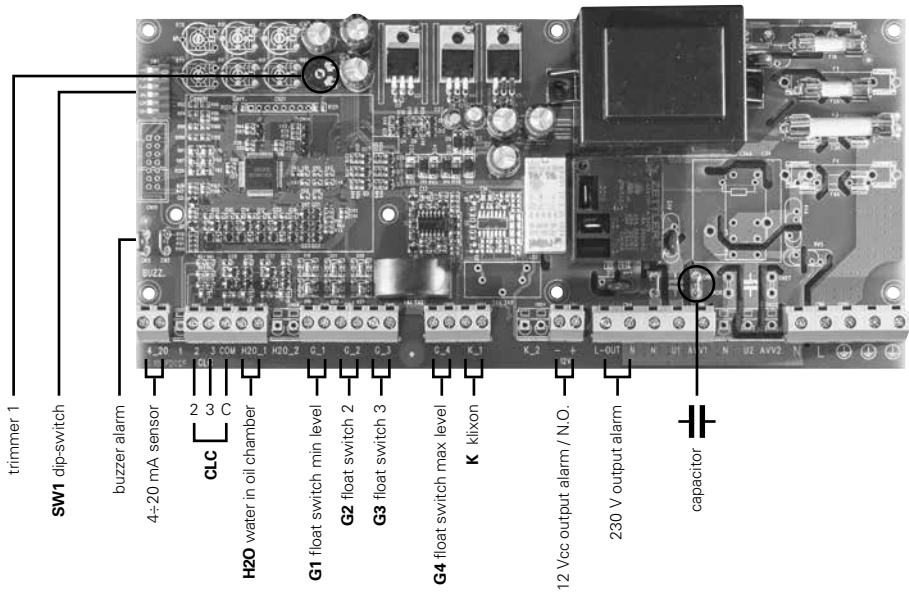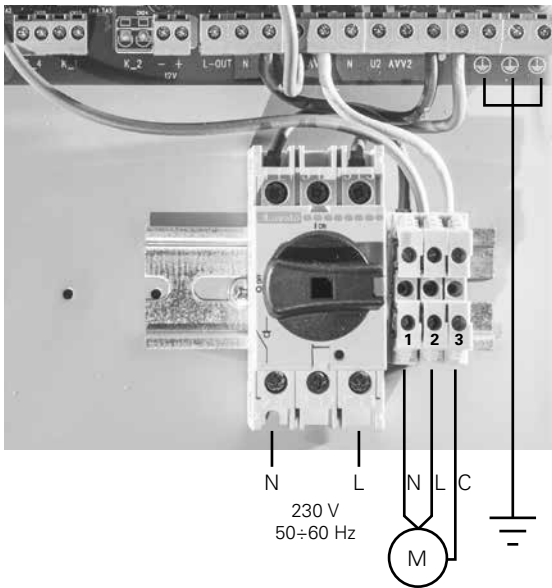


EPIC 1D 400

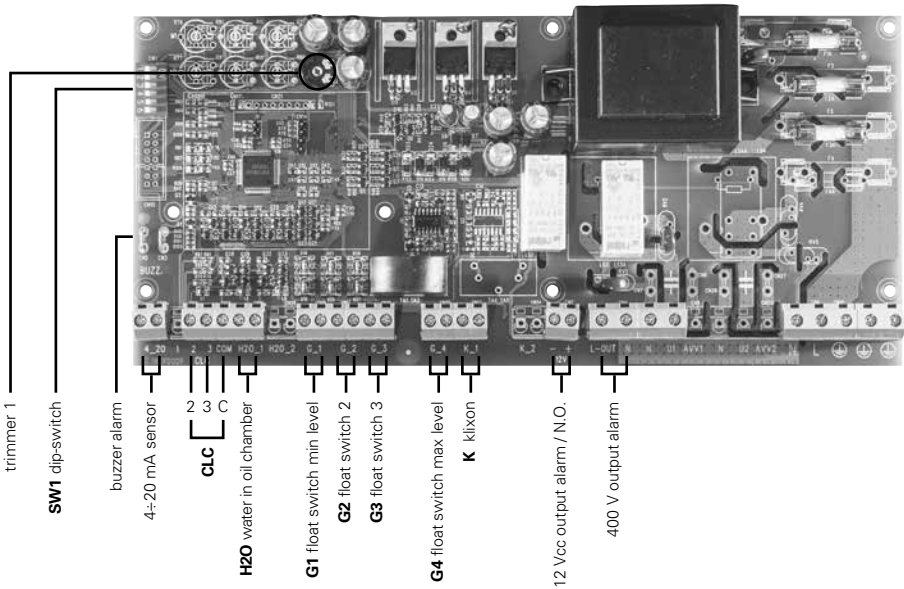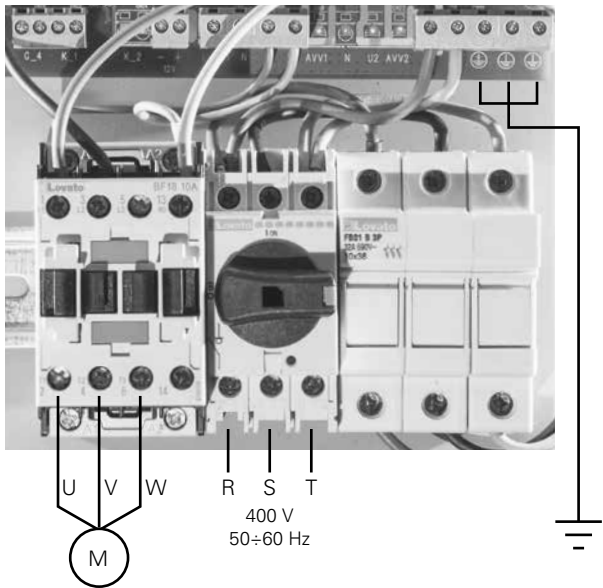

3.3 ADJUSTMENTS AND SETTINGS (INITIALIZATION)

CONTROL PANEL TURN ON

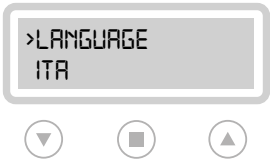


After making all the electrical connections, switch on the control panel and wait for the initial message to appear on the display.

LANGUAGE SETTING (OBLIGATORY)



Select the display language by scrolling the menu with the appropriate arrows (step 1 and 2). When completed, press the confirm button (step 3) to continue.

PUMP TRIGGER

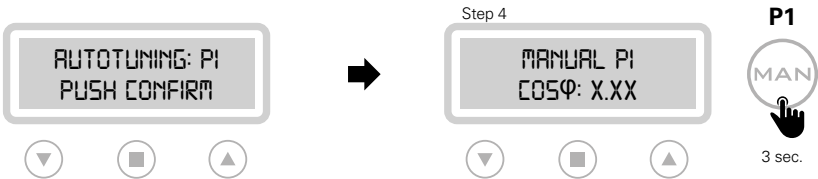

To proceed with self-learning procedure, the pump must first be triggered. **Do not press confirm**, but start the pumps, keeping the “MAN” button pressed (for 3 sec.).

AUTOTUNING (OBLIGATORY)



To start the self-learning of the pump data, type reply (step 5).

For the final confirmation of the data (step 7) type “YES”, or enter “NO” to go back (to step 5).



Before starting the self-learning procedure, it is necessary to check with a tester that the mains voltage corresponds to the nominal one or at least to the mains voltage.



IMPORTANT!
After pressing the final confirmation button, self-learning is no longer possible. To perform the self-learning again it is necessary to access the advanced menu (3.4).

CONTROL PANEL OPERATIVITY



Once the self-learning phase is completed, the display of the panel displays the data learned.


By pressing the “AUT” P1 button the panel becomes operational.

PRESET PARAMETERS

LANGUAGE: selected	STOP DELAY: 1 sec.
TURN ON DELAY: 2 sec.	OPERATION: emptying
MANUAL KEY: unstable	TYPE: potable
START DELAY: 4 sec.	SELF HOLDING: on

3.4 ADJUSTMENTS AND SETTINGS (ADVANCED MENU)

ACCESS TO ADVANCED MENU

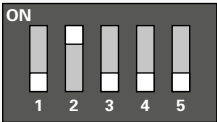

ON

1 2 3 4 5

DIP-SWITCH 2

The control panel is set as standard with the dip-switch 2 in the “OFF” position. To access the “ADVANCED MENU” and modify the various parameters, **switch off the control panel and set dip-switch 2 to “ON”**. Then turn the control panel back on to display the message on the “ADVANCED MENU” on the display.




SETTING
PARAMETERS [OK]


SETTING PARAMETERS

To access the advanced menu and set the various parameters, enter confirmation. On the display will appear in cascade all the fuctions. To enter each individual function, select it with the arrows and enter the confirmation button.

EXIT	M06 PROGRAM
M01 UTILITY	M07 SENSOR
M02 GENERAL	M08 TIMER
M03 NET CONTROL	EXIT
M04 PUMP 1	

CONFIRM MODIFICATIONS AND EXIT FROM ADVANCED MENU (EXAMPLE)

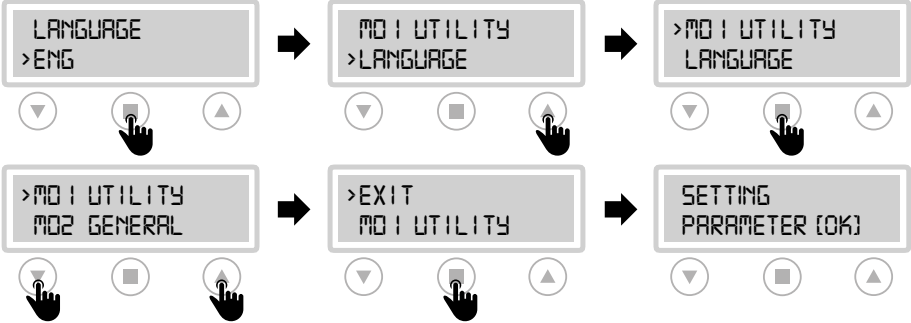

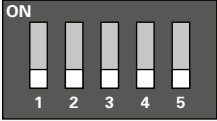

ON

1 2 3 4 5

DIP-SWITCH 2

Once the setting of the various parameters has been confirmed (for example the LANGUAGE parameter), to exit the “ADVANCED MENU” **bring the dip-switch 2 back to the “OFF” position**.

M01 UTILITY

ACCESS TO FUNCTION

>M01 UTILITY
M02 GENERAL

▼

■

▲

MODIFIED PARAMETERS

LANGUAGE (default: as selected)
Language selection

START DELAY (default: 2 sec.)
Control panel switch-on delay after restart (in sec.)

MANUAL KEYPAD (default: OFF)
Possibility of operating the "MAN" button in stable or unstable mode (ON: stable / OFF: unstable)

MAX LEVEL ALARM DELAY (default: OFF)
Possibility to delay 15 minutes. (not modifiable) the maximum level alarm. The display will show the alarm and the pump will start (if available), only the alarm relay and the buzzer will be delayed.

CHANGE LANGUAGE

>M01 UTILITA'
>LINGUA

▼

■

▲

→

>LINGUA
ITA

▼

■

▲

→

LINGUA
>ITA

▼

■

▲

→

LINGUA
>ENG

▼

■

▲

→

>M01 UTILITY
>LANGUAGE

▼

■

▲

→

>EXIT

▼

■

▲

CHANGE START DELAY

>M01 UTILITY
>START DELAY

▼

■

▲

→

>START DELAY
002 SEC

▼

■

▲

→

START DELAY
>002 SEC

▼

■

▲

→

START DELAY
>102 SEC

▼

■

▲

→

>M01 UTILITY
>START DELAY

▼

■

▲

→

>EXIT


▼

■

▲

11


CHANGE “MAN” BUTTON (STABLE/UNSTABLE)

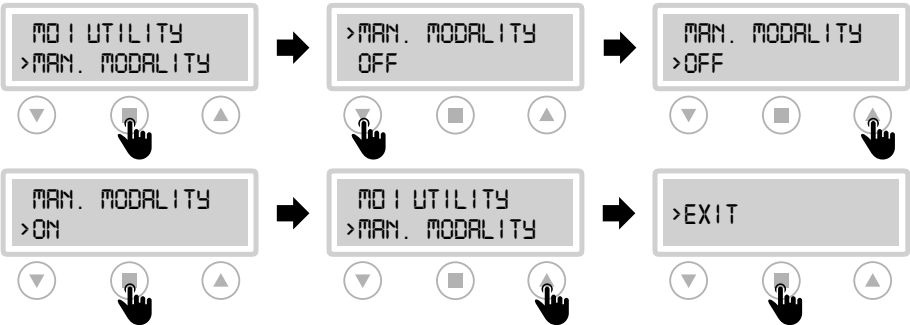

CHANGE MAX LEVEL ALARM DELAY



M02 GENERAL

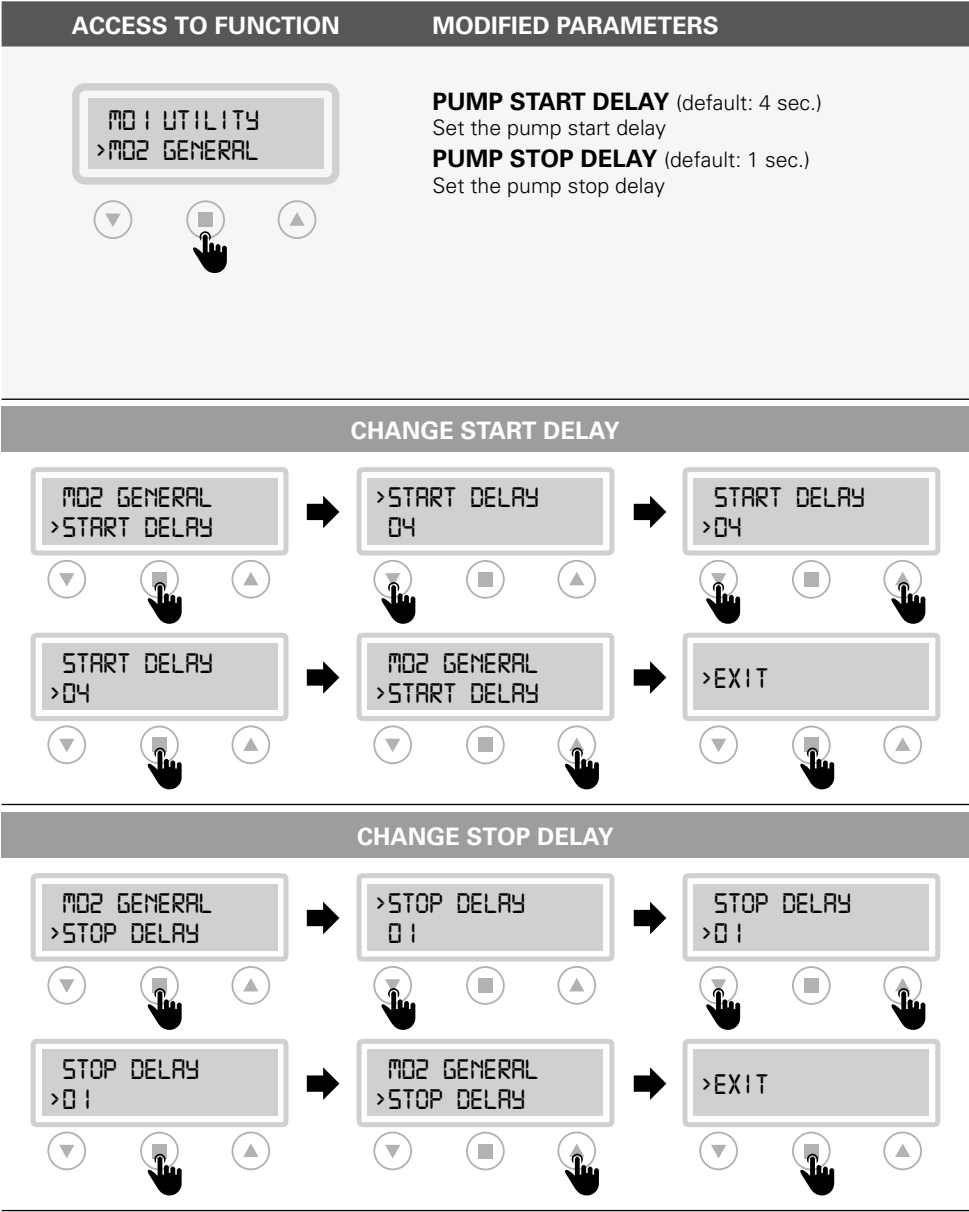

M03 NET CONTROL

ACCESS TO FUNCTION

MOD2 GENERAL
>MOD3 NET CONTROL

▼

■

▲

MODIFIED PARAMETERS

NOMINAL VOLTAGE (default: autotuning read)
Set the nominal voltage


MINIMUM VOLTAGE (default: 90%)
Set the minimum voltage

MAXIMUM VOLTAGE (default: 110%)
Set the maximum voltage


NOMINAL FREQUENCY (default: autotuning read)
Set the nominal frequency

FREQUENCY RANGE (default: 10%)
Set the frequency range


CHANGE NOMINAL VOLTAGE

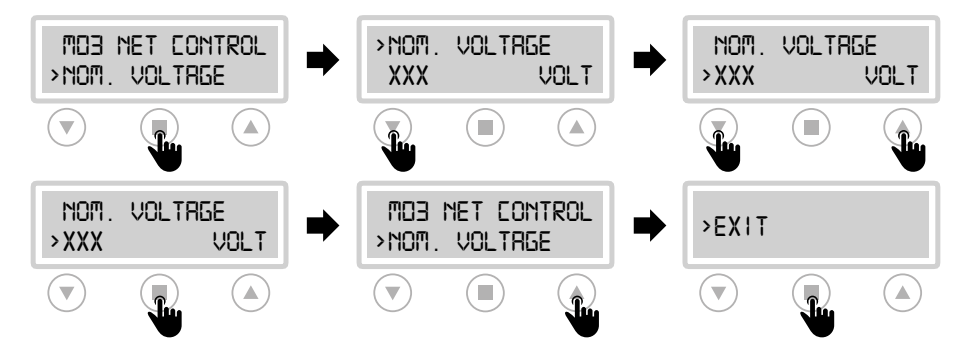


CHANGE MINIMUM VOLTAGE

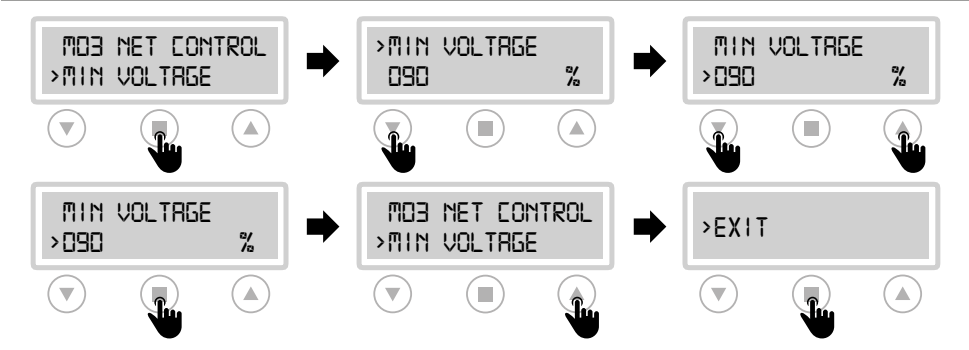

CHANGE MAXIMUM VOLTAGE

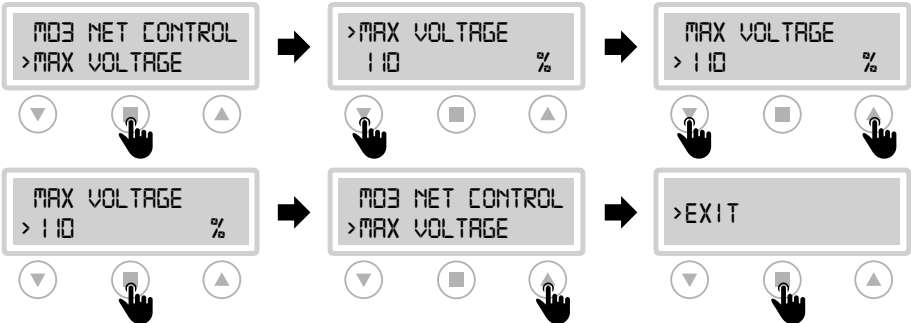

CHANGE NOMINAL FREQUENCY

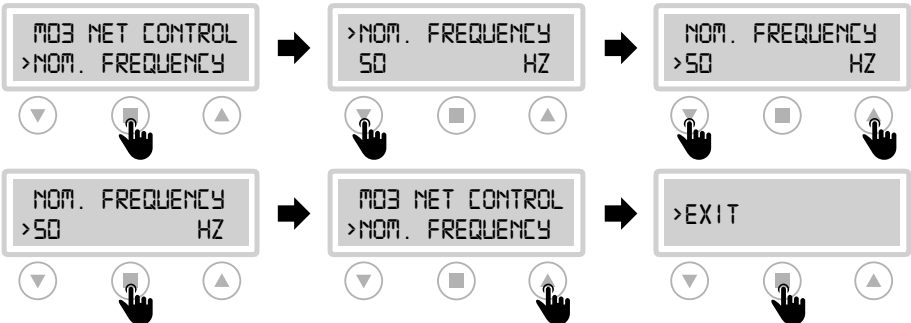

CHANGE FREQUENCY RANGE



M04 PUMP 1

ACCESS TO FUNCTION

>M04 PUMP 1
M06 PROGRAM

▼

■

▲

The amperage value and cosφ shown on the display may differ ±5% from the nominal value of the pump (nameplate data) since the control panel is not a measuring instrument. The same value may differ depending on the operating conditions of the installation.

MODIFIED PARAMETERS

AUTOTUNING

It allows the self-learning of the data to be carried out again

NOMINAL CURRENT (default: autotuning read)
Set nominal/operating current of the pump

MINIMUM AMPERAGE (default: 85%)
Current setting min. for dry running protection

MAXIMUM AMPERAGE (default: 130%)
Max current setting for overcurrent protection

START PER HOUR (default: 30)
Set max number of pump starts per hour

MIN COSφ (default: 75% of value read in autotuning)
Set min. cosφ for dry running protection

AUTOTUNING

M04 PUMP 1
>AUTOTUNING

▼

■

▲

→

>AUTOTUNING
ON

▼

■

▲

→

AUTOTUNING
>ON

▼

■

▲

→

AUTOSET: P 1
XXXV XXA 095

▼

■

▲

→

M04 PUMP 1
>AUTOTUNING

▼

■

▲

→

>EXIT

▼

■

▲

CHANGE NOMINAL CURRENT

M04 PUMP 1
>NOM. CURRENT

▼

■

▲

→

>NOM. CURRENT
000.1

▼

■

▲

→

NOM. CURRENT
>000.0

▼

■

▲

→

NOM. CURRENT
>XXX.X

▼

■

▲

→

M04 PUMP 1
>NOM. CURRENT

▼

■

▲

→


>EXIT

▼


■

▲


CHANGE MINIMUM AMPERAGE

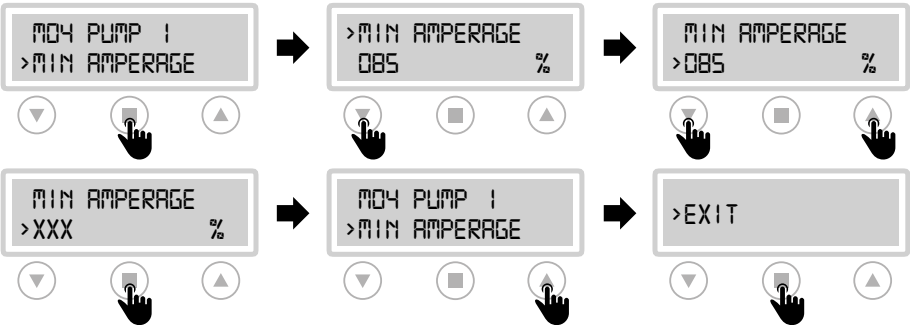


CHANGE MAXIMUM AMPERAGE

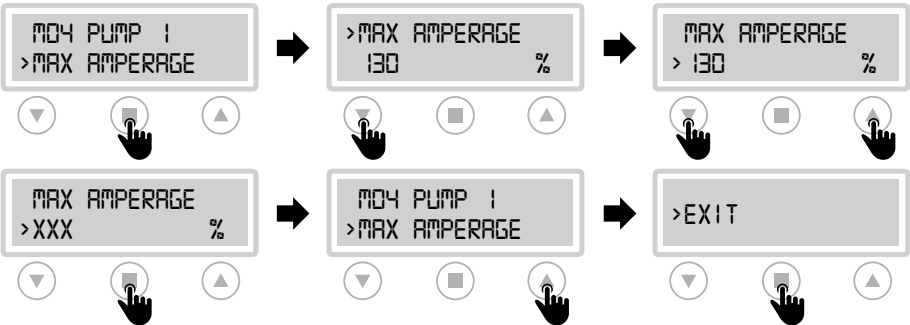

CHANGE START PER HOUR

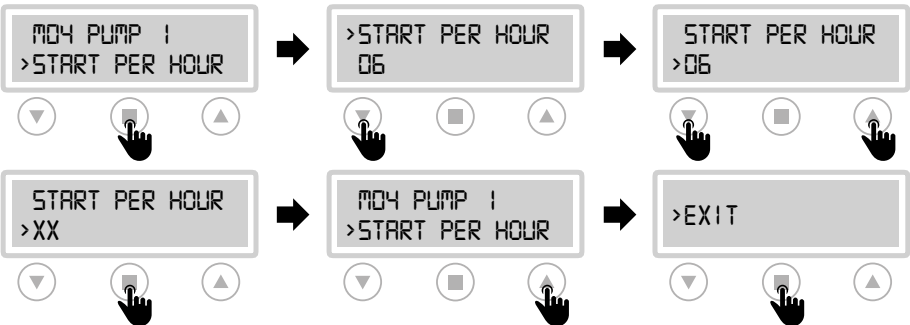

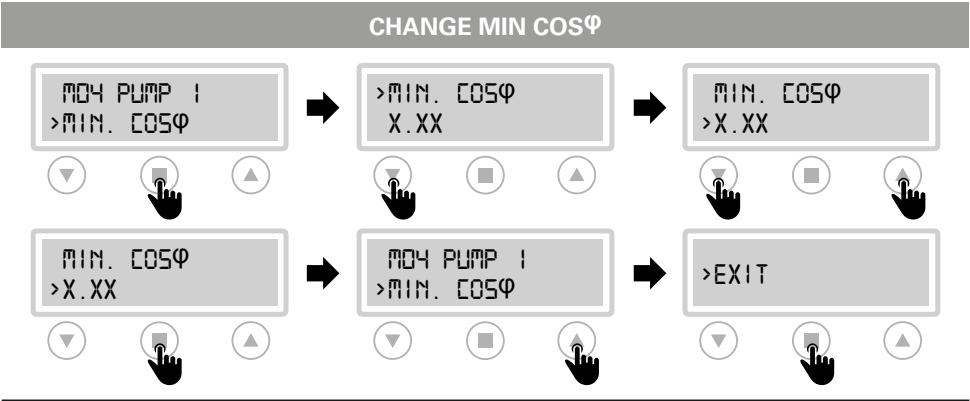

M06 PROGRAM

ACCESS TO FUNCTION

MOD4 PUMP 1
>M06 PROGRAM

▼

■

▲

For "waste water" type, only "EMPTY" function is available.

SELF HOLDING OPERATION (WASTE WATER)
When "self holding" is on and "waste water" selected, the float G1 is the STOP for both pumps (P1-P2). Consequently G2 and G3 floats in only starts

MODIFIED PARAMETERS

OPERATION (default: EMPTY)
Emptying selection "EMPTY" or filling "FILL"

TYPE (default: POTABLE)
Selection between clear (potable) and waste water

SELF HOLDING (default: ON)
Possibility to carry out a rapid emptying of the tank, mostly used for waste water applications

BMS (remote emergency start/stop) (default: OFF)
Possibility to start/stop the panel by remote button. The use of "BMS" function works thanks to G4 input (closed contact: pumps enabled / contact open: pumps disabled)

OPERATION (EMPTY/FILL)

MOD6 PROGRAM
>OPERATION

▼

■

▲

→

>OPERATION
EMPTY

▼

■

▲

→

OPERATION
>EMPTY

▼

■

▲

OPERATION
>FILL

▼

■

▲

→

MOD6 PROGRAM
>OPERATION

▼

■

▲

→

>EXIT

▼

■

▲

TYPE (POTABLE/WASTE WATER)

MOD6 PROGRAM
>TYPE

▼

■

▲

→

>TYPE
POTABLE

▼

■

▲

→

TYPE
>POTABLE

▼

■

▲

TYPE
>WASTE

▼

■

▲

→

MOD6 PROGRAM
>TYPE

▼

■

▲

→


>EXIT

▼

■

▲

19

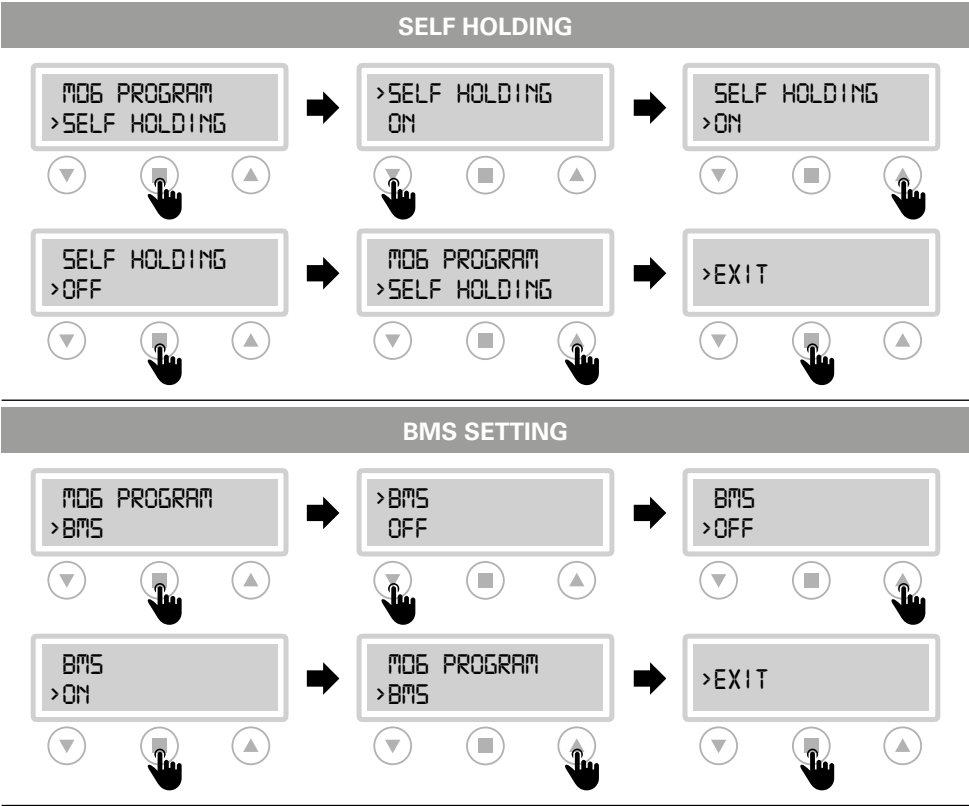

M07 SENSOR (sensor/trasducer 4÷20 mA)

ACCESS TO FUNCTION

MOD6 PROGRAM
>M07 SENSOR

▼

■

▲

The “SENSOR” function allows to use the control panel with piezoresistive, piezocapacitive level sensors or pressure transducers (logic 4÷20 mA).

Only for level sensor (mt): to have the level 0 mt perform the self-calibration of the pump 1 (see page 16) with the sensor out of the water.

MODIFIED PARAMETERS

PARAMETERS (default: OFF)
Setting unit of measure (mt/bar/celsius)

FULL SCALE (default: 160.0)
Set the full scale value specified by the manufacturer of the sensor used (serial value 160.0)

MINIMUM LEVEL (default: 5.0)
Parameter active only with unit of measure in mt

MAXIMUM LEVEL (default: 100.0)
Parameter active only with unit of measure in mt

START P1 and STOP P1 (default: 10.0÷20.0)

ATTENTION: Switch off the control panel before connecting the sensor.

SET PARAMETERS


The flowchart illustrates the steps to set parameters. It starts with a screen showing 'M07 SENSOR' and '>PARAMETERS'. Pressing the center button leads to a screen with '>PARAMETERS' and 'OFF'. Pressing the right arrow button leads to a screen with 'PARAMETERS' and '>OFF MT/BAR/CELS'. Pressing the center button leads to a screen with 'PARAMETERS' and '>XXX'. Pressing the center button leads to a screen with 'M07 SENSOR' and '>PARAMETERS'. Pressing the right arrow button leads to a screen with '>EXIT'. Pressing the center button leads to the next section.

SET FULL SCALE


The flowchart illustrates the steps to set the full scale. It starts with a screen showing 'M07 SENSOR' and '>FULL SCALE'. Pressing the center button leads to a screen with '>FULL SCALE' and '160.0'. Pressing the right arrow button leads to a screen with 'FULL SCALE' and '> 160.0'. Pressing the center button leads to a screen with 'FULL SCALE' and '> 160.0'. Pressing the center button leads to a screen with 'M07 SENSOR' and '>FULL SCALE'. Pressing the right arrow button leads to a screen with '>EXIT'. Pressing the center button leads to the next section.

21


SET MINIMUM LEVEL

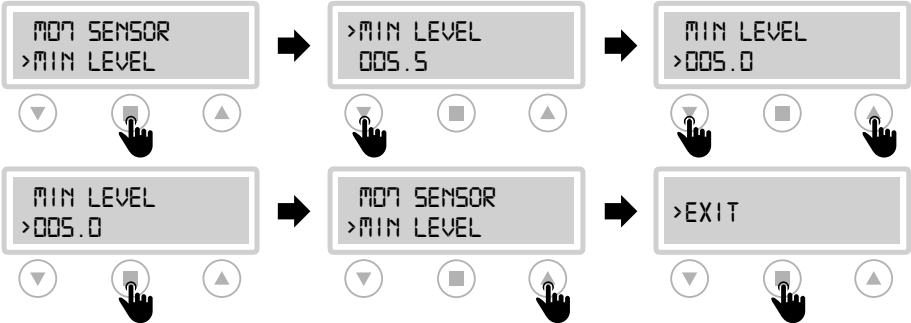


SET MAXIMUM LEVEL

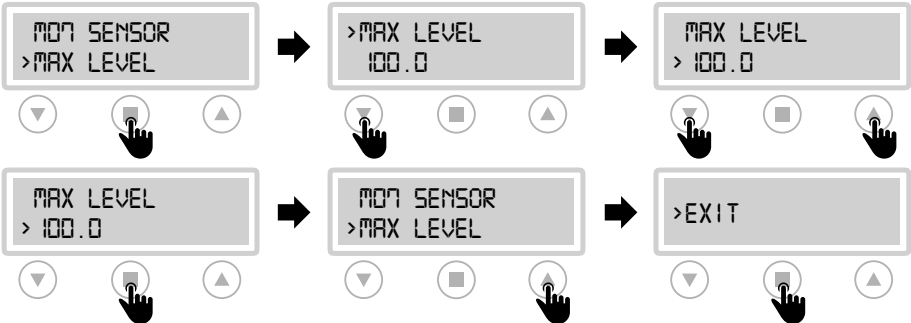

PUMP 1 START

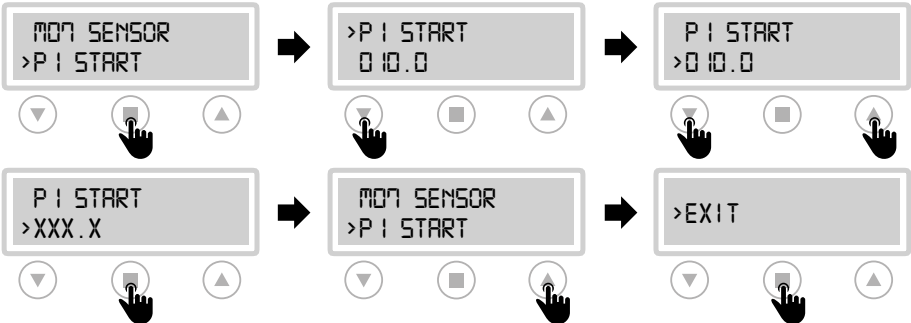

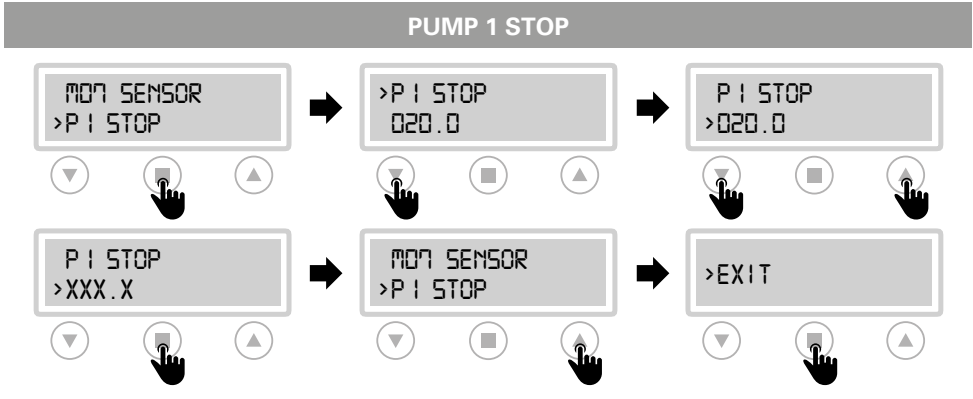

IMPORTANT!


For the mt and celsius parameters you can select the “FILL” and “EMPTY” programs (see page 19)


- FILL: START value < STOP value
- EMPTY: START value > STOP value

For the bar parameter can be selected only the “EMPTY” program

- EMPTY: START value < STOP value

M08 TIMER

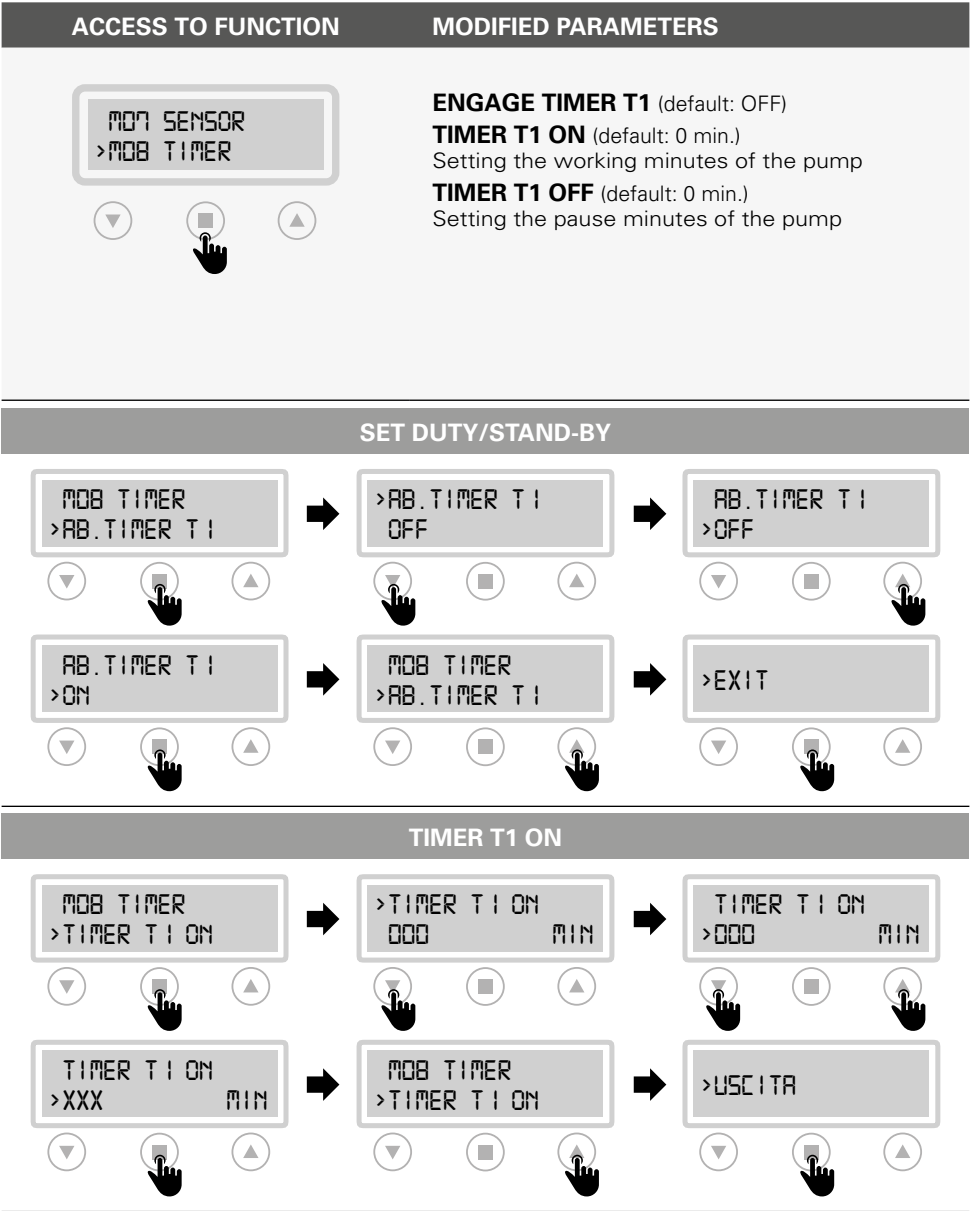

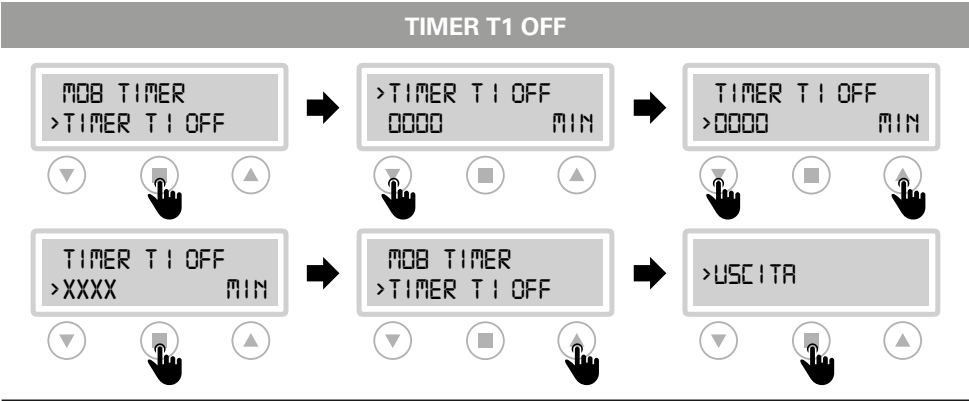


3.5 TRIMMER SETTINGS

To change manually CLC sensitivity and water in the oil chamber, **interrupt the power supply to the control panel** and work on the trimmers, please following the below instructions:





PROTECTION DELAY
The pump protection switching delay has been set at **5 sec.**

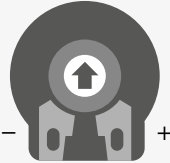TRIMMER SETTING	
	TRIMMER 1: PROBE SENSITIVITY CHANGE Probe sensitivity (CLC) and water in oil chamber sensor trimmer regulation. It is possible to change the sensitivity of the CLC probes and the water sensor in the oil chamber, interrupting the power supply to the control panel and acting on trimmer 1 (clockwise to increase and counterclockwise to decrease sensitivity).

3.6 ALARM CONTACT OUTPUTS

SINGLE PHASE VERSION	TREE PHASE VERSION
Alarm outputs: • L-OUT / N = 230 V c.a. • + -12 / NO = 12V c.c. or contact NO	Alarm outputs: • L-OUT / N = 400 V c.a. • + -12 / NO = 12V c.c. or contact NO

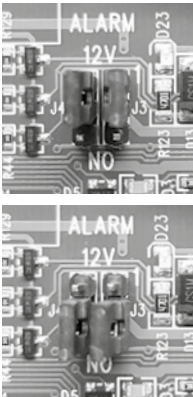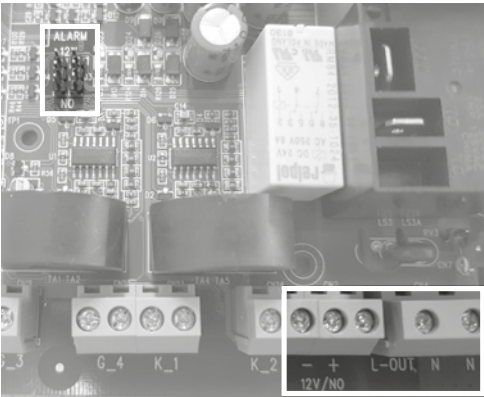

12 V c.c. output

free contact NO

4.1 KEYPAD AND LIGHTS INDICATIONS



CONTROL PANEL	
	PW blue light indicating power network presence and powered panel.
	ALARM red light to indicate a general alarm and pump stop. (min and max Amp, min and max V, min and max level, motor klaxon, water in oil chamber, phase failure, max starts par hour).
	START green light to indicate pump start; fixed on to indicate pump running, flashing to indicate auto-setting mode.
	AUT the button activates the auto-setting mode and automatic pump (if the green light is on, the automatic mode is active).
	0 pump stop button and reset alarms, sound alarm turn-off.
	MAN activation of manual pump; holding it down, the engine is operated in by-pass mode, bypassing all the protections.

4.2 ALARMS

The control panel signals a series of alarms that may occur during operation. Some of these stop the pumps, while others are only displayed.

All alarms are displayed on the panel (red led flashing), while the display shows the code/alarms occurred until the cancellation by the operator.

ALARM CODE	ALARM DESCRIPTION	PUMP STOP	RELAY ON	LED SIGNAL
AL 1	MIN VOLTAGE	YES	YES	
AL 2	MAX VOLTAGE	YES	YES	
AL 3	LOW FREQUENCY	NO	YES	
AL 4	HIGH FREQUENCY	NO	YES	
AL 5	DRY RUNNING P1	YES	YES	
AL 6	MAX AMPERAGE P1	YES	YES	
AL 7	MAX STAR PER HOUR	NO	YES	
AL 8	WATER IN OIL CHAMBER P1	NO	YES	
AL 9	KLIXON P1	YES	YES	
AL 10	MIN LEVEL	YES	YES	
AL 11	MAX LEVEL	NO	YES	

 The alarm “AL 11” starts all the available pumps.

ALARM WITH STOP PUMP



Following the detection of an electrical alarm and the consequent blocking of the pump, the control panel does the following operations:

- After 30 minutes try to restart the pump
- In case of a negative feedback, it makes further attempts every 30 minutes

N.B.: Restart attempts will be made only if the panel receives the start consent from the connected inputs.

DELETE ALARM

P1



To delete an alarm (for example dry run), press the pump (P1) button "0" as follows:

- the first press of the "0" button removes only the voltage from the buzzer terminals ("mute" function)
- the second press of the "0" button reset the alarm.

If the alarm is not reset (by pressing the "0" key twice), at the next alarm signal, the panel will remain in "mute" mode.




IMPORTANT!


If after having canceled the alarm, the same occurs again, an intervention on the cause is necessary.

4.3 TYPICAL INSTALLATIONS


Picture 1

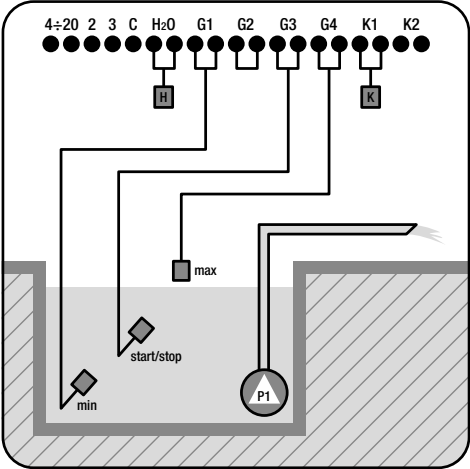


Picture 2

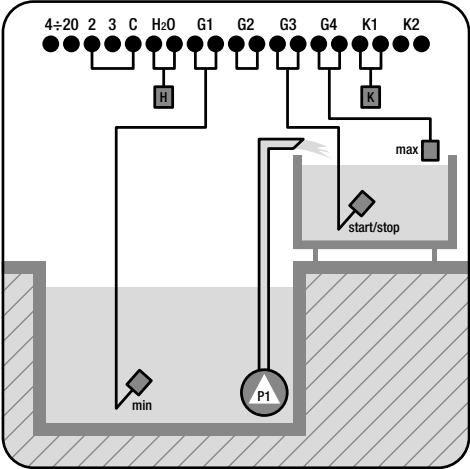

Picture 3

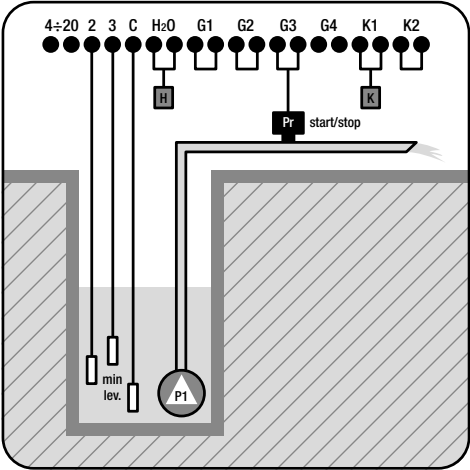


Picture 4

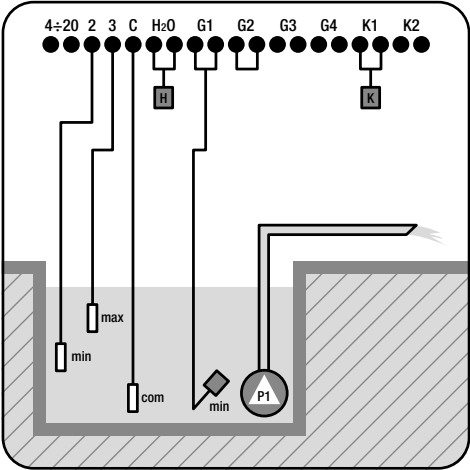


4÷20	input for 4÷20 mA sensor or pressure transducer	
2/3/C	input for level probes	
H	input for water in oil chamber sensor/water leakage	
K	input for motor klixon	
Pr	pressure switch	P pump

T	pressure transducer	
■	float switch for clear water	
●	float switch for waste water	
□	level probes	
■	4÷20 mA piezoresistive sensor	


Picture 5

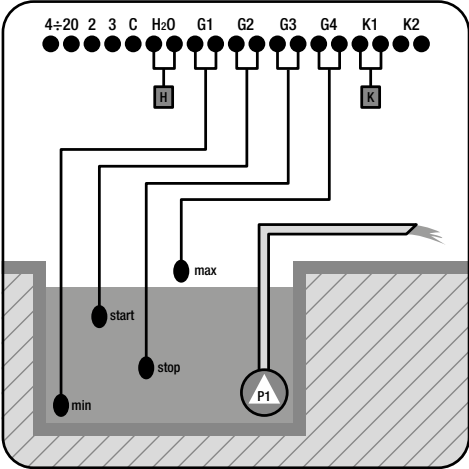


Picture 6

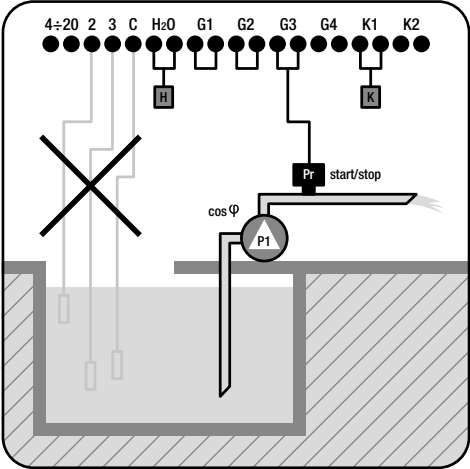

Picture 7

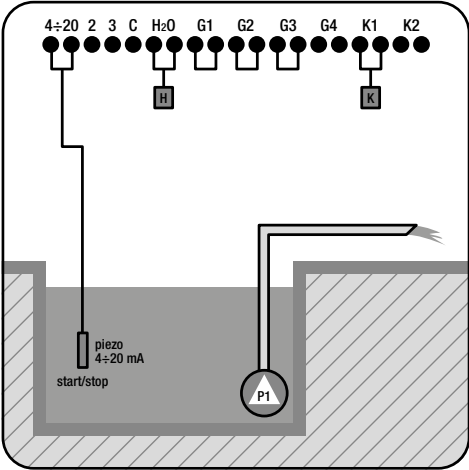

Picture 8

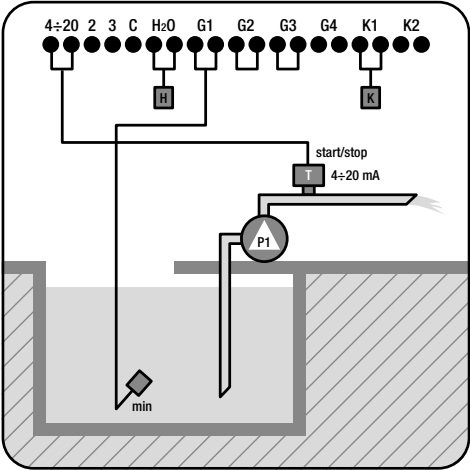

4÷20	input for 4÷20 mA sensor or pressure transducer
2/3/C	input for level probes
H	input for water in oil chamber sensor/water leakage
K	input for motor klixon
Pr	pressure switch
P	pump

T	pressure transducer
H	float switch for clear water
K	float switch for waste water
2/3/C	level probes
4÷20	4÷20 mA piezoresistive sensor

5.1 PUMP STOP

MODE	BUTTON	STOP
MANUAL		The motor stops when the “MANUAL” button is released or once you digit the 0 button.
AUTOMATIC		When the input commands are disable/non active once you digit the 0 button.
OFF		Turning the main switch interlocking door in “OFF” position.

5.2 SERVICE

EPIC 1D does not require any routine maintenance provided that their working limits are observed. Any maintenance operations must be performed by qualified and experienced personnel, in compliance with the safety regulations in force.



DANGER!
Make sure that EPIC 1D is disconnected from the power supply before performing any maintenance operations.

5.3 SPARE PARTS

Always state the exact model identification number and construction number when requesting technical information or spare parts from our sales and service centre.

Use only original spare parts when replacing any faulty components. The use of unsuitable spare parts can cause malfunctions, personal injury and damage to property.

5.4 WASTE DISPOSAL

After the control panel has been installed and started, the customer must provide for the appropriate elimination/disposal of the waste materials according to the legislation locally in force. If the control panel or parts of it must be taken out of service and dismantled, follow local regulations regarding sorted waste disposal. Refer to the appropriate recycling centres.



CAUTION!
Contamination of the environment with hazardous substances such as battery acid, fuel, oil, plastic, copper, etc., may cause serious damage to the environment and endanger people's health.

6.1 CERTIFICATE OF CONFORMITY

The Manufacturer:

Atlantic Power Control S.r.l.s

Via E. Fermi, 10 - 35020 Polverara (PD) - ITALY

**DECLARES UNDER IS OWN RESPONSIBILITY
THAT THE FOLLOWINGS CONTROL PANELS:**

EPIC 1D -230 e EPIC 1D -400

**ARE IN CONFORMITY
WITH COMMUNITY DIRECTIVES REGARDING:**

- European directive 2014/35/UE
- Electromagnetic compatibility directive 2014/30/UE



AND AS APPLICABLE TO HARMONIZED STANDARDS:

- EN 61439-1
- EN 61439-2
- EN 60204-1
- EN 55014-1
- EN 55014-2
- EN 61000-3-2
- EN 61000-3-3

CERTIFICATIONS



Moreover Mr. Giuseppe Franchin, as the legal representative of the company, is the person authorized to compile the technical documentation file.

Polverara - Italy, 10/01/2018

A handwritten signature in black ink, appearing to read 'Franchin Giuseppe'.

Technical Manager
(Giuseppe Franchin)

[illegible]

[illegible]



ATLANTIC POWER CONTROL S.r.l.s.

Via E. Fermi, 10
35020 Polverara (PD) Italy

Tel +39 0495855425

www.atlanticcontrol.com
info@atlanticcontrol.com



CERTIFIED
9001 - 14001
45001

