




Integrated intelligent toilet Operation instructions


Before installing and using this product, please carefully read the product manual and keep it properly for future reference.

The product description in this manual strives to be accurate. If there is any content error caused by technical updates or design layout, the actual product shall prevail without prior notice.

01/Packaging List

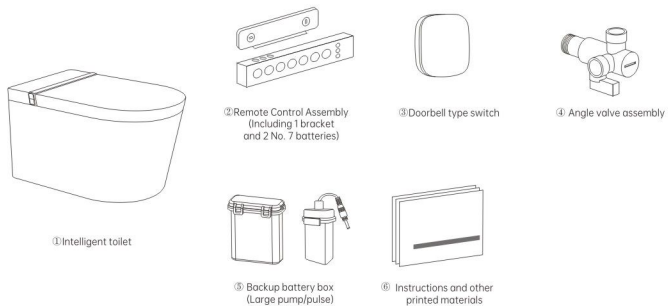


02/Component Introduction

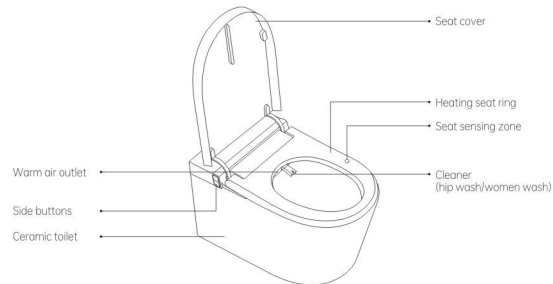

03/Product Installation


Confirmation of installation environment and specifications

1. Check if the distance between the sewage pipes and the flatness of the bathroom meet the installation requirements.
2. Check whether the water circuit, water supply pressure, and circuit system comply with the installation requirements.
3. In addition to ensuring the required space for installation, please pay attention to whether surrounding objects (doors, cabinets, etc.) interfere with the installation and functional use of the product (seat cover, seat ring opening and closing, etc.).
4. If there is a need to renovate waterways, circuits, etc., please seek professional assistance.

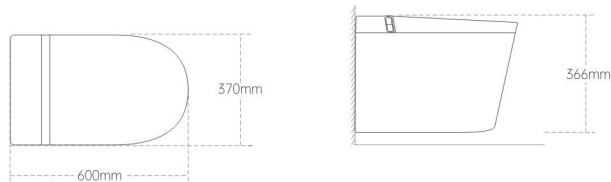

Reminder: The dimensions, accessories, user interface, etc. shown in this product are schematic diagrams for reference only. Due to product updates and upgrades, there may be slight differences between the actual product and the schematic diagram. Please prioritize the actual product.


Installation of water tank entering the wall

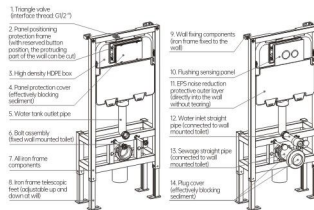

Align the panel positioning protection frame and panel protection cover with the position of the box, and then buckle them into the box, as shown in Figure ①.
Assembly and disassembly:
Installation: Push down the panel positioning protection frame until the left and right circles are raised.
Disassembly: Press the left and right circles of the box body while pushing the panel positioning protection frame upwards. As shown in Figure ②.



Tighten and fix the wall fixing angle iron, slotted bolts (2 each), outer hexagonal nuts, and flat washers (2 each) with the iron frame. As shown in Figure ①②.




Use a wrench to unscrew the iron frame screws (4) in reverse time, adjust the required height, and then tighten the screws (4) in clockwise direction. As shown in Figure ①②③④.



As shown in Figure ①, first remove the upper clamp of the sewage pipe, and then select an appropriate slot for the toilet sewage pipe to assemble with the lower clamp of the sewage pipe as shown in Figure ②.
Note: When assembling the toilet drain pipe and the sewage pipe, the excess part of the toilet drain pipe should be sawn off according to the actual situation.
 Snap the upper clip of the sewage pipe into the lower clip of the sewage pipe, as shown in Figure ③.




Screw out the nuts and washers at the slot of the two bolts as shown in Figure ①. Decorate the washers (Figure ②), washers (Figure 2), and nuts (Figure 3) as shown in Figure ③, and turn them into the slot of the two bolts.
Slot bolts are sufficient. As shown in Figure ③, tighten and fix the bolt assembly onto the iron frame.
Note: According to the hole spacing of the toilet, choose an iron frame with a hole spacing of 180 or 230 for installation!

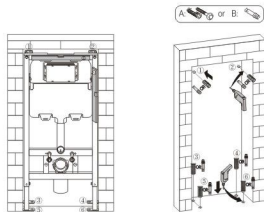


Place the entire iron frame into the excavated wall and draw the drilling positions for the expansion pipes (6). Before drawing the drilling position of the expansion pipe as shown in the figure ①, ②, ③, ④, ⑤, ⑥, measure the iron frame with a flat water gauge (vertical and parallel) to ensure that it is accurate.


Drill holes (6 pieces) with a drill bit and insert expansion pipes (6 pieces) into the holes.

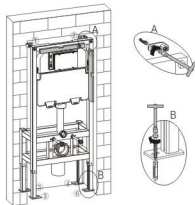

Use a T-shaped wrench to tighten the flange self tapping screws (2) and the wall fixing angle iron (2), as shown in the figure ① and ②. Tighten and fix the flange self tapping screws (4), as shown in the figure ③, ④, ⑤, ⑥. After fixing the iron frame, make sure to measure it with a flat water gauge (vertical and parallel).




Remove the small plug cover of the inlet straight pipe component as shown in Figure ①, install the small plug cover into the L pipe of the water tank as shown in Figure ②, install the large plug cover into the toilet drain pipe as shown in Figure ③, and install the two decorative covers into the bolt components on both sides as shown in Figure ④.



After filling the gaps in the wall and applying tiles, remove the panel protective cover.
Cut off the excess part of the panel positioning protection frame with an art knife.




Remove the protective cover of the triangular valve outside the water tank as shown in Figure ①. Tighten the valve core rod of the triangular valve inside the water tank in a clockwise manner (close the water inlet) as shown in Figure ②. Connect the inlet pipe to the triangular valve outside the water tank in a clockwise manner as shown in Figure ③.
As shown in Figure ④, unscrew the valve core rod of the triangular valve in the water tank counterclockwise (open the water inlet and screw it in place).
Note: The screw thread of the triangle valve interface is G3/2", and after it is connected, fill the gap in the wall with ceramic tiles.

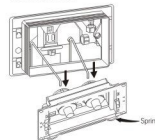


Install the two air pipes on the drainage valve inside the box onto the copper air needle connector at the main pneumatic control frame.
Note: The trachea must be inserted in place without crossing or twisting. The spring of the pneumatic main frame is facing downwards.



Align the pneumatic main frame with the panel positioning protection frame and install it, then insert the adjustable locking rod into the hole. Installation: Tighten clockwise. Disassembly: Loosen the adjustable locking rod counterclockwise.



Installation: Align the flushing button panel with the position of the pneumatic main frame, as shown in Figure ①. After aligning the position, push the flush button panel upwards, as shown in Figure ②. Press inward again and install it in place, as shown in Figure ③.
Dismantling: Push and press the flush button panel upwards while pulling it outward.
Note: The large keys on the panel are the left full row keys, while the small ones are the right half row keys.

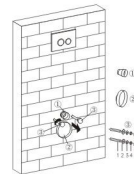

1. Remove the small plug and the large plug as shown in Figures ① and ②.
2. Remove the sleeve (Figure ①), decorative gasket (Figure 2), gasket (Figure 3), nut (Figure 4), and bolt decorative sleeve (Figure 5) at the two symmetrical bolts, as shown in Figure ③. Note: Install the removed accessories as shown in Figure ③ to fix the toilet for installation!

Wall mounted toilet installation



Insert the toilet water inlet straight pipe into the water tank L pipe attached to the tiled wall as shown in Figure 10. Insert the toilet drain straight pipe into the toilet drain pipe on the tiled wall as shown in Figure 11. Note: Make sure to insert it in place!




Block the water inlet pipe of the toilet with a vertical wooden board in an appropriate position and draw a line with a pencil. After the line is drawn, it needs to be pulled out, as shown in Figure 12. Block the toilet drain pipe with a vertical wooden board in an appropriate position and draw a line with a pencil. After the line is drawn, it needs to be pulled out, as shown in Figure 13.




Insert the toilet water inlet straight pipe and toilet water inlet ring into the wall-mounted toilet water inlet as shown in Figure 14. Insert the toilet drain straight pipe and rubber ring into the wall-mounted toilet drain outlet as shown in Figure 15. Note: Make sure to insert it in place!




Block the straight pipe of the toilet with a vertical wooden board in an appropriate position and draw a line with a pencil. After the line is drawn, it needs to be pulled out, as shown in Figure 12. Block the toilet drain pipe with a vertical wooden board in an appropriate position and draw a line with a pencil. After the line is drawn, it needs to be pulled out, as shown in Figure 13.




After drawing the assembly line of the toilet water inlet straight pipe, the water tank L pipe, and the wall-mounted toilet water inlet, mark the actual size (which is the excess part), as shown in Figure 14. After drawing the assembly line between the toilet drain straight pipe and the toilet drain pipe and the wall-mounted toilet drain outlet, mark the actual size (which is the excess part), as shown in Figure 15.



Move the excess part of the middle size of the toilet inlet straight pipe to the edge, add 4mm before sawing it off, as shown in Figure 16. Move the excess part of the middle size of the toilet drain pipe to the edge, add 5mm before sawing it off, as shown in Figure 17.



Use a file to evenly chamfer the edge of the water inlet straight pipe of the toilet, as shown in Figure 18. Use a file to chamfer the edge of the toilet drain pipe evenly, as shown in Figure 19.




Apply appropriate silicone oil to the sealing ring of the water tank L pipe as shown in Figure 20, the drainage pipe rubber ring as shown in Figure 21, the toilet inlet straight pipe as shown in Figure 22, and the toilet discharge straight pipe as shown in Figure 23.



Measure the actual size of position d of the toilet as shown in Figure 24. Install one bolt on each side into the toilet and add 25mm after measuring the size, as shown in Figure 25.



Insert the toilet water inlet straight pipe and toilet water inlet ring into the wall-mounted toilet water inlet as shown in Figure 26. Insert the toilet drain straight pipe into the toilet drain pipe opening on the wall as shown in Figure 27. Note: Make sure to insert it in place!




Align the bolts on both sides with the toilet installation holes, align the toilet inlet straight pipe with the water tank L pipe, align the toilet drain straight pipe and rubber ring with the toilet drain outlet, and then insert them, ensuring that they are inserted in place.



Decorative gaskets (as shown in Figure 28), gaskets (as shown in Figure 29), nuts (as shown in Figure 30), bolt decorative sleeves (as shown in Figure 31), and two bolts each can be installed on both sides. Make sure to measure the toilet with a flat water ruler (parallel).

Open the angle valve for water supply

- Connect the 4-minute water inlet pipe after removing the toilet to the corner valve and tighten it for reinforcement.
- Turn the water supply angle valve to the left and open it to confirm that there is no water leakage/seepage at the connection. If there is any water leakage, please reinstall the component.

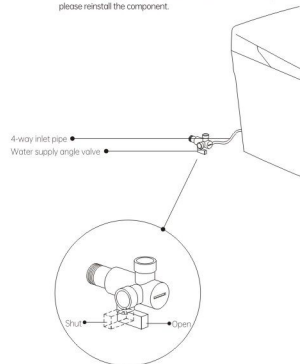

Activate the toilet

- Insert the power plug into the 220V waterproof socket; Confirm that the socket is connected to the power supply and grounded. Press the reset button to start the toilet and confirm that the plug indicator light is on.

Toilet testing machine

- After the toilet is started normally, check whether all functions are working properly. Activating the flushing function is to check for normal operation.
- Check if the cleaning/drying functions are functioning properly after pressing against the toilet seat sensing area.
- Press the various buttons on the remote control to confirm whether it can start and stop the remote control normally.
- Press the remote control button and there is no response. Please reconnect and refer to "Remote Control Code Matching (Page 10)" for the connection method.

Fixed toilet

- After confirming that all functions of the toilet are working properly, fill the uneven area with filling material to prevent the toilet from shaking.
- After confirming again that there are no foreign objects or water stains on the ground, use fixing tools such as a glass glue gun to apply fixing glue to the bottom of the toilet that comes into contact with the ground.
- Do not move or use the toilet within 48 hours after fixation.

04/Safety precautions

-This product is a Class I appliance. For your life and property safety, please carefully read and follow the following precautions.

-To prevent the danger of arbitrarily resetting the fuse, this product seals the fuse; it is prohibited to use fuses that do not meet the product specifications.

-The symbols and illustrations are as follows:

Warning: Improper handling of the product may result in user death or serious injury.

Attention: Improper handling of the product may result in user injury or material harm.

Prohibited: Indicates that it is not feasible or prohibited.

Compulsory: refers to mandatory compliance.



-Confirm whether this product is reliably grounded.

-When the power supply is not grounded, it may cause faults such as leakage and electric shock.

-Please seek assistance from the electrical company or electrical operators for work grounding.



-Prohibition of disassembly: Non after-sales maintenance personnel or designated professional maintenance personnel of our company are prohibited from disassembling, repairing, or modifying this product.

Otherwise, it may cause fire, electric shock, and other unexpected situations.

-Do not splash water: Do not add water or detergent to or wet the product body or power plug.

Otherwise, it may cause fire, electric shock, and other unexpected situations.

-Prohibited ignition: Do not approach or put lit cigarettes or combustibles into the product.

May cause fire, electric shock, and other unexpected situations.

-Do not touch with wet hands: Do not touch or unplug the power plug with wet hands.

Otherwise, it may cause electric shock and other unexpected situations.

-Prohibit the use of faulty products, otherwise it may cause fire or electric shock, and indoor water seepage.

Please unplug the power and close the water valve to terminate the water supply in the following situations:

-When the main body or water pipe leaks

-When there are cracks or damages on the product

-When there is abnormal noise or odor

-When the product emits smoke

-When the product is abnormally hot

When the seat ring or cover plate is damaged, please stop using it to avoid dangerous situations.

Please be sure to unplug the power plug, turn off the water source, and contact the dealer or after-sales service center.

Otherwise, electric shock and fire may occur.

-It is prohibited to use water sources other than tap water or drinkable water.

Otherwise, it may cause cystitis, dermatitis, and electric shock and fire caused by internal corrosion of the machinery.

-Do not bend or flatten the connecting water pipe.

Otherwise, it may cause water leakage, reduced water pressure, or no water output.

-It is prohibited to disassemble the water pipe while the water stop valve is open.

Otherwise, it may cause splashing, spraying, or leakage.

-It is prohibited to use loose, shaking or other defective power sockets.

Otherwise, it may lead to dangerous situations such as fire or electric shock.

-It is prohibited to exceed the specified specifications of the power supply or socket, and only 220V AC power can be used.

Otherwise, it can easily cause fire and electric shock.

-It is prohibited to arbitrarily pull, damage, forcibly bend and twist, stretch, curl, bundle, bear weight, excessively pinch or

damage the power plug and power cord.

Otherwise, damage to the power plug and power cord can lead to electric shock or fire.

-If the power cord is damaged, to avoid danger, maintenance and replacement must be carried out by the manufacturer,

after-sales service personnel, or professional repair personnel.

Otherwise, it can easily cause fire and electric shock.

-Prohibit use in lightning weather (please unplug the power plug when lightning strikes nearby).

Otherwise, it may cause accidents or malfunctions.

-Do not pour urine into the warm air outlet.

Otherwise, there is a risk of electric shock.

-It is prohibited to put fingers or other objects into or block the heating outlet. Do not cover the heating air outlet when using the product.


Otherwise, it may cause burns, electric shock, or burning of accessories.

-Except for feces and toilet paper, it is prohibited to discard any debris inside the toilet.

Otherwise, it may cause toilet blockage, sewage discharge, or indoor water seepage.

-It is prohibited to place heavy objects on the toilet cover of the toilet, and do not hit this product. Broken products may cause

personal injury, and broken toilets may cause problems such as room flooding.



-Do not use the "high" or "medium" range of seat temperature, heating/air temperature for a long time.

Otherwise, prolonged use may pose a risk of burns.

-When using the cleaning and drying functions, please keep the seat in a seated state, that is, the skin is tightly pressed

against the sensing area of the seat ring.

Otherwise, the product will stop cleaning or warm air drying function.

-Do not pour urine directly onto the product body or nozzle/cleaning tube.

Otherwise, dirt will be generated and cause blockage.

-Please use the new hose components that come with this machine. The old components cannot be reused. If other devices

for connecting water sources are randomly equipped, please replace them together.

Otherwise, it is easy to cause water leakage and property damage.

-Please do not use in bathrooms that are too damp or easily submerged in water. Avoid spraying water on this product or

rising it with water to prevent internal water ingress and damage.

Otherwise, it may cause electric shock and fire.

-When there is a sudden power outage, please unplug the power plug and close the corner valve to prevent water leakage.

Otherwise, it is easy to cause water leakage and property damage.

-Please avoid direct sunlight or heating equipment near this product.

Otherwise, it may cause discoloration of the product.

-To avoid danger caused by incorrect reset of the thermal circuit breaker, do not supply power through external switching

devices, such as timers or connect to circuits that are timed on and off by common components.

-When not in use for a long time, please be sure to unplug the power plug, turn off the water source, and drain the accumulated water inside the product.

Otherwise, damage caused by frozen internal water accumulation can lead to fire and water leakage.

-In cold winter, when the product is transported or stored for a long time, the remaining water inside the

product may freeze. To prevent damage caused by freezing, please take anti-freezing measures.

Otherwise, damage caused by frozen internal water accumulation can lead to fire and water leakage.

-In the same room or area where this product is installed, a water stop valve needs to be installed within reach, which can be used in emergency situations to cut off the water inlet of this product without the need for tools.

Otherwise, unexpected malfunctions of this product may result in user losses.

-Please do not embed cementitious materials (such as cement mortar) in the base of the toilet to prevent it from cracking due to expansion.

-Regularly unplug the power plug and wipe the dust off the power plug with a dry cloth.

Otherwise, when the insulation is poor, it can cause a fire.

-When cleaning and maintaining the toilet, do not use unsuitable cleaning agents such as concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon chloride, chloroform, acetone, butanone, benzene, toluene, phenol, cresol, dimethyl formamide, methyl ether, soybean oil, acetate, 40% nitric acid, concentrated hydrochloric acid, 95% alcohol, gasoline, kerosene, brake oil, etc.

Otherwise, it may cause cracking of the plastic part, or cause personal injury, electric shock, or fire.

-Do not lean back, stand on the cover plate, or roughly open or close the seat cover or seat ring to avoid damage.

Otherwise, it is easy to cause damage and personal injury.

-Please follow the following steps when using the battery.

Only batteries that comply with national regulations are allowed to be used. Improper use of batteries may invalidate safety protection and cause



-Individuals (including children) with physical, sensory, intellectual disabilities or a lack of experience and common sense should use it under the guidance of an adult.

-Children should be supervised to ensure that they do not play with this device. Otherwise, it may cause personal injury.

-Please help the following groups turn off or lower the temperature range when using the insulation seat ring/heating and drying function:

Children, elderly people, and others who cannot adjust their own temperature appropriately;

A group of people whose bodies are not free and unable to react autonomously;

People who may fall asleep after taking sleeping pills, getting drunk, or experiencing excessive fatigue.

-When installing/replacing the filter screen and filter, it is necessary to tighten them and close the water supply pipeline and angle valve.

Otherwise, it can easily cause water leakage.

-When the product leaks, please close the water valve to stop the water supply.

-It is prohibited to use this product in environments below 0 °C.

Otherwise, freezing may cause damage to the water pipe or main body, resulting in leakage or malfunction.

Maintenance and cleaning



This product is an electronic product, please be careful to prevent water from entering the interior of the product. Keep the sensing area of the seat ring clean and avoid objects such as seat rings wrapping around the sensing area of the seat ring. Dirty or foreign objects sticking tightly to the sensing area may cause product operation errors or non-operation. Do not use cleaning agents to clean the filter screen, please clean it with clean water.

-Plastic appearance

Most of the exterior components of the toilet are made of plastic. To prevent plastic damage and scratches, please clean and maintain them as follows:

Usually, wipe with a soft cloth dipped in water.

If necessary, please wipe with a cloth dipped in some neutral kitchen cleaner before wiping with water.

After cleaning the ceramic part, wipe the remaining detergent on the plastic of the toilet with a soft cloth.

As it is an electrical product, to prevent water ingress, be sure to dry it with a soft cloth after cleaning.

-Clean the angle valve filter screen (recommended to be cleaned every 3 months)

① Close the toilet corner valve and stop the water supply.

② Use a coin or a flat screwdriver to insert into the slot of the front cover of the angle valve, and rotate counterclockwise to remove the water inlet filter screen.

③ After removing the filter screen, rinse off the attached dirt with water. Generally, small attachments can be removed with a toothbrush or other tools, while larger ones can be removed with a cotton swab or other tools.

④ Turn the filter back to the angle valve clockwise, please make sure to tighten it, otherwise it may cause water leakage.

-Clean the toilet washer

① In the off seat state, press the "self-cleaning" button on the remote control to extend the washer nozzle and start draining.

② Use a soft bristle brush or toothbrush to clean the surface of the washer and remove any dirt/scale from the nozzle.

(Self-cleaning mode will automatically stop after 90 seconds of activation. You can click the "Stop" button to turn off this function in advance; do not forcefully push or pull the nozzle)

-Winter antifreeze (when the ambient temperature is below 4 °C)

When not in use for a long period of time such as business trips or outings, please empty the toilet to store water and avoid freezing and cracking.

① Close the water supply angle valve, press the flushing button on the remote control, start flushing, and empty the water tank.




② Enable self-cleaning function to drain residual water from the toilet.

③ Loosen the water supply pipe on the corner valve and pour the accumulated water in the pipe.

④ Cut off the power supply to the toilet.

(Push type intelligent toilets require the water supply to be turned off near the end of flushing after starting flushing to drain.)

After storing the product in a low-temperature environment for a long time, if it is moved to a room with a higher temperature, the product should be left for 30 minutes until it naturally thaws before being connected to water and electricity to avoid internal failures of the appliance. If freezing occurs, making it impossible to flush or clean, a cloth soaked in hot water can be covered on the water supply hose of the toilet or the connection part of the water supply hose to thaw it. (Do not pour hot water or blow hot air with high temperature onto the product body, water supply hose, and other objects).

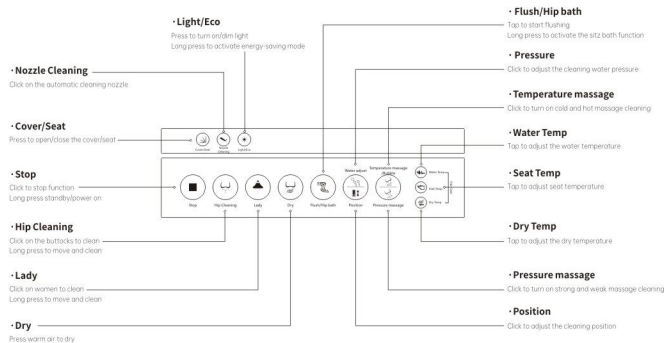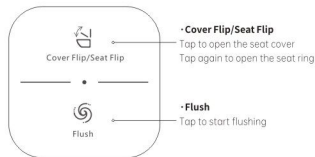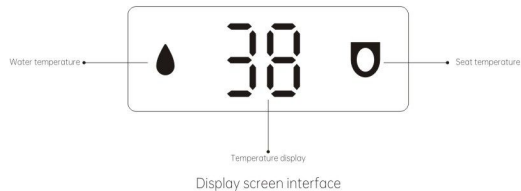

Reminder: The functions such as "flip, flip, bubble toilet" can only be used on models that include their configuration functions.

Remote control code matching: After power on, wait for the buzzer to sound once. When the knob light is on, rotate the knob counterclockwise and pause for 2 seconds. The buzzer will sound a long time to enter code matching mode. At the same time, press any key on the remote control to successfully match the code.

Side buttons



Hip Cleaning/Move

Click to perform hip cleaning; Click again to execute the mobile cleaning function.

Lady/Move

Click to perform female cleaning; Click again to execute the mobile cleaning function.

Stop/Flush

Click to stop the function being executed.
Press to flush water when people not seated

Dry

Click to perform warm air drying.

06/Technical parameters

Name (model)	Intelligent toilet (P44)	
Rated voltage	220V	
Rated frequency	50Hz	
Rated power	1200W	
Power cord length	1.5 meters	
Flushing method	Jet siphon type	
Cleaning device	Buttock washing	The cleaning water volume is about 0.6L/min
	Women's washing	The cleaning water volume is about 0.6L/min
	Water temperature	Normal temperature - about 54 °C - about 57 °C - about 40 °C (4-speed adjustment)
	Maximum power of warm water heater	1200W
	Insulation device	Temperature fuse, temperature controller, temperature sensor
Insulation seat ring	Surface temperature	Normal temperature - about 54 °C - about 57 °C - about 40 °C (4-speed adjustment)
	Seating heater	45W
	Safety devices	Temperature fuse, temperature controller, temperature sensor
Dry	Warm air temperature	Normal temperature - about 55 °C - about 45 °C - about 55 °C (4-speed adjustment)
	Heating heater	270W
	Safety devices	Temperature fuse, bimetallic thermostat
Water supply pressure	There is no such restriction for the water tank entering the wall	
Waterproof grade	IPX4	
Water supply temperature	5-35℃	
ambient temperature	0-40℃	
Product size	600mm*570mm*566mm	
Product weight	49kg	
Executive standards	GB 4706.1-2005 GB/T 6952-2015	
	GB4706.55-2008 GB 58448-2019	
Note: When using water pressure below 0.2MPa, it is recommended that users install a booster pump, otherwise it may affect your normal use.		

07/Function Introduction

Classification	Function	FunctionDescription
Basic functions	Hip cleaning	Clean buttocks function, enable this function, and the toilet will automatically perform procedures such as buttocks cleaning and drying.
	Female cleaning	The female cleaning function enables the toilet to automatically perform female cleaning, drying, and other work procedures.
	Warm air drying	Accelerate the evaporation of water droplets with warm air, making the buttocks dry and comfortable.
Comfort function	Water pressure regulation	Adjust the water pressure of the water spray during cleaning to adapt to users with different sensitivities.
	Position adjustment	Adjust the front and rear positions of the nozzle during cleaning to accommodate users with different sitting positions.
	Temperature regulation	The water temperature for cleaning, the seat temperature of the seat ring, and the air temperature for drying can be adjusted.
	Mobile cleaning	During cleaning, the water column moves back and forth for a wider range of cleaning.
	Cover Mute	Using a damping device to ensure smooth and low noise closure of the coil and cover.
Humanized functions	Comfortable night light	Soft lighting night lights, guarding the toilet at night.
	Automatic flushing	Automatic flushing is performed after the person leaves the seat.
	Foot sensation flushing	After urinating, a man flushes water by triggering a foot sensing device.
Safety functions	Exothermic heat	By utilizing multiple protections such as software intelligent regulation, temperature sensors, and temperature fuses, it is possible to prevent situations such as high temperature burns.
	Antielectric shock	Install leakage protection devices to prevent the occurrence of electric shock accidents.
Cleaning function	Spray nozzle self-cleaning	Automatically clean the nozzle before and after each cleaning. The nozzle will extend out, making it convenient for users to manually clean the nozzle.
Economic function	The water temperature is immediately hot	During cleaning, the toilet instantly heats the cleaning water supply, saving energy and maintaining a constant temperature.
	Energy saving mode	Low power consumption mode, intelligent power saving.
Convenient features	Automatic flip	Set the human body sensor to automatically perform the flip action when approaching the sensing range.
	Automatic loop flipping	When triggering foot sensation, perform a loop turning motion, and men do not need to manually lift the seat cushion when urinating.
Built-in water tank	No water pressure restriction	Built in water tank, equipped with brushless booster pump for pressurization, without water pressure limit, suitable for low water pressure environments.
Doorbell type switch	For details, please refer to P15	One click control, convenient to touch, no need to bend down and adjust at will.

Function	Description and adjustment method
Enthronement	The hip washing, women washing, and drying functions can only be used normally while sitting.
Thermostatic seating	Press the "Seat Temperature" button to cycle and adjust the seat temperature from low to high. Please choose the appropriate seat temperature for use to prevent low-temperature burns. When the seat temperature is in the first gear, the seat ring is not heated. When the seat temperature is in the second or higher gear, the higher the gear, the higher the seat temperature.
Clean	Rotate the knob or remote control "Hip Wash" or "Women Wash" button to clean. Each cleaning time is approximately 120 seconds. During the cleaning process, pressing the current cleaning mode again can turn on or off mobile cleaning. Press the "+" or "-" button to adjust the cleaning water pressure; Press the cleaning position "△" or "▽" to adjust the cleaning position; Press the "Water Temperature" button to cycle and adjust the water temperature from low to high. Please choose a suitable water temperature for use to prevent low-temperature burns. When the water temperature is in the first gear, cleaning does not require heating. When the water temperature is in the second or higher gear, the higher the gear, the higher the water temperature.
Dry	Start the warm air drying by pressing the knob or pressing the remote control "drying" button. Each drying time is approximately 180 seconds. Press the "Air Temperature" button to cycle and adjust the air temperature from low to high. Please choose a suitable air temperature to prevent low-temperature burns. When the wind temperature is in the first gear, the wind temperature is not heated. When the wind temperature is in the second or higher gear, the higher the gear, the higher the wind temperature.
Stop it	During the cleaning or drying process, press the knob or remote control "Stop" button to exit the current cleaning or drying process.
Foot induction	Foot induction activation method: Close to the infrared sensor to trigger the toilet to work. In the basic style, the device is activated for flushing in the off seat state. In high configuration styles, the device is activated for flipping, flushing, and closing. - In the closed state of the seat ring, trigger foot sensing to flip the cover and circle. - In the open state of the seat ring, trigger foot sensing, close the ring and cover, and initiate a flushing.
Automatic flushing	Sitting for more than 3 seconds, about 1 second after leaving the seat, the toilet will automatically start flushing once. Long press and hold the "Flush" button on the remote control for 5 seconds to turn on/off the intelligent flushing system. After turning off, the toilet stops all automatic flushing functions.
Flushing method	Flushing methods: automatic flushing, manual flushing, remote flushing, and foot feeling flushing. Manual flushing: Press the knob to flush once. Remote flushing: Press the "flushing" button on the remote control to perform a flushing. Automatic flushing: Refer to "Automatic flushing" above. Foot sensation flushing: refer to the chapter on foot sensation. Power off flushing function: When the toilet is powered off, press the side knob to flush once. Attention: If the power outage and flushing are abnormal, please check the battery level or replace the backup battery in a timely manner.

Function	Description and adjustment method
Automatic flip closure	When the seat cover is in a closed state and the human body enters the sensing range of the toilet, the seat cover will automatically flip up. After leaving the seat, if the human body leaves the sensing range of the toilet for about 60 seconds, the seat cover will automatically close. Long press the remote control "flip" function to turn on or off the intelligent flip system. If the human body approaches the toilet, the seat cover will no longer be opened and will be closed. Note: This feature is only available on high configuration models.
Energy saving function	In energy-saving mode, the toilet enters low-power mode. Start the energy-saving mode, set the seat temperature range to the second or higher gear, and the seat ring will automatically maintain at 25°C. After seating, the heating will resume.
Lighting function	The body is equipped with a low light level lamp, making it convenient to use the toilet at night.
Standby	Press and hold the "Stop" button on the remote control for 3 seconds, and the toilet will enter standby mode. All functions will stop working. Press and hold the "Stop" button on the remote control again for 3 seconds, and the toilet will return to its normal working state.

08/Malfunction diagnosis

When the product is abnormal, please try the following handling methods to eliminate and solve the problem. If the problem still cannot be solved, please contact the sales unit or after-sales service center.

Product Functions	Phenomenon	Inspection items	Exclusion method
Organism	Not working at all	Whether to turn on the power	Turn on the power
		Whether the power plug is properly plugged	Re plug the power plug
		Power failure or not	Recheck after power supply is restored
Hip wash Women wash	No water from the nozzle	Whether the landing sensing area is sensing	Adjust the seating position to ensure that the seat ring sensor detects the human body
		Whether the water supply angle valve is open	Check the water supply of angle valve
		Whether water supply is stopped	To be used again after water supply is restored
		Whether the nozzle is blocked by foreign matters	Clean the foreign matters in the nozzle and dredge the nozzle
	Low cleaning water pressure	Whether the water pressure gear is in the weak gear	Reset the water pressure
		Whether the water inlet channel is smooth	Clean the angle valve filter
	Cut off water halfway	Whether the inductor senses	Adjust the seating position to ensure that the seat ring sensor detects the human body
		Whether the cleaning function stops automatically	Restart the cleaning function
		Whether water supply is stopped	Recheck after water supply is restored
	water temperature is low	Is the water temperature gear at the lowest gear	Press the remote control 「water temperature」 button to adjust the water temperature
Warm air drying	Low wind temperature	Whether the wind temperature gear is at the lowest gear	Press the remote control 「air temperature」 button to adjust the air temperature
		Whether the inductor senses	Adjust the seating and confirm that the sensor senses that the human body is seated
	Midway stop	Whether the drying function stops automatically	Restart the drying function
Seat ring heating	Low race temperature	Whether the inductor senses	Adjust the seating and confirm that the sensor senses that the human body is seated
		Is the seat temperature gear at the lowest gear	Press the remote control 「seat temperature」 button to adjust the seat temperature
Automatic flushing	Washed not clean	Whether the flushing pipe is bent to	Adjust water pipe position
		Whether there are foreign matters blocking the blowdown pipe	Dredging toilet/sewage pipe
	No flushing when leaving the seat	Whether to turn off automatic flushing	Enable automatic flushing function
Remote control	Remote control doesn't respond	Low Battery	Replace the battery
		Whether there is water ingress/soaking	Wipe off the moisture/try again after drying

Warning: Do not disassemble, repair or modify the product without permission except for professional maintenance personnel

Maintenance regulations

1. During the warranty period, after-sales service personnel can enjoy free maintenance service after troubleshooting.

2. If you need to maintain the product due to failure during the warranty period, please contact the sales unit or after-sales service center, and show the warranty card during maintenance.

3. During the warranty period, maintenance costs (material and labor costs) shall be charged according to the circumstances below:

- Failures or damages caused by failure to follow the instructions and precautions;
- Failure or damage caused by fire, earthquake, flood, lightning and other force majeure;
- Failure or damage caused by transportation, handling, extrusion, etc;
- Failure or damage caused by using non specified power supply (voltage, frequency);
- It is used for purposes beyond the normal use range, and the fault or damage occurs;
- Failure to provide purchase records or to show this warranty card;
- The warranty card is not filled in or the contents are modified without authorization.

4. This warranty card will no longer be issued. Please keep it properly.

WARRANTY CARD

Dear user:

Thank you for choosing our sanitary products. In order to ensure that we can provide you with quality services, please fill in this card carefully and keep it properly.

User Name		Contact number	
Detailed address			
Product model			
Bar code			
Purchase date			
Sales unit			
Maintenance Date		Maintenance unit	
Maintenance items			
Maintenance Date		Maintenance unit	
Maintenance items			
Maintenance Date		Maintenance unit	
Maintenance items			
Maintenance Date		Maintenance unit	
Maintenance items			