


OPERATION AND INSTALLATION MANUAL

Fan Coil Unit

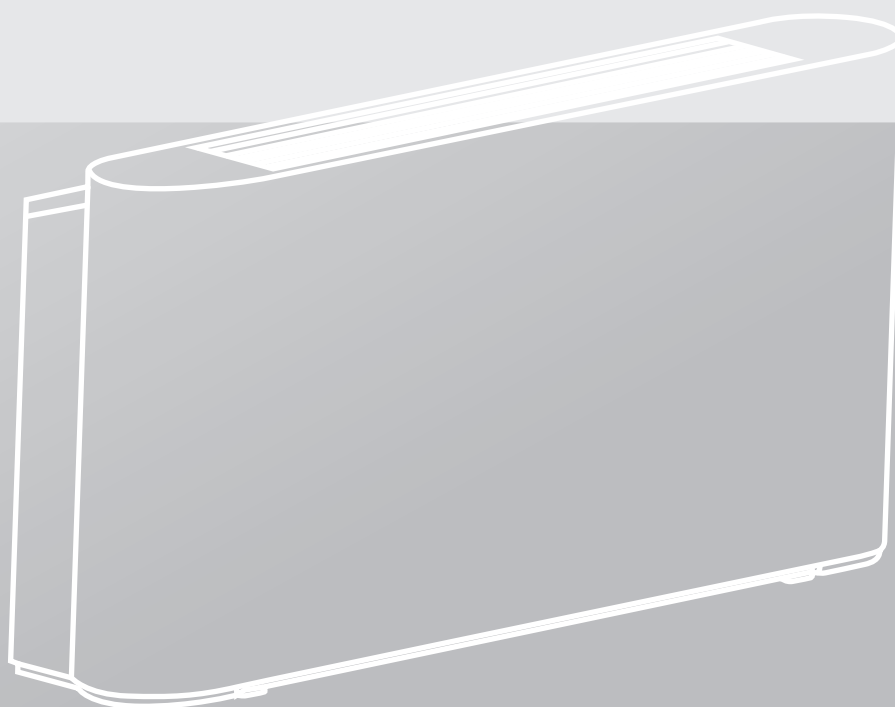

IMPORTANT NOTE:

Original instructions.

Please read this manual carefully and keep it for future reference.

All the pictures in this manual are for illustrations purpose only.

CONTENTS

1 ABOUT THE DOCUMENTATION	01
• 1.1 About this document	01
• 1.2 Safety precautions	02
• 1.3 Information	03
2 PRODUCT OVERVIEW	04
3 OPERATION INSTRUCTIONS	06
• 3.1 Standard Conditions for Use	06
• 3.2 Switch and Control	06
• 3.3 Air Supply Direction Adjustment	07
4 CLEANING AND MAINTENANCE	07
• 4.1 Maintenance by Customer	07
• 4.2 Professional Maintenance	07
5 INSTALLATION INSTRUCTIONS	10
• 5.1 Unpackaging	10
• 5.2 Handling Instructions	10
• 5.3 Installation	10
• 5.4 Liquid Pipe Connections	13
• 5.5 Electrical Connection	15
• 5.6 Startup Guide	17
6 SERVICE GUIDE	17
• 6.1 Troubleshooting	17
• 6.2 Non-Unit Related Faults	18
7 PRODCUT DATA	19

1. About the documentation

1.1 About this document

NOTE

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers + end users

NOTE

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

WARNING

Please thoroughly read and ensure that you fully understand the safety precautions (including the signs and symbols) in this manual, and follow relevant instructions during use to prevent damage to health or property.

Documentation set

This document is part of a documentation set. The complete set consists of:

- General safety precautions:
Safety instructions that you must read before installing
- Fan coil unit(s) installation and operation manual:
Installation and operation instructions
- Controller installation and operation manual:
Installation and operation instructions

Please refer to the product manual for other accessories.

Technical engineering data

Latest revisions of the supplied documentation may be available via your dealer.

The original documentation is written in English. All other languages are translations.

1.2 Safety precautions

Please thoroughly read and ensure that you fully understand the safety precautions (including the signs and symbols) in this manual, and follow relevant instructions during use to prevent damage to health or property.

Safety Signs

DANGER

Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTE

Useful operation and maintenance information.

Explanation Of Symbols Displayed On The Unit

	CAUTION	This symbol shows that the operation manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
	CAUTION	This symbol shows that information is available such as the operating manual or installation manual.

WARNING

- Ask professional staff to install (install for the first time, change the place of the unit or re-install) and repair the unit and its parts. The installation operator must have acquired the relevant professional qualification. Do not attempt to install or repair the air conditioner by yourself, as any improper operations may lead to fire, electric shock, personal injury or water leakage.
- Make sure the unit is grounded reliably in accordance with the laws. Otherwise, it may cause electric shock.
- Stop using the air conditioner and consult your dealer in case of any abnormalities. Otherwise, fire or electric shock may occur.
- Do not attempt to maintain or alter the unit by yourself. Improper operations may cause water leakage, electric shock or fire.
- Make sure the leakage protection device is installed, or electric shock may occur.
- Do not wash the unit with water, or electric shock may occur.
- To avoid electric shock, do not place any water-filled container on the unit.
- Do not operate the switch with wet hands, or electric shock may occur.
- Do not put your fingers or other objects into the unit, it can result in serious injury.
- Do not obstruct the air supply channel, it may result in personal injury or damages to the unit.
- Check that the supporting structure of the unit is securely installed after a long period of use, to prevent fall accidents.
- Make sure the installation base and hoisting are robust and reliable; otherwise, the unit may fall and lead to accidents.
- Do not expose yourself to cold air over a long period. Too low temperature may cause harm to your health.
- Do not expose animals or plants to air outlet to avoid any harm.
- Do not install the unit where flammable gas may leak. Otherwise, fire may occur. Do not install the unit in potentially explosive atmospheres.
- Keep the unit far away from combustible spray to avoid fire.
- Use proper fuse. Do not use iron wire or copper wire, as it may cause fire or unit abnormality.
- When connecting power supply to the unit, follow the regulations of the local electric company.
- Provide separate power switch to ensure the unit can be disconnected from power properly.
- Do not use this unit to store spare parts or other items.
- Please attach enough importance to the signs and symbols indicated on the unit. Any other potential hazards not covered in the Manual (if any) should be specified in labels attached to the unit.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

NOTE

- Read the Manual carefully and perform a safety inspection in advance so that you can be fully aware of the possible dangers as you use or install the unit.
- The manufacturer shall not be liable for any personal or animal injury or damage to any object caused by incorrect installation, adjustment, maintenance or improper use.
- The manufacturer is not held liable for any damages resulting from faulty operations against this Manual.
- Do not expose this unit to wet or humid environments as this may damage electrical components.
- Do not store this unit in the open air. Do not stack unpackaged units.
- Do not use this unit to store food, plants, precision instruments, artwork etc.
- To operate the unit for the first time, exhaust the air in the coil; otherwise, the performance may be compromised.
- Clean the inside of the water pipe before use.
- Remember to implement anti-freezing measures for coil in winter. For details, please refer to anti-freezing instructions herein.
- Keep the unit energized even if it is not in service over a long period.
- Adopt self-protection measures when you install, maintain or clean the unit.
- Do not press the unit. Handle it carefully as any damages may cause unit malfunction.
- Reserve enough space for installation and maintenance.
- Before installation, check whether the unit is reliably grounded. Otherwise, do not proceed with the installation. In no circumstances can the earth line for main power switch be disconnected.
- Rotate the fan impeller during installation. Contact the manufacturer if you hear any abnormal noises.
- Make sure that the water discharge pipeline can provide smooth drainage. Improper installation of the water discharge pipeline may lead to water leakage, and damages to furniture.
- Make sure the liquid pipeline and air duct are reliably supported. Make sure pipes and connectors are not distorted.
- The water inlet and outlet pipes must have check valves installed and be wrapped with insulation materials.
- Connect the wires as required. Otherwise, it may cause damage to electrical parts.
- The actual power supply must be consistent with the nominal nameplate value, or permanent damage may occur.
- Use power cord with a proper diameter.
- Do not use damaged cables. Replace the damaged cables immediately if necessary. Do not attempt to repair the damaged cables.
- Keep for future reference.

1.3 Information


- Keep the unit serial number available for future reference and in case when you need to contact the after-sales service.
- Do not bring any combustible materials near the air outlet.
- Transport the unit as per requirements indicated on the package.
- Avoid crash, fall-over or squeeze and keep away from rain and snow during transportation.
- Store the unit in a clean, dry, fire-proof and well-ventilated place without any corrosive gas.
- To avoid shock during transportation, fix the unit and its accessories on the transportation platform with ropes or by other means.

2 PRODUCT OVERVIEW

This ceiling and floor type unit is used for indoor air quality regulation in various scenes. This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

NOTE

All the illustrations of this manual are for explanatory purpose only. If the appearance, functions and physical objects are inconsistent, refer to the actual product.


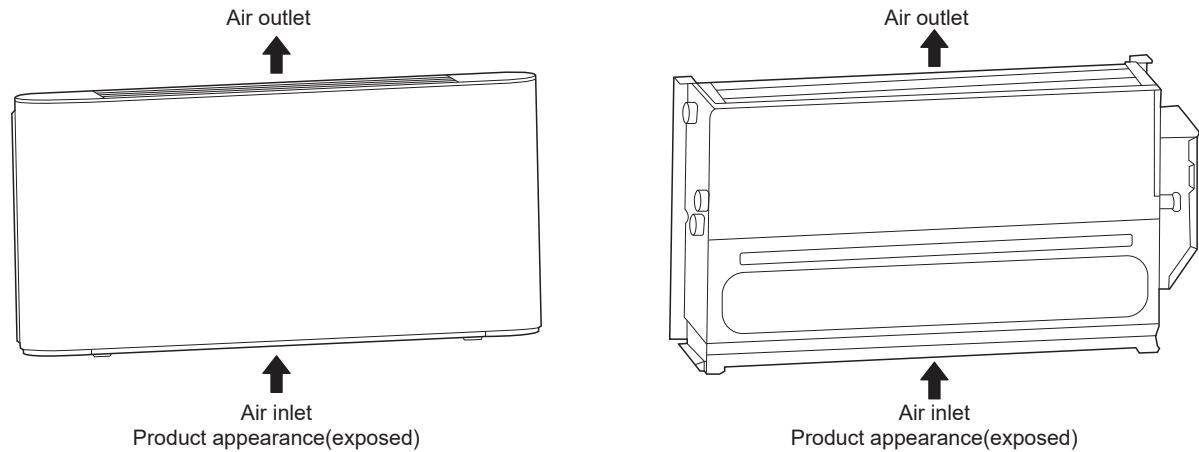


Accessories:

NO.	Name	Schematic	Unit	Qty
1	Operation and installation manual		Pcs	1

To be purchased separately:

NO.	Name	Schematic	Unit	Qty
1	Fastening screw		Pcs	4
2	Three-way valve and its piping assembly		Set	1
3	Footing		Set	1
4	Auxiliary drain pan		Pcs	1
5	Wired controller		Pcs	1
6	Inlet hose		Pcs	1

NO.	Name	Schematic	Unit	Qty
7	Outlet hose		Pcs	1
8	Strainer		Pcs	1
9	Check valve (inlet and outlet pipes)		Pcs	2
10	Drain pipe		Pcs	1

3 OPERATION INSTRUCTIONS

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

- The manufacturer is not responsible for unit damages or personal injury resulting from unauthorized operations or use of non-original parts or accessories.
- **Ventilation**
Periodically ventilate the room where the unit is installed. Ventilation is especially important in case the room has many people in it or has flammable devices or gas sources. Poor ventilation may result in lack of oxygen.
 - Before unit operation, clean water pipes to prevent them from being blocked.
 - Upon FCU test run or switching between hot and cold water, open the vent valve to exhaust air in the coil until water flows out. Otherwise, the heat exchange performance may be significantly compromised.
- **During operation**
Filter is normally not removed except for maintenance purpose, as doing so may cause foreign objects to enter the unit.
- **In normal cases**
In cooling mode, fog may appear at the air outlet.

3.1 Standard Conditions for Use

Use the system in the following temperature for safe and effective operation.

Mode	Indoor temperature
Cooling	17 °C to 32 °C
Heating	0 °C to 30°C

If air conditioner is used outside the above conditions, it may cause the unit to function abnormally. Optimum performance will be achieved within these operating temperature range.

The unit can only operate normally as long as you strictly adhere to the regulations outlined in the Manual.

Water inlet temperature range is 3 °C to 75 °C.

Water inlet temperature range recommended is 3°C to 65 °C.

Water inlet pressure range is 0-1.6 MPa.

3.2 Switch and Control

The wired controller should be purchased separately from the manufacturer. Other wired controllers are not applicable.

Installation position of wired controller

You can install the wired controller on the left, or right of the unit or on the wall as required. Make sure the wired controller is close to the electric control box.

Please refer to the Wired Controller Operation and Installation Manual for installation methods.


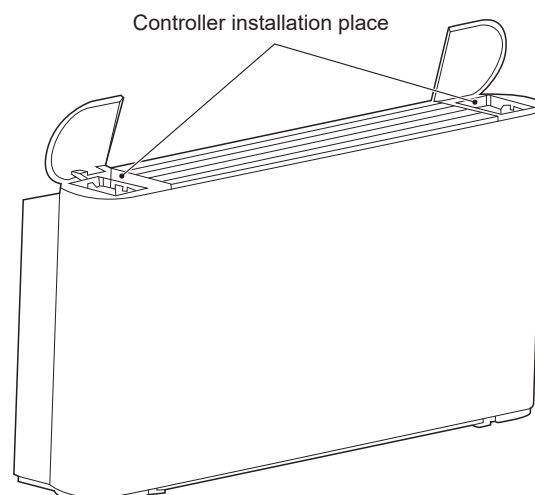


Figure 3-1 Installation position of wired controller

The Operation Manual is provided with the wired controller.

You can complete the following operations using the manufacturer's wired controller:

- Start/stop the unit.
- Switch between seven fan speeds and auto.
- Constant temperature set within a desired range.
- Switch among Cool, Heat, Dry, and Auto.

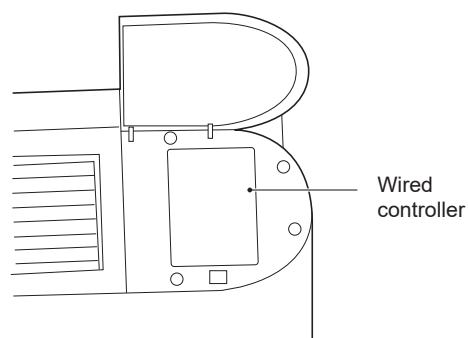

DC unit	KJRP-75A/BK-E
AC unit	KJRP-86A/BMFNKD-E
	KJRP-86I/MFK-E

Figure 3-2 After installation of wired controller

Table 3-1 wired controller and the unit correspond to the table

0-10V wired controller output DC voltage signal to main board. The main board receives the signal and controls the motor according to the corresponding speed.

Table 3-2 0-10V wired controller output signal specification table

	Controller output voltage	Fan speed
Seven fan speeds	$0 \leq \text{voltage} < 1$	shutdown
	$1 \leq \text{voltage} < 3$	low
	$3 \leq \text{voltage} < 4$	medium low
	$4 \leq \text{voltage} < 5$	medium
	$5 \leq \text{voltage} < 6$	medium high
	$6 \leq \text{voltage} < 7$	high
	$7 \leq \text{voltage} < 8$	super high
	$8 \leq \text{voltage} < 10$	strong
Auto speed	The wired controller is adjusted according to the logic of the seven-level control system.	

1) Start and stop

Start or stop the unit using the wired controller or centralized controller.

① Start the unit after it has not been used for a long time	Before starting the unit again, you should: • clean or replace the air filter. • clean the heat exchanger. • make sure the drain pipe for drain pan of heat exchanger is clean; if not, wash it. • remove air from the water system.
② Leave the unit unused for a long period	If the unit is not to be used in winter, drain the water system when appropriate. Otherwise, the water in the system may freeze, thus causing damage to the unit, or leading to water leakage, electric shock or damage to furniture.

3.3 Air Supply Direction Adjustment

You can manually adjust the louver to change the air supply direction.

NOTE

Do not touch the heat exchanger to avoid any personal injury.

To adjust the air supply direction, do as follows:

- 1) Remove the screws (M3.9*10) fixing the louver.
- 2) Disassemble the louver manually.
- 3) Rotate the louver by 180° and then put it back manually.
- 4) Put the screws back and fasten them.

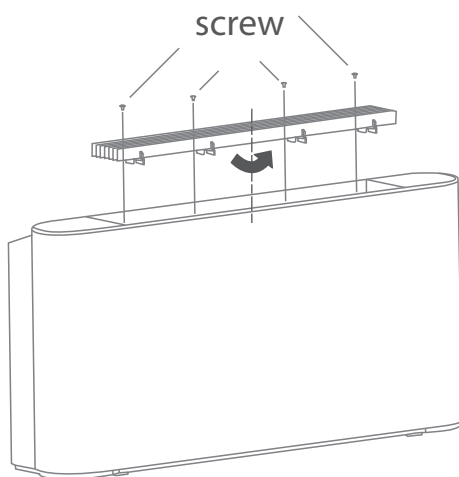


Figure 3-3 Adjusting the air supply direction

4 CLEANING AND MAINTENANCE

4.1 Maintenance by Customer

NOTE

Cleaning and maintenance must not be performed by minors without supervision.

4.2 Professional Maintenance

4.2.1 Structure

Cleaning the outer surface of the unit is permitted. Dip a piece of soft cloth in cold water and alcohol to clean the unit. Do not use hot water, solvent, abrasive or corrosive substances.

NOTE

Disconnect the unit from power supply before cleaning or maintenance.
Do not spray water on the unit.

1) Cleaning the air filter

To ensure proper air return, clean the air filter at least once every month. If used in a dusty environment, the filter must be cleaned on a more frequent basis. Take the air filter out before you can clean it.

The filter is at the bottom of the unit, while the air return outlet is at the bottom or the rear side.

To take the air filter out, do as follows:

- a) Remove the screws ① and ②.
- b) Rotate the filter bracket.
- c) Pull out the filter.

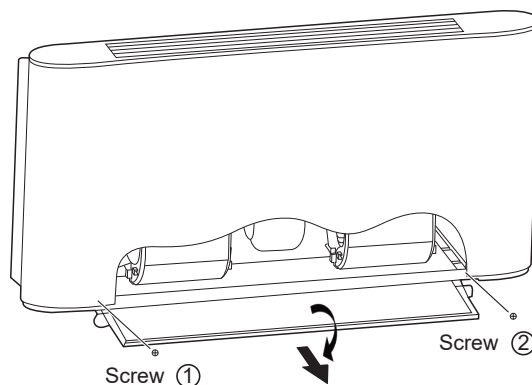


Figure 4-1 Diagram of removing the filter

Blow the air filter with compressed air or clean it in water.

Before putting the filter back, make sure it is clean and dry. If it is damaged, replace it with a new one.

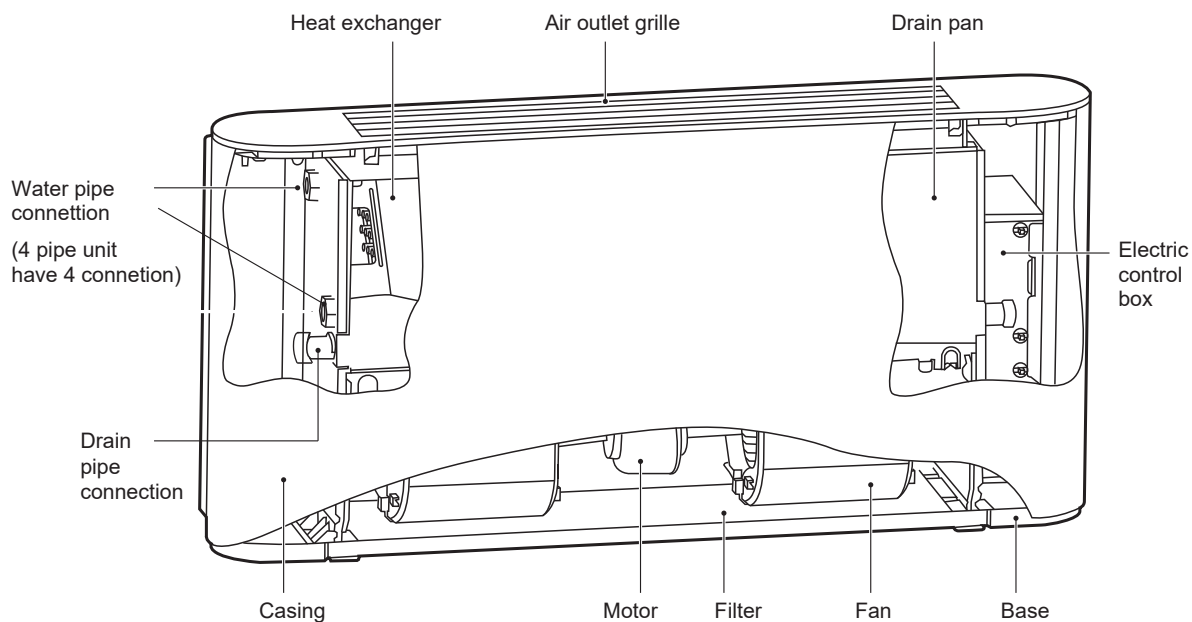


Figure 4-2 Diagram of unit (exposed)

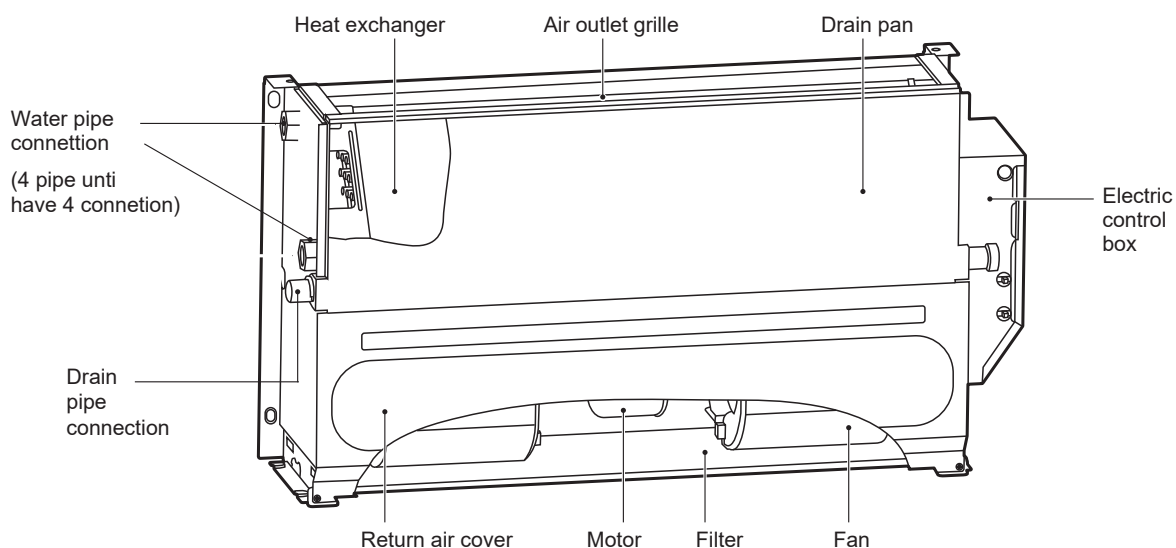


Figure 4-3 Diagram of unit (concealed)

For dual-pipe system and four-pipe cold water coil, the water inlet and outlet joints are G3/4. For four-pipe hot water coil, the water inlet and outlet joints are G1/2.

The casing of the unit is made of galvanized steel; the air filter is made of nylon fibre, and the aluminum alloy air filter can be customized; the motor has internal overheat protection and overcurrent protection; a centrifugal rotating fan is used; a soundproof material such as sponge is used; the fin type heat exchanger is composed of copper pipe and aluminum foil, and the heat exchanger pipe connection can be changed on site.

4.2.2 Maintenance

⚠ CAUTION

Only qualified technicians who have unit and refrigeration system experience can perform maintenance operation. Proper gloves are required.

Before maintenance or check, disconnect the unit from power supply, keep the main switch closed with warning sign attached, to prevent others from resuming the power accidentally.

1) Routine maintenance

2) Once every month

Check whether the air filter is clean. The air filter is washable as it is made of fibre. When the unit is operational, make sure you check the air filter every month.

3) Once every six months

Check whether the heat exchanger and condensate drain pipe are clean. After power disconnection, disassemble the unit to check the heat exchanger and condensate drain pipe.

4) If necessary, you should:

- a) Remove any foreign matters that may impede air flow.
- b) Remove the dust with compressed air or clean water and avoid damage to the heat exchanger.
- c) Dry with compressed air.
- d) Check for any impurities in the drain pipe that may impede water flow.

e) Check whether the system has air.

- Start and let the system run for several minutes.
- Stop the system.
- Open air discharge valve to remove air.
- Repeat this operation until the air is exhausted.

5) Maintain the circuits.

Check whether the power cord, electrical contacts, terminals etc. are loose or damaged.

6) If the motor needs to be replaced, follow the steps below:

- a) Unplug the unit.
- b) As shown in Figure 4-4, remove screws ①*2 and ②*2 and then the casing.
- c) As shown in Figure 4-5, remove screws ①*2 to take the filter out.

Then, remove the upper volute.

After that, remove four screws (②) that fix the motor, to disconnect the motor cable and the main board. Then, take out the fan and the motor.

Disassemble the fan to get the motor.

Install back the motor in reverse order.

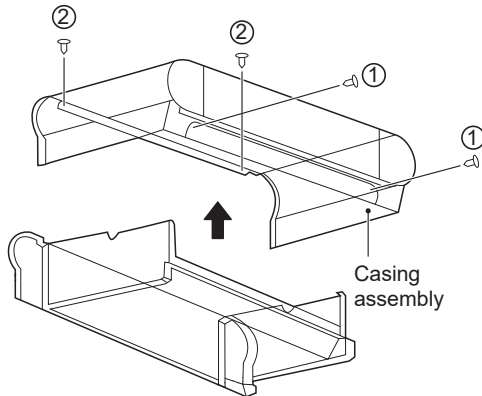


Figure 4-4 Removal of casing

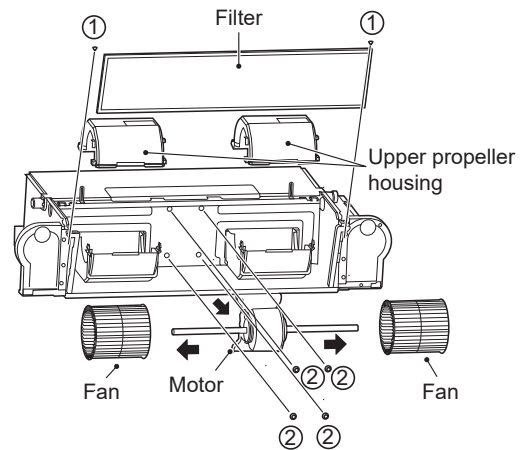


Figure 4-5 Removal of filter, upper volute and motor screws

7) If the heat exchanger needs to be replaced, follow the steps below:

- a) Unplug the unit.
- b) Shut off the water supply.
- c) As shown in Figure 4-6, remove screws ①*2 and ②*2 and then the casing.
- d) Drain the coil.
- e) Disassemble the inlet and outlet pipes.
- f) As shown in Figure 4-7, remove screws ①*2 to remove the electric control box.
- g) As shown in Figure 4-8, remove screws ①*7 to take the drain pan out. Then, remove screws ②*4 to take the heat exchanger out.
- h) Pull out the temperature sensor plug.

Install back the heat exchanger in reverse order.

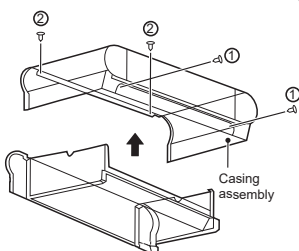


Figure 4-6 Removal of casing

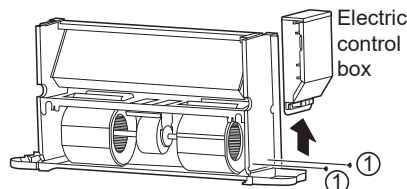


Figure 4-7 Removing the electric control box

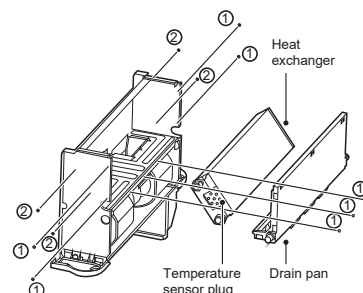


Figure 4-8 Removal of drain pan and heat exchanger

8) If the unit or its parts need(s) to be removed, make sure that:

Only a professional person can disassemble the unit.

The system with antifreeze must not be discarded; otherwise, it will cause pollution. It should be collected and then be disposed off properly.

As a special waste, electronic components must be handled by professional persons together with polyurethane foam, polyurethane and sound absorbing sponge.

5 INSTALLATION INSTRUCTIONS

WARNING

Only trained professionals can install the unit.

NOTE

- Customization is required for use in salty surroundings (close to the shore).
- Install the water softening device if hard water that has a high salt content is to be supplied to the coil.
- Handle with care. Do not exert too much pressure on the unit.
- Any damages to the fan, unit surface or piping may cause faults.

5.1 Unpackaging

Upon arrival of the unit, you must check whether it is intact and provided with complete accessories. Using damaged unit may be hazardous.

1) When removing the unit package, follow the steps below:

Check whether the package and unit are intact and whether accessories are complete.

Unpack the unit.

Dispose off packaging materials at a suitable waste receiving or recycling station, depending on the laws of the country or locality where the installation is to be done.

Place the package out of the reach of children.

5.2 Handling Instructions

Wear personal protective equipment during handling.

To avoid damages to external structures, internal mechanical and electrical components, caution must be exercised during handling.

Make sure there are no obstacles or pedestrians along the way in case collisions or crushing occurs or lifting or handling equipment falls over.

All of the following operations must be performed in accordance with current health and safety regulations, including the equipment used and the procedures followed. Before operation, verify that the lifting device is capable of lifting the unit.

You can lift or move the unit using your hand or using a proper handcart. Move the unit in case it weighs over 30 kilograms and at this time, box it before it can be lifted using a crane or by similar means.

5.3 Installation

Follow the instructions when installing the unit.

Read the Manual carefully before proceeding with any operations. Installation can be only performed by a professional technician. Incorrect installation may lead to unit faults or degraded performance.

You must abide by the regulations of the country or locality where the installation is located.

CAUTION

Before installation, unpack the unit and its accessory, and find the attached Operation and Installation Manual and related assembly.

The support surface of installation must be strong enough to bear the weight of the unit.

Before installation, check with the customer whether the wall or ground where installation is located has buried wires, water pipes or gas pipes.

Make sure the inlet and outlet pipes and drain pipe are air-tight.

5.3.1 Dimensions

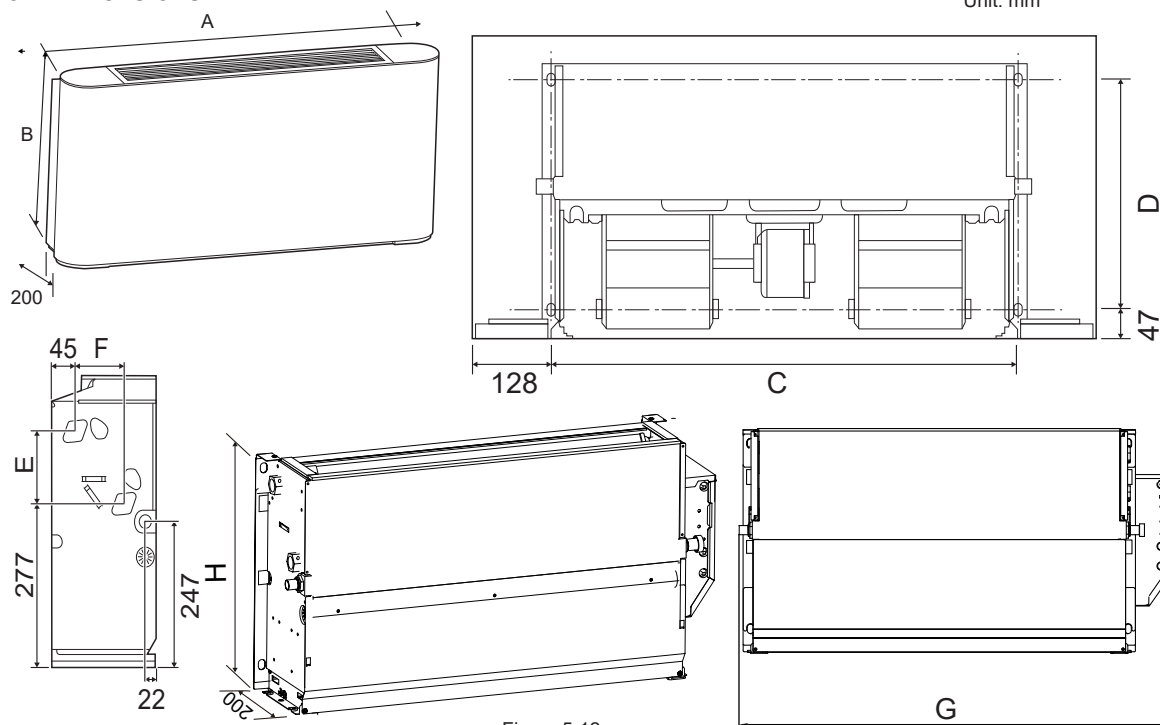


Figure 5-12

Table 5-1 Unit: mm

MODEL	MKH1(2、3)-150 (V150)MKH1(2、3) -150F(V150F)	MKH1(2、3)-250 (V250)MKH1(2、3) -250F(V250F)	MKH1(2、3)-350 (V350)MKH1(2、3) -350F(V350F)	MKH1(2、3)-500 (V500)MKH1(2、3) -500F(V500F)	MKH1(2、3)-700 (V700)MKH1(2、3) -700F(V700F)	MKH1(2、3)-800 (V800)MKH1(2、3) -800F(V800F)
A	790	1020	1240	1240	1360	1360
B	495	495	495	495	495	591
C	534	764	984	984	1104	1104
D	375	375	375	375	375	391
E	123	123	123	123	123	219
F	93	93	93	93	93	102
G	DC	628	858	1078	1198	1198
	AC	596	826	1046	1166	1166
H	455	455	455	455	455	551

5.3.2 Spacing and Positioning

Incorrect positioning or installation may increase the noises and vibration of the unit during operation.

If not enough space is reserved during installation, the unit may face difficult maintenance and reduced performance.

The unit allows vertical installation, provided that correct positioning is arranged in advance. As shown below, a is greater than 150 mm, b greater than 90 mm, c greater than 50 mm and d greater than 1500 mm.

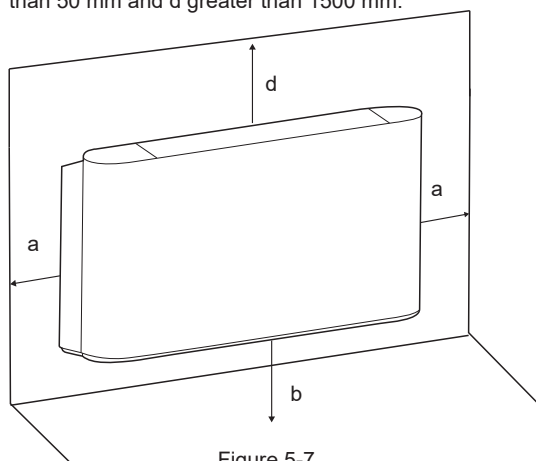


Figure 5-7

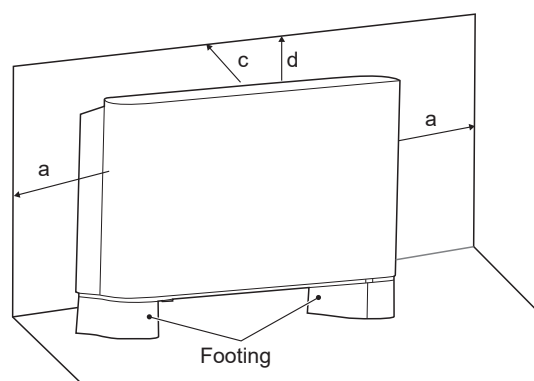
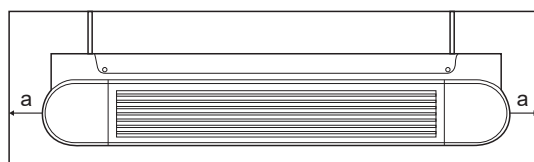


Figure 5-8



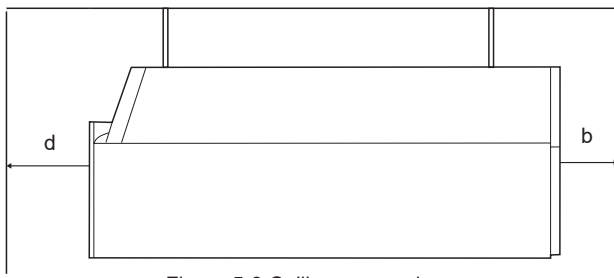


Figure 5-9 Ceiling exposed

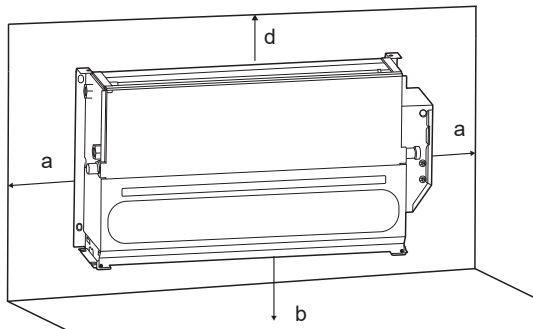


Figure 5-10 Vertical type exposed

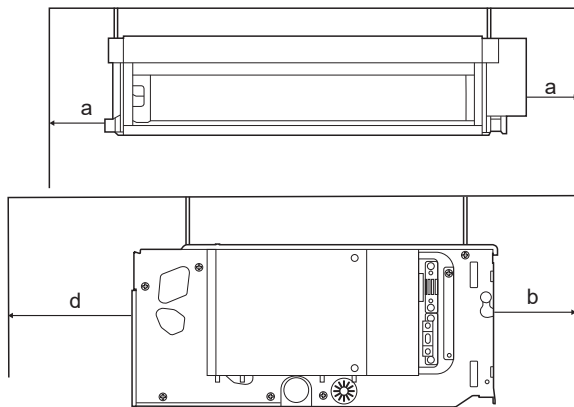


Figure 5-11 Ceiling concealed

NOTE

- Do not consider the unit as a surface that can be relied on during actual use. Reserve enough space during installation for ventilation purpose.
- Using water or spray near the unit can cause electric shock and malfunction.

5.3.3 Unit Installation

1) Check the space technically required for installation:

Space required for installation.

Space required for connecting the liquid lines and other valves.

Space required for connecting power supply.

Space required for connecting the unit to the external control panel .

Space required for setting flow route and air inlet (for specific models).

Space required for correct and sufficient air flow.

Space required for removing condensate water.

Space required for cleaning the filter.

Space required for cleaning internal assembly and maintenance.

2) Installation guide:

Remove the casing:

Remove screws ①*2 and ②*2 and then the casing.

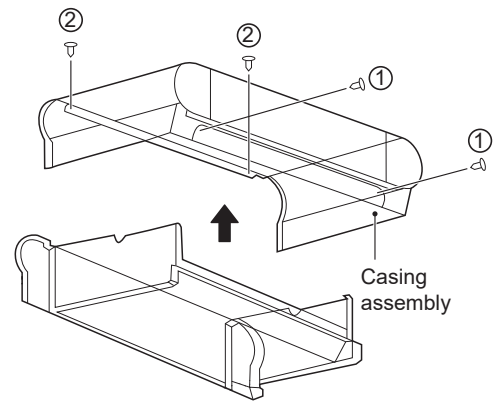


Figure 5-1

Mark the places for screws on the wall according to the unit mounting holes or dimensions specified in Figure 5-12. The drain pipe for condensate water must be smooth enough to allow unobstructed water discharge.

As shown in Figure 5-2, fasten four screws (①) into a proper masonry structure.

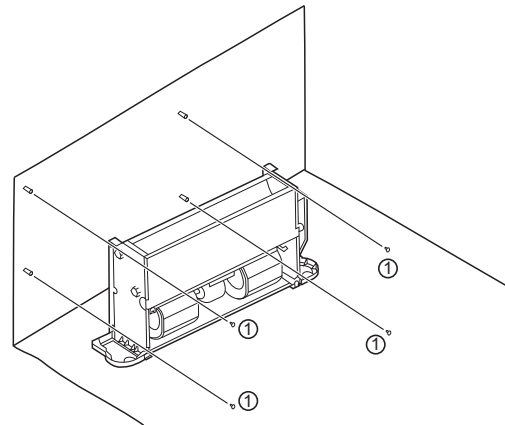


Figure 5-2 Diagram for fixing the unit body

The footings shown in Figure 5-3 are optional. You can purchase them separately and install them as follows:

1. Put the footings beside the unit to be installed.
2. Place the mounting holes on the unit base into the corresponding footing locating pin and install screws ①*2 and ②*2 to fix the footing according to Figure 5-3.

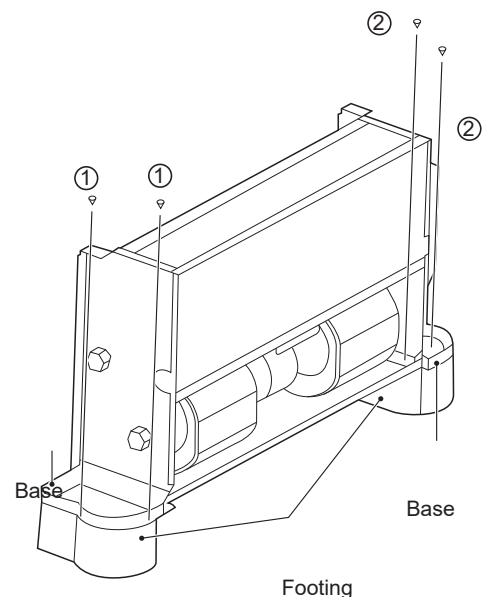


Figure 5-3

3) Install the unit following the steps below in case it is ceiling mounted.

To match the existing structure, set the screw pitch according to the unit dimensions.

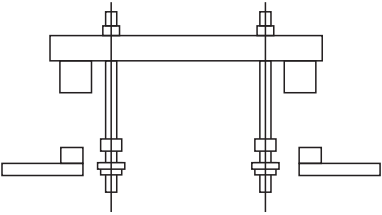
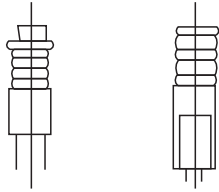
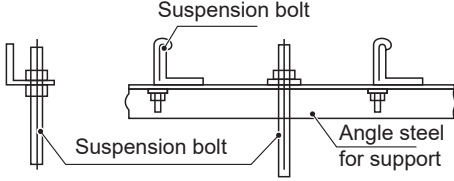
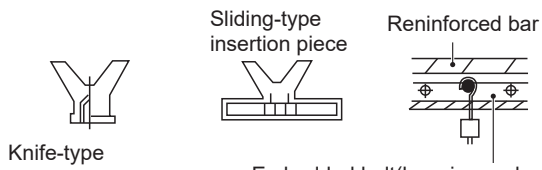
Wood structure	Original concrete slab structure
Structure the square rod on the beam to set the lifting bolts.	Use embedded bolts, and pull bolts.
	
Steel framework	Newly set concrete slab structure
Directly set and use an angle steel for support.	Set using embedded appliances, and embedded type of bolts.
	
	Embedded bolt(hanging and embedded bolt of piping)

Figure 5-4 Installation of lifting bolts

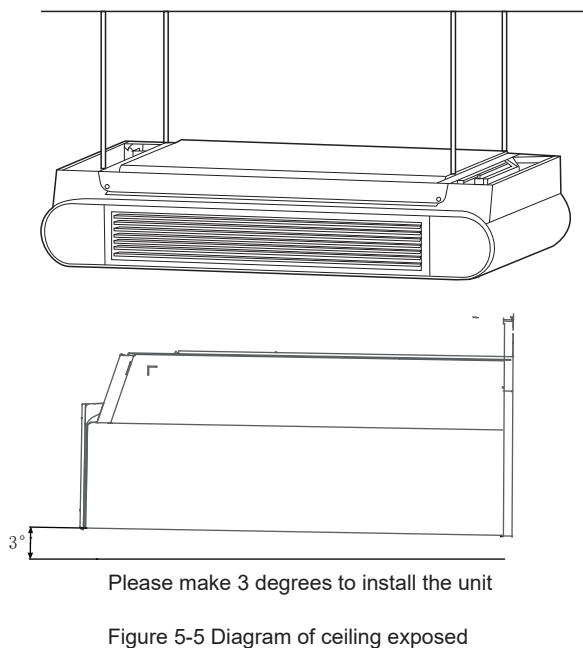


Figure 5-5 Diagram of ceiling exposed

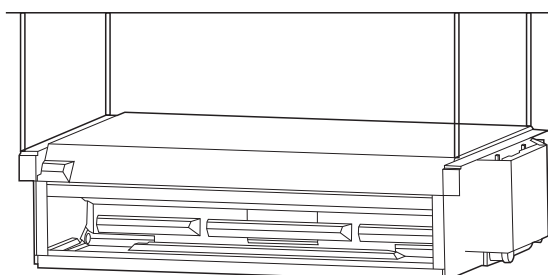


Figure 5-6 Diagram of ceiling concealed

5.4 Liquid Pipe Connections

1) Only professionals can operate the liquid pipes.

Drain pipe must be the different side with the electric control box.

Connect the unit to the water system using inlet and outlet connectors.

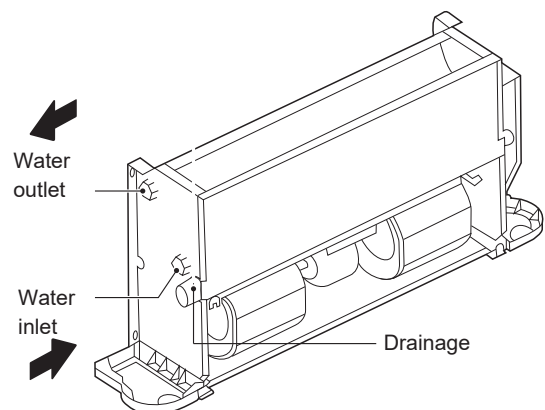


Figure 5-13

All water system coils are equipped with discharge and drain valves.

Use a screwdriver or wrench to open and close the valve.

2) When installation is complete,

- Remove air inside pipes.
- Wrap the connecting pipes and all the valve body with anti-condensation material (EPDM or PE) of no less than 10 mm thick or install auxiliary drainage equipment.
- Pour water into the drain pan and check it all the way until you can see water flows from the drain outlet. Alternatively, you may check the drain channel and remove impurities that may obstruct the flow.
- Install the condensate drain system.
- The condensate drain system must be properly lowered to ensure water discharge.

Follow the steps below to set the condensate drain system.

Make sure the drain connector is stress-free

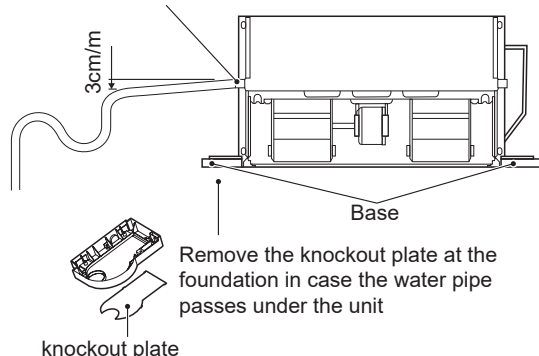


Figure 5-14

3) Set water storage elbow

The condensate drain system must be fitted with a suitable elbow to prevent odour penetration. Follow the steps below to set the elbow.

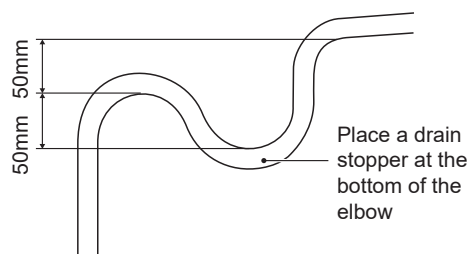


Figure 5-15

The customer has to purchase the three-way valve and its accessories (Operation and Installation Manual attached) separately from the manufacturer.

The customer may also need to purchase the auxiliary drain pan separately from the manufacturer if required.

See the steps below for installation of auxiliary drain pan:

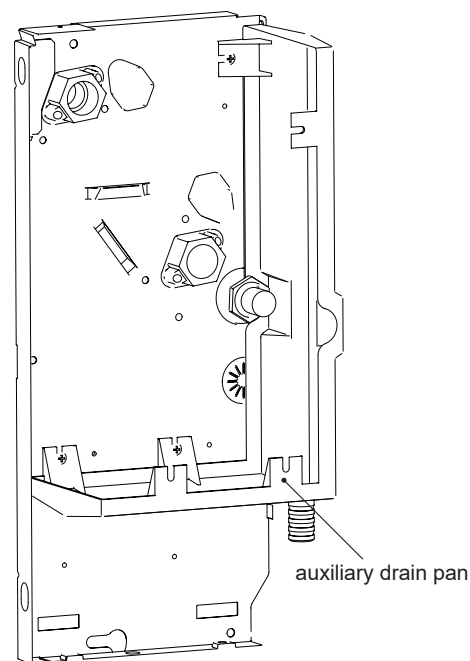


Figure 5-16

4) How to change the coil from left-hand connection to right-hand connection

Left-hand connection of the coil is adopted by default. You can rotate the coil and change to right-hand connection.

Before installation, you should change the direction of the coil on the ground.

Steps of changing the coil direction:

As shown in Figure 5-17, remove screws ①*2 and ②*2 and then the casing.

As shown in Figure 5-18, remove screws ①*7 to take the drain pan out.

Then, remove screws ②*4 to take the heat exchanger out.

Pull out the temperature sensor plug.

Rotate the coil in the direction as shown in Figure 5-18.

As shown in Figure 5-19, remove screws ①*2 to take the electric box out.

Fasten the screws on the coil.

As shown in Figure 5-19, block the diamond-shaped holes on the side plate (the plate without inlet and outlet pipes) with sponge.

Reverse the direction of drain pan plug.

Re-install the electric box to the side plate without inlet and outlet pipes.

Re-connect the wires.

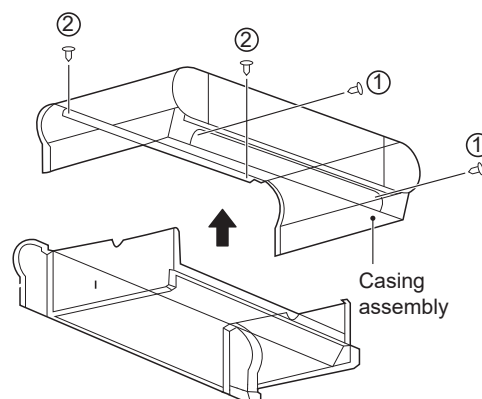


Figure 5-17 Removal of casing

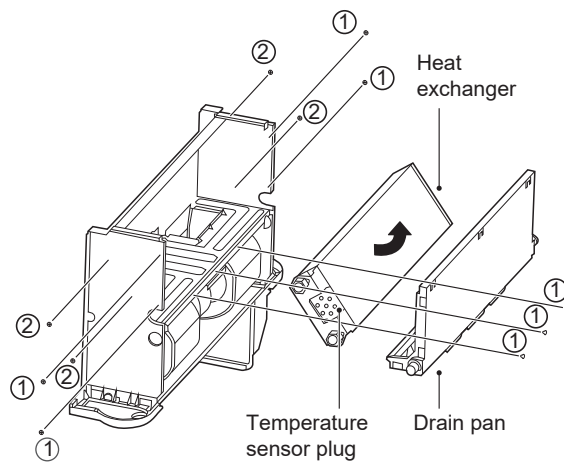


Figure 5-18

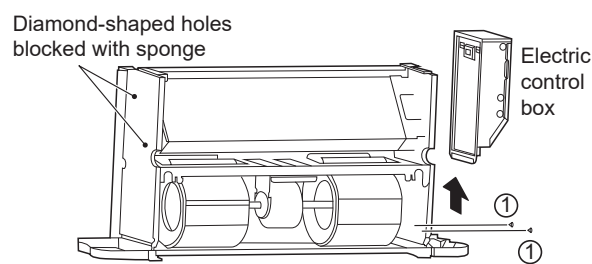


Figure 5-19 Removing the electric control box and blocking the diamond-shaped holes

5) Anti-freezing

The water in the unit may freeze when the unit is left unused in winter.

Drain the water system when appropriate if it is not used over a long period. Or you can simply add some antifreeze in water.

NOTE

- Mixing water with glycol will affect the unit performance.
- Please pay attention to the safety instructions attached to the glycol container.

5.5 Electrical Connection

CAUTION

- Make sure that the power supply falls with 220-240V~1ph 50Hz/60Hz and is able to provide enough wattage for the unit. The power supply system must comply with the current national safety regulations.
- The electrical connection must be completed by qualified professionals and must comply with local laws and regulations. The company is not responsible for personal or property damage resulting from any incorrect electrical connections.
- Provide dedicated and suitable leakage protection device for the unit, with a minimum distance of 3 mm among the wiring contacts. The unit must be grounded reliably.
- Make sure that the power cord has a large-enough cross section to withstand the maximum current required. Never use a damaged cable.
- Perform electrical connections according to the wiring nameplate (stick to the cover of the electronic box) of the unit.
- Secure the cable using clamps in the electric control box to ensure the safety of the power supply cable and the connection cable.
- Do not pull, step on or squeeze the cable. Do not use nails or staples to secure the power cord.
- You need to pass the cable through the knockout hole at the foundation.
- For this stationary appliance it is required to have for disconnection of mains supply and all-pole switch with a contact opening of at least 3mm in the fixed wiring.
- The grounding wire in the electrical control box needs to be longer than the current-carrying wire.
- For DC 4-Pipe series, the cooling water valve and heating water valve would open at the same time when the PCB receive the fan speed control signal from 0-10V wired controller. Please don't turn on the chiller and heat pump simultaneously, and we suggest to install another check valve to stop the water flow when it is necessary.

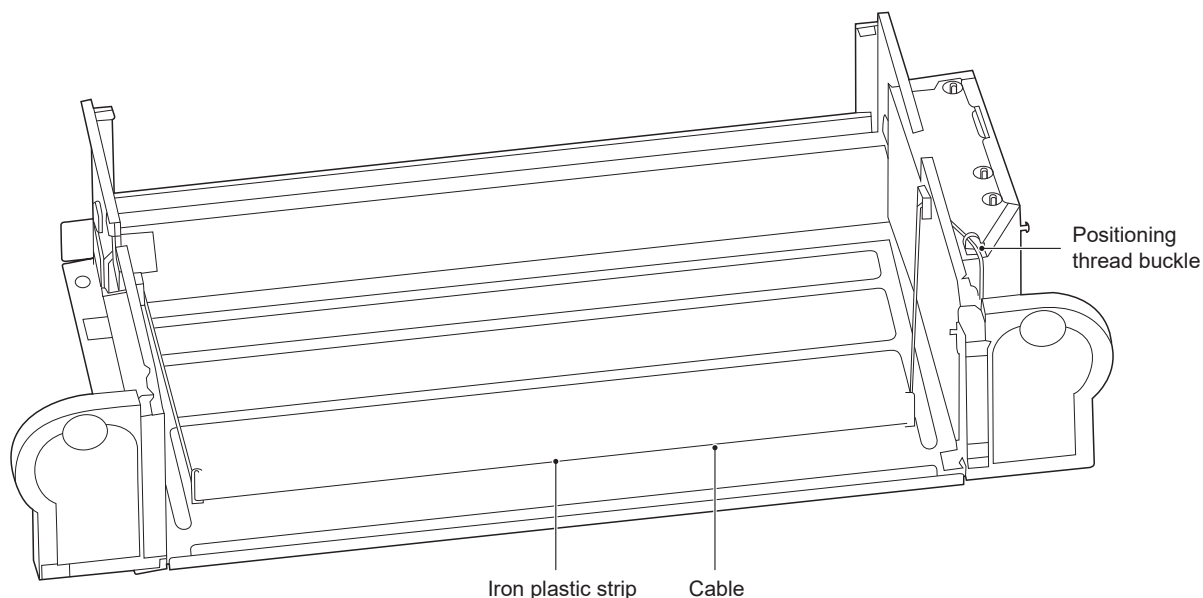


Figure 5-21 Cabling diagram (DC FAN)

Refer to Tables 5-2 & 5-3 for the specifications of the power cord and communication wire. A wiring capacity that is too small will cause the electrical wiring to become too hot, and lead to accidents when the unit burns and becomes damaged.

Select the wire diameters(minimum value) individually for each unit based on the table 5-3.

Maximum allowable voltage range variation between phases is 2 %.

Select circuit breaker that having a contact separation in all poles not less than 3 mm providing full disconnection, where MFA is used to select the current circuit breakers and residual current operation breakers:

Table 5-2

Model	ALL
Power supply	220-240 V~ 50/60 Hz
Communication wire between indoor unit and wired controller *	Shielded × AWG16-AWG18
Circuit breaker/Fuse(A)	15/15

Please refer to the corresponding wired controller manual for the wired controller wiring.

Table 5-3

Rated current of appliance (A)	Nominal cross-sectional area (mm ²)	
	Flexible cords	Cable for fixed wiring
≤3	0.5 and 0.75	1 and 2.5
> 3 and ≤ 6	0.75 and 1	1 and 2.5

5.6 Startup Guide

Machine commissioning or first start-up must be performed by a professional.

Before startup, make sure that the installation and electrical connections are made in accordance with this Manual, and that no unauthorized personnel is near the machine during operation.

1) Before starting the unit, make sure that:

The device is positioned correctly.

The water system's flow and piping are correct.

The water pipe is clean.

The air can flow normally.

The condensate water can flow normally to the drain outlet and the elbow.

The heat exchanger is clean.

The electrical connection is correct.

The connecting cable is secure.

The power supply meets requirements.

The motor works normally within the maximum allowable value.

6 SERVICE GUIDE

Ask a professional technician to repair the unit in case it goes wrong.

Make sure the power supply is disconnected during repair.

6.1 Troubleshooting

The warranty does not cover the damage caused by dismantling or cleaning of the internal components by unauthorized agents.

WARNING

When any unusual situations arises (burning odour, etc.), stop the unit immediately and turn off the power.

As a result of a certain situation, the unit has caused damage, an electric shock or a fire. Please contact the agent.

The system maintenance must be carried out by qualified maintenance personnel.

Error	Measures
If a safety device, such as a fuse, circuit breaker or aleakage circuit breaker is triggered frequently or the ON/OFF switch is not working properly.	Turn off the main power switch.
The operating switch is not functioning normally.	Turn off the power supply.
If a centralized controller is used, the unit number isdisplayed on the user interface, and the operating indicator is flickering, and an error code is shown on thescreen as well.	Notify the installation personnel and report the error code.

Except as noted above, if the above faults are not typical and the unit still fails, follow the steps below.

Error	Measures
If the system does not run at all.	Check whether there is a power failure. Wait for the power supply to be restored. If a power failure occurs when the unit is still running, the system will restart automatically once the power is restored.
The system is running but there is insufficient cooling orheating.	Check whether the air outlet is blocked by any obstacles. Remove the obstacles. Check whether the filter is blocked. Check the temperature setting. Check the fan speed settings on the user interface. Check whether the doors and windows are open. Close the doors and windows to shut out wind from the external environment. Check whether there are too many people in the room when the cooling mode is in operation. Check whether the heat source of the room is too high. Check whether there is direct sunlight into the room. Use curtains or blinds. Check whether the angle of air flow is appropriate.

1) Error code overview

If a centralized controller is used, error codes appear on the user interface. Contact the installation personnel and inform them of the error code, unit model and serial number (you can find the information on the nameplate of this unit).

NO.	Error	Name	Running Indicator	Fault Indicator	Buzzer action	Error Code
1	Error	E ² PROM communication error	Steady on	Flashes once every 3 seconds	Buzzes 2 times every 3 seconds	E7
2	Error	Room temperature sensor port abnormal	Steady on	Flashes 2 times every 3 seconds	Buzzes 2 times every 3 seconds	E2
3	Error	Coil sensor (T2C) port abnormal	Steady on	Flashes 3 times every 3 seconds	Buzzes 2 times every 3 seconds	E3
4	Error	Coil sensor (T2C) port abnormal	Steady on	Flashes 3 times every 3 seconds	Buzzes 2 times every 3 seconds	E4
5	Error	DC motor stall fault	Steady on	Flashes 4 times every 3 seconds	Buzzes 2 times every 3 seconds	E8
6	Protection	Water level exceeding warning line	Blinking	Flashes once every 3 seconds	Buzzes 2 times every 3 seconds	EE
7	Protection	Model protection not set (model DIP switch not listed in the model table)	Blinking	Flashes 2 times every 3 seconds	Buzzes 2 times every 3 seconds	PH
8	Protection	Water temperature protection	Blinking	Flashes 3 times every 3 seconds	Buzzes 2 times every 3 seconds	P1
9	Protection	Anti-freezing protection	Blinking	Flashes 4 times every 3 seconds	Buzzes 2 times every 3 seconds	P0
10	Protection	Remote shutdown	Blinking	Flashes 5 times every 3 seconds	Buzzes 2 times every 3 seconds	P2

Refer to Maintenance Manual for troubleshooting.

6.2 Non-Unit Related Faults

The following fault symptoms are not caused by the unit itself:

1) Fault symptom: Fan speed is not consistent with the setting

The fan doesn't respond to the controller. In cooling mode, when the pipe water temperature is outside the allowable range of room temperature, the fan speed will be maintained at a low level to avoid direct exposure to hot air. In heating mode, when the pipe water temperature reaches a certain low level, the fan speed will also be maintained at a low level to avoid direct exposure to cold air.

2) Fault symptom: Fan direction is not consistent with the setting

The fan direction is inconsistent with the direction indicated on the user interface. Swing is a customized function. If the customer customizes this function and the fan direction does not correspond to the set direction, this is because the unit is controlled

3) Fault symptom: white fog from a certain unit

This may result from high humidity during cooling mode. If the interior pollution of the fan coil unit is severe, the indoor temperature distribution may be uneven. At this time, you need to clean the inside of the unit. Ask the dealer for information on how to clean the unit. This operation must be carried out by qualified maintenance personnel.

4) Fault symptom: dust and dirt in the unit

This may happen after the unit is used again after being left idle for a long period. This is because there is dust inside the unit.

5) Fault symptom: odour from unit

This unit will absorb the odours of rooms, furniture, cigarettes and others, and then disperse the odours again. Odour might occur after small animals enter the unit.

7 PRODCUT DATA

Table 6-1

MODEL	MKH2(3)-V 150-R3	MKH2(3)-V 150-R4	MKH2(3)-V 250-R3	MKH2(3)-V 250-R4	MKH2(3)-V 350-R3	MKH2(3)-V 350-R4
Air flow volume(m³/h)	255	255	400	425	595	595
Cooling capacity(kW)(*)	1.50	1.95	2.35	2.85	3.50	3.90
Heating capacity(kW)(**)	1.57	2.05	2.60	2.95	3.80	4.00
Sound pressure(dB(A))(***)	34	39	29	32	38	40
Rated input(W)	15	20	17	20	26	29
Rated current(A)	0.18	0.21	0.20	0.22	0.26	0.28
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH2(3)-V 500-R3	MKH2(3)-V 500-R4	MKH2(3)-V 700-R3	MKH2(3)-V 700-R4	MKH2(3)-V 800-R3	MKH2(3)-V 800-R4
Air flow volume(m³/h)	790	800	1 190	1 190	1 360	1 300
Cooling capacity(kW)(*)	4.30	4.85	5.60	6.35	7.35	8.25
Heating capacity(kW)(**)	4.70	5.25	6.00	7.05	8.05	8.70
Sound pressure(dB(A))(***)	46	45	50	50	51	50
Rated input(W)	50	52	96	92	113	102
Rated current(A)	0.49	0.51	0.85	0.79	0.95	0.87
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH2(3)- 150-R3	MKH2(3)- 150-R4	MKH2(3)- 250-R3	MKH2(3)- 250-R4	MKH2(3)- 350-R3	MKH2(3)- 350-R4
Air flow volume(m³/h)	255	255	400	425	595	595
Cooling capacity(kW)(*)	1.65	2.25	2.65	3.05	3.85	4.20
Heating capacity(kW)(**)	1.85	2.35	3.05	3.15	4.10	4.30
Sound pressure(dB(A))(***)	35	42	34	34	39	40
Rated input(W)	35	40	47	47	51	51
Rated current(A)	0.15	0.17	0.20	0.20	0.22	0.22
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH2-500-R3	MKH2-500-R4	MKH2-700-R3	MKH2-700-R4	MKH2-800-R3	MKH2-800-R4
Air flow volume(m³/h)	790	800	1 190	1 150	1 300	1 300
Cooling capacity(kW)(*)	4.65	5.35	6.00	6.75	7.35	8.25
Heating capacity(kW)(**)	5.20	5.70	6.15	7.15	8.20	8.50
Sound pressure(dB(A))(***)	48	47	50	50	50	50
Rated input(W)	91	91	123	110	123	118
Rated current(A)	0.40	0.40	0.53	0.48	0.53	0.51
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH2(3)-V 150F-R4	MKH2(3)-V 250F-R4	MKH2(3)-V 350F-R4	MKH2(3)-V 500F-R4	MKH2(3)-V 700F-R4	MKH2(3)-V 800F-R4
Air flow volume(m³/h)	255	425	595	800	1 190	1 300
Cooling capacity(kW)(*)	1.70	2.70	3.80	4.60	6.05	7.65
Heating capacity(kW)(**)	1.40	2.30	2.88	3.35	4.60	07.50
Sound pressure(dB(A))(***)	39	32	40	45	50	51
Rated input(W)	20	20	29	52	92	102
Rated current(A)	0.21	0.22	0.28	0.51	0.79	0.87
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH2(3)- 150F-R4	MKH2(3)- 250F-R4	MKH2(3)- 350F-R4	MKH2(3)- 500F-R4	MKH2(3)- 700F-R4	MKH2(3)- 800F-R4
Air flow volume(m³/h)	255	425	595	800	1190	1300
Cooling capacity(kW)(*)	1.95	2.89	4.09	5.05	6.40	7.65
Heating capacity(kW)(**)	1.69	2.45	2.95	3.64	4.65	7.30
Sound pressure(dB(A))(***)	42	34	40	47	50	50
Rated input(W)	40	47	51	91	110	118
Rated current(A)	0.17	0.20	0.22	0.4	0.48	0.51
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL:MKH2-V150-R3/MKH2-150-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.14/1.25	kW
Cooling capacity(latent)	<i>Prated</i>	0.36/0.4	kW
Heating capacity	<i>Prated</i>	1.57/1.85	kW
Total electric power input	<i>Pelec</i>	15/35	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	47/47	dB
contact details			
MODEL:MKH2-V150-R4/MKH2-150-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.42/1.65	kW
Cooling capacity(latent)	<i>Prated</i>	0.53/0.60	kW
Heating capacity	<i>Prated</i>	1.95/2.35	kW
Total electric power input	<i>Pelec</i>	20/40	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/53	dB
contact details			

MODEL:MKH2(3)-V250-R3/MKH2-(3)250-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.79/2.05	kW
Cooling capacity(latent)	<i>Prated</i>	0.56/0.60	kW
Heating capacity	<i>Prated</i>	2.60/3.05	kW
Total electric power input	<i>Pelec</i>	17/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	43/46	dB
contact details			
MODEL:MKH2(3)-V250-R4/MKH2(3)-250-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.06/2.23	kW
Cooling capacity(latent)	<i>Prated</i>	0.79/0.82	kW
Heating capacity	<i>Prated</i>	2.95/3.15	kW
Total electric power input	<i>Pelec</i>	20/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	46/47	dB
contact details			

MODEL:MKH2-V350-R3/MKH2-350-R3			
Information to identify the model(s)to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.65/2.91	kW
Cooling capacity(latent)	<i>Prated</i>	0.85/0.94	kW
Heating capacity	<i>Prated</i>	3.50/3.70	kW
Total electric power input	<i>Pelec</i>	26/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			
MODEL:MKH2-V350-R4/MKH2-350-R4			
Information to identify the model(s)to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.90/3.05	kW
Cooling capacity(latent)	<i>Prated</i>	1.00/1.15	kW
Heating capacity	<i>Prated</i>	4.00/4.10	kW
Total electric power input	<i>Pelec</i>	29/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			

MODEL:MKH2(3)-V500-R3/MKH2(3)-500-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.25/3.58	kW
Cooling capacity(latent)	<i>Prated</i>	1.05/1.07	kW
Heating capacity	<i>Prated</i>	4.30/4.35	kW
Total electric power input	<i>Pelec</i>	50/91	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/59	dB
contact details			
MODEL:MKH2(3)-V500-R4/MKH2(3)-500-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.63/3.96	kW
Cooling capacity(latent)	<i>Prated</i>	1.22/1.39	kW
Heating capacity	<i>Prated</i>	5.25/5.70	kW
Total electric power input	<i>Pelec</i>	52/91	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/59	dB
contact details			

MODEL:MKH2(3)-V700-R3/MKH2(3)-700-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.62/4.83	kW
Cooling capacity(latent)	<i>Prated</i>	0.98/1.17	kW
Heating capacity	<i>Prated</i>	6.00/6.15	kW
Total electric power input	<i>Pelec</i>	96/123	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	64/64	dB
contact details			
MODEL:MKH2(3)-V700-R4/MKH2(3)-700-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.98/5.09	kW
Cooling capacity(latent)	<i>Prated</i>	1.37/1.66	kW
Heating capacity	<i>Prated</i>	7.05/7.15	kW
Total electric power input	<i>Pelec</i>	92/110	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	62/62	dB
contact details			

MODEL:MKH2(3)-V800-R3/MKH2(3)-800-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	5.87/5.63	kW
Cooling capacity(latent)	<i>Prated</i>	1.48/1.72	kW
Heating capacity	<i>Prated</i>	8.05/8.20	kW
Total electric power input	<i>Pelec</i>	113/123	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	63/63	dB
contact details			
MODEL:MKH2(3)-V800-R4/MKH2(3)-800-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	6.12/6.08	kW
Cooling capacity(latent)	<i>Prated</i>	2.13/2.17	kW
Heating capacity	<i>Prated</i>	8.70/8.50	kW
Total electric power input	<i>Pelec</i>	102/118	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	63/63	dB
contact details			

MODEL:MKH2(3)-V150F-R4/MKH2(3)-150F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.3/1.5	kW
Cooling capacity(latent)	<i>Prated</i>	0.4/0.45	kW
Heating capacity	<i>Prated</i>	1.4/1.69	kW
Total electric power input	<i>Pelec</i>	20/40	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/53	dB
contact details			
MODEL:MKH2(3)-V250F-R4/MKH2(3)-250F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.9/2.05	kW
Cooling capacity(latent)	<i>Prated</i>	0.8/0.84	kW
Heating capacity	<i>Prated</i>	2.3/2.45	kW
Total electric power input	<i>Pelec</i>	20/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	46/47	dB
contact details			

MODEL:MKH2(3)-V350F-R4/MKH2(3)-350F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.8/2.94	kW
Cooling capacity(latent)	<i>Prated</i>	1.0/1.15	kW
Heating capacity	<i>Prated</i>	2.88/2.95	kW
Total electric power input	<i>Pelec</i>	29/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			
MODEL:MKH2(3)-V500F-R4/MKH2(3)-500F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.5/3.8	kW
Cooling capacity(latent)	<i>Prated</i>	1.1/1.25	kW
Heating capacity	<i>Prated</i>	3.35/3.64	kW
Total electric power input	<i>Pelec</i>	52/91	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/59	dB
contact details			

MODEL:MKH2(3)-V700F-R4/MKH2(3)-700F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.80/4.90	kW
Cooling capacity(latent)	<i>Prated</i>	1.25/1.50	kW
Heating capacity	<i>Prated</i>	4.6/4.65	kW
Total electric power input	<i>Pelec</i>	92/110	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	62/62	dB
contact details			
MODEL:MKH2(3)-V800F-R4/MKH2(3)-800F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	5.9/5.85	kW
Cooling capacity(latent)	<i>Prated</i>	1.75/1.8	kW
Heating capacity	<i>Prated</i>	7.5/7.65	kW
Total electric power input	<i>Pelec</i>	102/118	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	63/63	dB
contact details			

MODEL	MKH1-V 150-R3	MKH1-V 150-R4	MKH1-V 250-R3	MKH1-V 250-R4	MKH1-V 350-R3	MKH1-V 350-R4
Air flow volume(m ³ /h)	245	245	380	380	580	580
Cooling capacity(kW)(*)	1.44	1.87	2.23	2.55	3.41	3.80
Heating capacity(kW)(**)	1.50	1.97	2.47	2.63	3.70	3.90
Sound pressure(dB(A))(***)	34	39	30	33	39	39
Rated input(W)	19	20	20	21	27	30
Rated current(A)	0.20	0.21	0.21	0.22	0.26	0.28
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH1-V 500-R3	MKH1-V 500-R4	MKH1-V 700-R3	MKH1-V 700-R4	MKH1-V 800-R3	MKH1-V 800-R4
Air flow volume(m ³ /h)	780	780	1 050	1 050	1 150	1 150
Cooling capacity(kW)(*)	4.25	4.73	4.94	5.60	6.21	7.30
Heating capacity(kW)(**)	4.64	5.12	5.29	6.22	6.80	7.70
Sound pressure(dB(A))(***)	46	46	52	52	53	53
Rated input(W)	50	52	98	99	105	105
Rated current(A)	0.49	0.51	0.85	0.85	0.90	0.90
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH1-150-R3	MKH1-150-R4	MKH1-250-R3	MKH1-250-R4	MKH1-350-R3	MKH1-350-R4
Air flow volume(m³/h)	245	245	380	380	580	580
Cooling capacity(kW)(*)	1.58	2.16	2.51	2.72	3.75	4.09
Heating capacity(kW)(**)	1.77	2.26	2.80	2.81	3.99	4.19
Sound pressure(dB(A))(***)	34	39	34	35	39	39
Rated input(W)	35	40	47	47	51	51
Rated current(A)	0.15	0.17	0.20	0.20	0.22	0.22
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH1-500-R3	MKH1-500-R4	MKH1-700-R3	MKH1-700-R4	MKH1-800-R3	MKH1-800-R4
Air flow volume(m³/h)	780	780	1 050	1 050	1 100	1 050
Cooling capacity(kW)(*)	4.59	5.21	5.29	6.16	6.22	6.66
Heating capacity(kW)(**)	5.13	5.33	5.42	6.53	6.94	6.86
Sound pressure(dB(A))(***)	48	48	52	52	53	53
Rated input(W)	91	92	124	117	118	110
Rated current(A)	0.40	0.40	0.53	0.51	0.51	0.48
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH1-V150F-R4	MKH1-V250F-R4	MKH1-V350F-R4	MKH1-V500F-R4	MKH1-V700F-R4	MKH1-V800F-R4
Air flow volume(m³/h)	245	380	580	780	1 050	1 150
Cooling capacity(kW)(*)	1.63	2.41	3.70	4.49	5.34	6.77
Heating capacity(kW)(**)	1.35	2.06	2.81	3.27	4.06	6.63
Sound pressure(dB(A))(***)	39	33	39	46	52	53
Rated input(W)	20	21	30	50	99	105
Rated current(A)	0.21	0.22	0.28	0.51	0.85	0.90
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL	MKH1-150F-R4	MKH1-250F-R4	MKH1-350F-R4	MKH1-500F-R4	MKH1-700F-R4	MKH1-800F-R4
Air flow volume(m³/h)	245	380	580	780	1050	1 050
Cooling capacity(kW)(*)	1.87	2.58	3.99	4.92	5.84	6.18
Heating capacity(kW)(**)	1.62	2.19	2.88	3.55	4.25	5.90
Sound pressure(dB(A))(***)	39	35	39	48	52	52
Rated input(W)	40	47	51	92	117	110
Rated current(A)	0.17	0.20	0.22	0.40	0.51	0.48
Standard coil connections	G3/4					
OD of condensation drain pipe (mm)	18.5					
Power supply	220-240 V~ 50 Hz					

MODEL:MKH1-V150-R3/MKH1-150-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.09/1.20	kW
Cooling capacity(latent)	<i>Prated</i>	0.35/0.38	kW
Heating capacity	<i>Prated</i>	1.5/1.7	kW
Total electric power input	<i>Pelec</i>	19/35	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	47/47	dB
contact details			
MODEL:MKH1-V150-R4/MKH1-150-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.36/1.58	kW
Cooling capacity(latent)	<i>Prated</i>	0.51/0.58	kW
Heating capacity	<i>Prated</i>	1.97/2.26	kW
Total electric power input	<i>Pelec</i>	20/40	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			

MODEL:MKH1-V250-R3/MKH1-250-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.70/1.94	kW
Cooling capacity(latent)	<i>Prated</i>	0.53/0.57	kW
Heating capacity	<i>Prated</i>	2.47/2.80	kW
Total electric power input	<i>Pelec</i>	20/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	43/47	dB
contact details			
MODEL:MKH1-V250-R4/MKH1-250-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.84/2.00	kW
Cooling capacity(latent)	<i>Prated</i>	0.71/0.72	kW
Heating capacity	<i>Prated</i>	2.63/2.81	kW
Total electric power input	<i>Pelec</i>	21/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	46/48	dB
contact details			

MODEL:MKH1-V350-R3/MKH1-350-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.58/2.83	kW
Cooling capacity(latent)	<i>Prated</i>	0.83/0.92	kW
Heating capacity	<i>Prated</i>	3.7/3.99	kW
Total electric power input	<i>Pelec</i>	27/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			
MODEL:MKH1-V350-R4/MKH1-350-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.83/2.97	kW
Cooling capacity(latent)	<i>Prated</i>	0.97/1.12	kW
Heating capacity	<i>Prated</i>	3.90/4.19	kW
Total electric power input	<i>Pelec</i>	30/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			

MODEL:MKH1-V500-R3/MKH1-500-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.21/3.53	kW
Cooling capacity(latent)	<i>Prated</i>	1.04/1.06	kW
Heating capacity	<i>Prated</i>	4.64/5.13	kW
Total electric power input	<i>Pelec</i>	50/91	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/61	dB
contact details			
MODEL:MKH1-V500-R4/MKH1-500-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.54/3.86	kW
Cooling capacity(latent)	<i>Prated</i>	1.19/1.35	kW
Heating capacity	<i>Prated</i>	5.12/5.33	kW
Total electric power input	<i>Pelec</i>	52/92	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/61	dB
contact details			

MODEL:MKH1-V700-R3/MKH1-700-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.08/4.26	kW
Cooling capacity(latent)	<i>Prated</i>	0.86/1.03	kW
Heating capacity	<i>Prated</i>	5.29/5.42	kW
Total electric power input	<i>Pelec</i>	98/124	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	65/65	dB
contact details			
MODEL:MKH1-V700-R4/MKH1-700-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.39/4.65	kW
Cooling capacity(latent)	<i>Prated</i>	1.21/1.51	kW
Heating capacity	<i>Prated</i>	6.22/6.53	kW
Total electric power input	<i>Pelec</i>	99/117	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	65/65	dB
contact details			

MODEL:MKH1-V800-R3/MKH1-800-R3			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.75/4.76	kW
Cooling capacity(latent)	<i>Prated</i>	1.46/1.46	kW
Heating capacity	<i>Prated</i>	6.80/6.94	kW
Total electric power input	<i>Pelec</i>	105/118	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	66/66	dB
contact details			
MODEL:MKH1-V800-R4/MKH1-800-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	5.41/4.91	kW
Cooling capacity(latent)	<i>Prated</i>	1.89/1.75	kW
Heating capacity	<i>Prated</i>	7.7/6.86	kW
Total electric power input	<i>Pelec</i>	105/110	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	65/65	dB
contact details			
MODEL:MKH1-V150F-R4/MKH1-150F-R4			
Information to identify the model(s)to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.25/1.44	kW
Cooling capacity(latent)	<i>Prated</i>	0.38/0.43	kW
Heating capacity	<i>Prated</i>	1.35/1.62	kW
Total electric power input	<i>Pelec</i>	20/40	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			
MODEL:MKH1-V250F-R4/MKH1-250F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	1.70/1.83	kW
Cooling capacity(latent)	<i>Prated</i>	0.71/0.75	kW
Heating capacity	<i>Prated</i>	2.06/2.19	kW
Total electric power input	<i>Pelec</i>	21/47	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	46/48	dB
contact details			
MODEL:MKH1-V350F-R4/MKH1-350F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	2.73/2.87	kW
Cooling capacity(latent)	<i>Prated</i>	0.97/1.12	kW
Heating capacity	<i>Prated</i>	2.81/2.88	kW
Total electric power input	<i>Pelec</i>	30/51	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	52/52	dB
contact details			
MODEL:MKH1-V500F-R4/MKH1-500F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	3.41/3.71	kW
Cooling capacity(latent)	<i>Prated</i>	1.08/1.21	kW
Heating capacity	<i>Prated</i>	3.27/3.55	kW
Total electric power input	<i>Pelec</i>	52/92	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	59/61	dB
contact details			

MODEL:MKH1-V700F-R4/MKH1-700F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	4.24/4.47	kW
Cooling capacity(latent)	<i>Prated</i>	1.10/1.37	kW
Heating capacity	<i>Prated</i>	4.06/4.25	kW
Total electric power input	<i>Pelec</i>	99/117	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	65/65	dB
contact details			
MODEL:MKH1-V800F-R4/MKH1-800F-R4			
Information to identify the model(s) to which the information relation:			
Item	Symbol	Value	Unit
Cooling capacity(sensible)	<i>Prated</i>	5.22/4.73	kW
Cooling capacity(latent)	<i>Prated</i>	1.54/1.45	kW
Heating capacity	<i>Prated</i>	6.63/5.90	kW
Total electric power input	<i>Pelec</i>	105/110	W
Sound power level(per speed setting, if applicable)	<i>LWA</i>	65/65	dB
contact details			

(*) Conditions: ambient temperature 27 °C DB/19 °C WB; water inlet temperature 7 °C; water outlet temperature 12 °C; high speed.

(**) Conditions: ambient temperature 20 °C DB/15 °C WB; water inlet temperature (2 pipe:45 °C,4 pipe:65 °C); water outlet temperature (2 pipe:40 °C,4 pipe:55 °C); high speed.

(***) The sound pressure level in dB(A) indicates the value measured at 1 m away from an open air outlet.Sound pressure level is below 70 dB.

(****) The parameters of the H1 based on the case that the back return air is completely blocked.

16126200A11577 V1.5

**GD Midea Heating &Ventilating
Equipment Co.,Ltd.
Penglai Industry Road,Beijiao, Shunde,
Foshan, Guangdong,528311,P.R.China**

版本更改说明（此页不用做菲林）

印刷技术要求

材质	双胶纸80克
规格	210*297
颜色	黑白印刷
其他	/

设计更改记录表

版本升级	更改日期	更改内容	更改页面 (印刷页码)	更改人
V1.0升级到V1.1	版本由I升级为J，更改说明：(肖淋匀2020.9.19)	P06页更改标注、P10更改倾斜安装角度并增加文字说明P13、14、15去掉接线铭牌、增加整机与线控器对应表，更改注意事项，删除封面适用型号内容		
V1.1-V1.2	2022.3.10	材质改为双胶纸80g		农钰莹
V1.2-V1.3	2023.9.11	随基准升级：版本由K升级为L，更改说明： P11页表5.1增加一列尺寸标注，图5-12尺寸标注位置调整		蓝翠怡
V1.3-V1.4	2023.12.1	随基准升级 增加一列尺寸标注，图5-12尺寸标注位置调整		毛燕秋
V1.4-V1.5	2024.5.20	随基准升级		农钰莹