



**Brand: KRONER**

Model: **BR-021 80\*80 (white)**

Cod Romstal: 79CD3586

CABINA DUS ROUND2, PROFIL ALB, GEAM TRANSPARENT 6mm,  
L.80xL.80xH.190cm

Model: **BR-021 90\*90 (white)**


Cod Romstal: 79CD3526












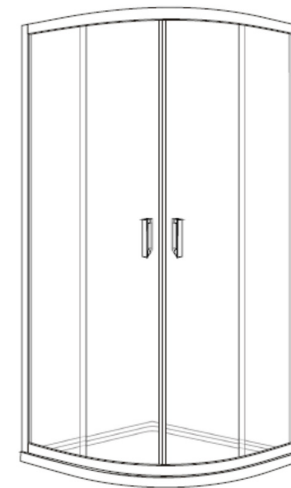


CABINA DUS ROUND2, PROFIL ALB, GEAM TRANSPARENT 6mm,  
L.90xL.90xH.190cm

Model: **BR-021 90\*90 (chrome)**

Cod Romstal: 79CD3528


CABINA DUS ROUND2, PROFIL CROM, GEAM TRANSPARENT 6MM,  
L.90XL.90XH.190CM




<b>A</b>  ST4X35 X8	<b>B</b>  ST4X25 X8	<b>C</b>  ST4X12 X8	<b>D</b>  ST4X10 X4
<b>E</b>  X8	<b>F</b>  Rola superioara X4	<b>G</b>  Rola inferioara X4	<b>H</b>  X2
<b>I</b>  ST4X35 X4	<b>J</b>  Garnitura X4	<b>K</b>  Garnitura magnetica X2	<b>L</b>  Profil fixare pe perete X2
<b>M</b>  Profile orizontale X2		<b>O</b>  3mm X1	

Cadita de dus nu este inclusa.  
 The shower tray is not included.


In cazul montajului pe cadita de dus, se va realiza in prealabil montajul acesteia si apoi se poate incepe instalarea cabine de dus.  
 In case that will be installed on a shower tray, first will be installed the shower tray and after that will be installed the shower enclosure.

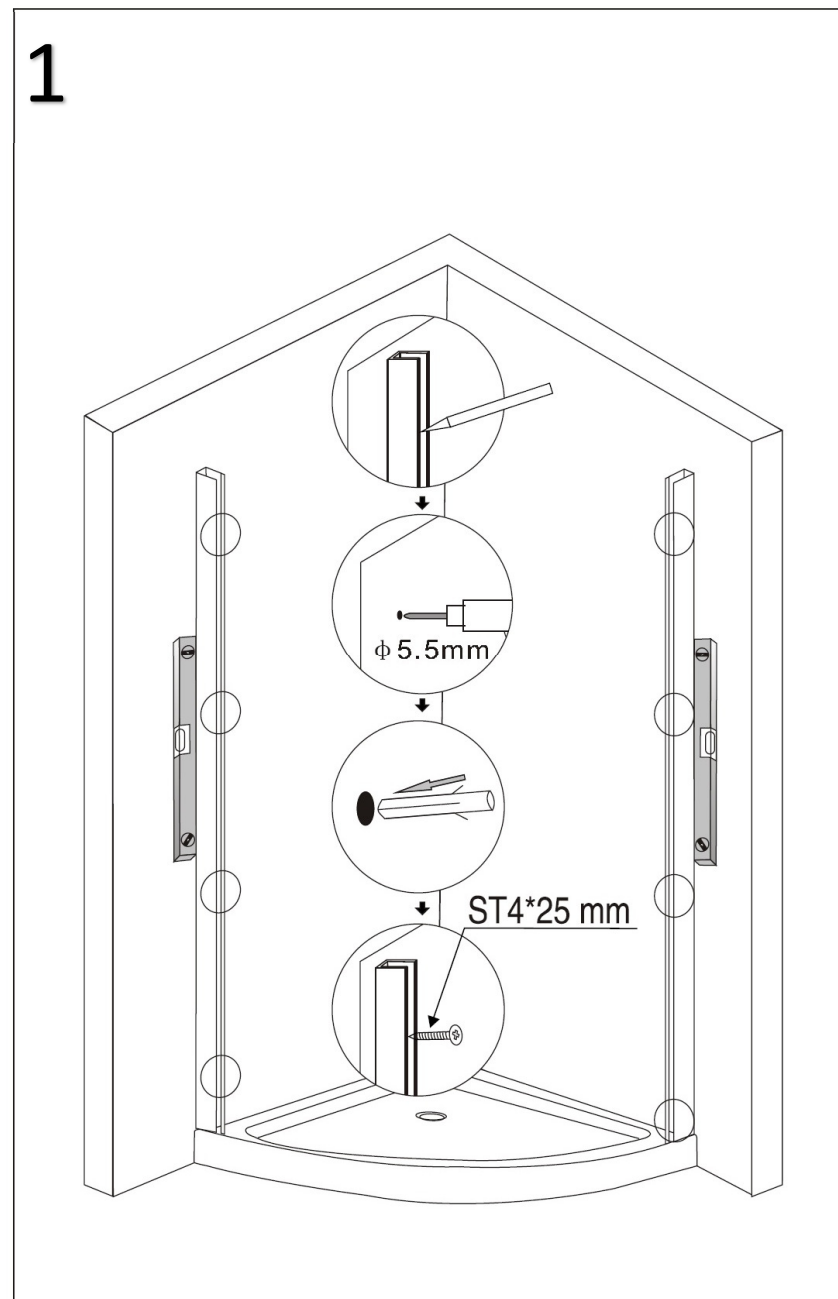


2

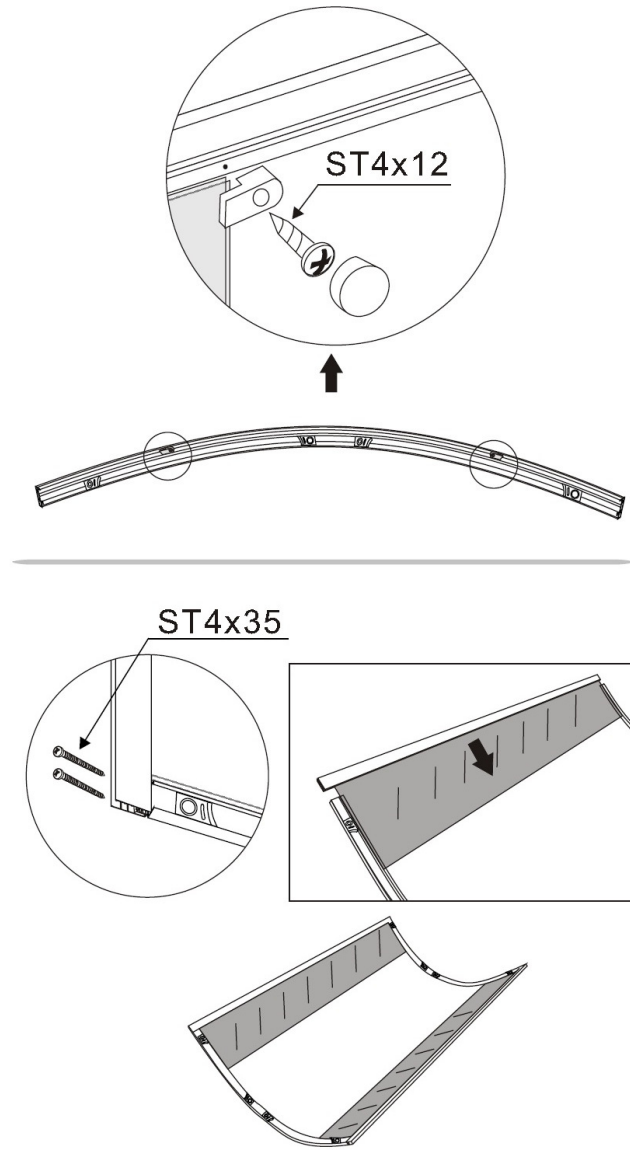


3

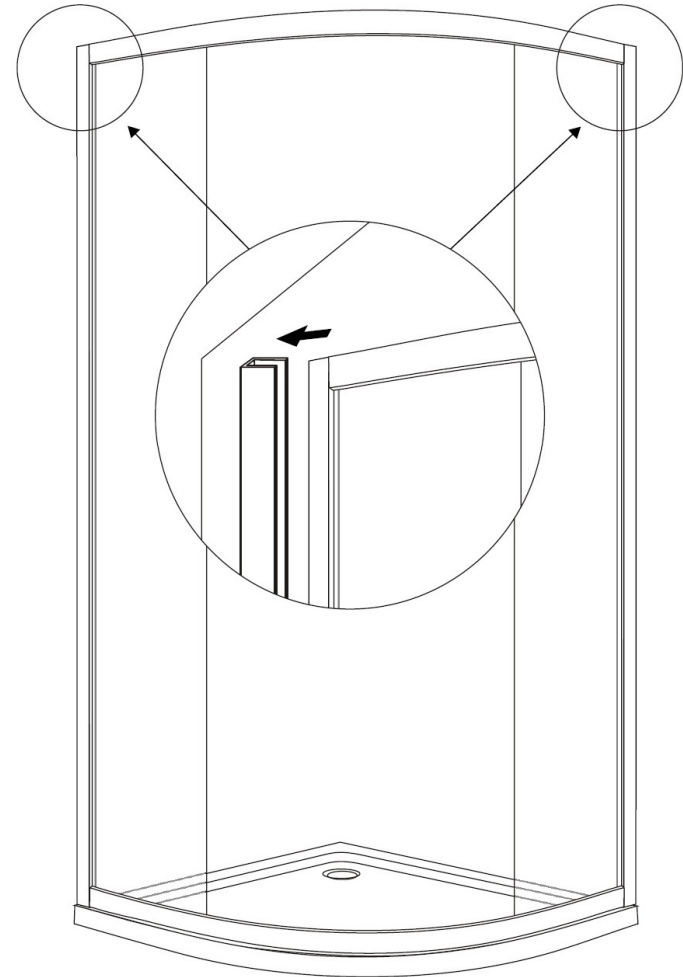


4

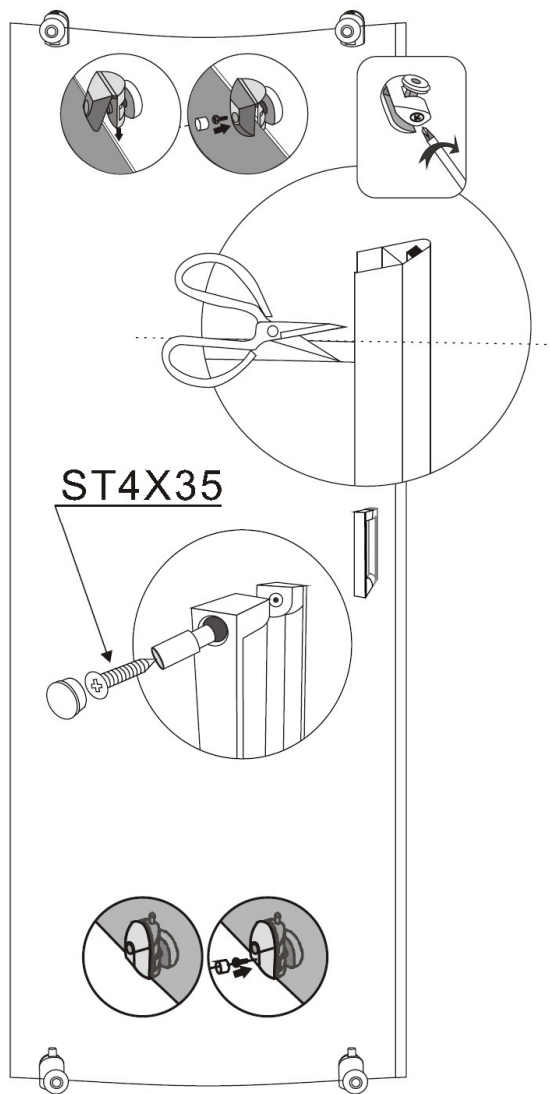


5

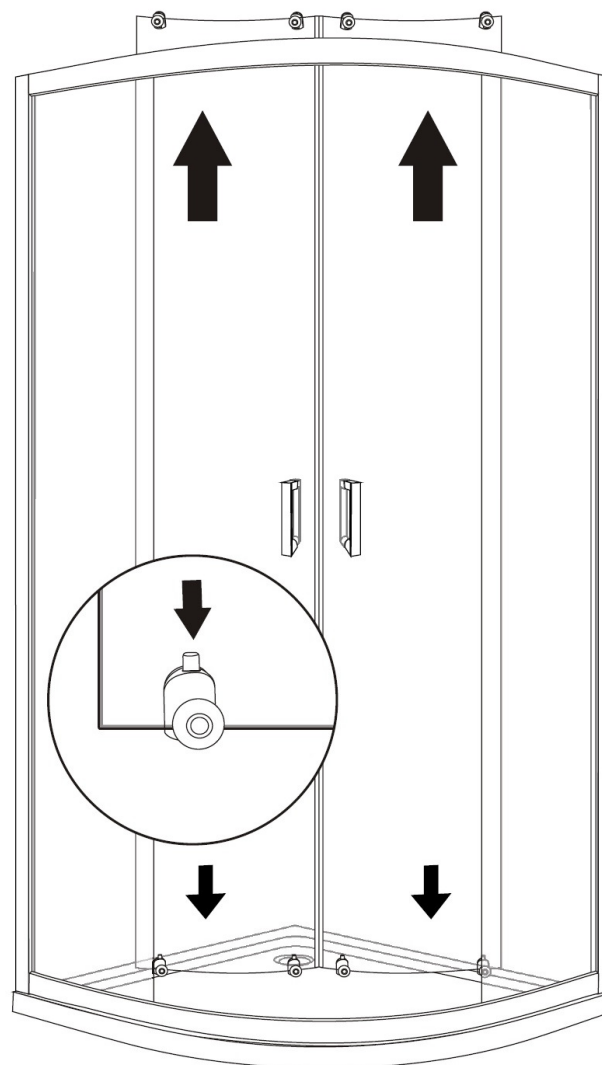

6

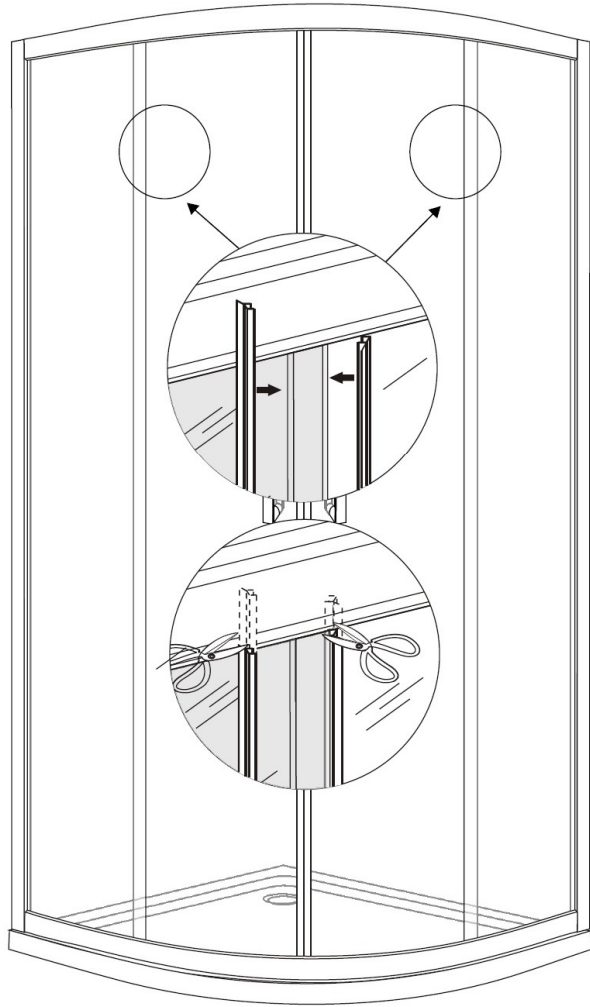

7

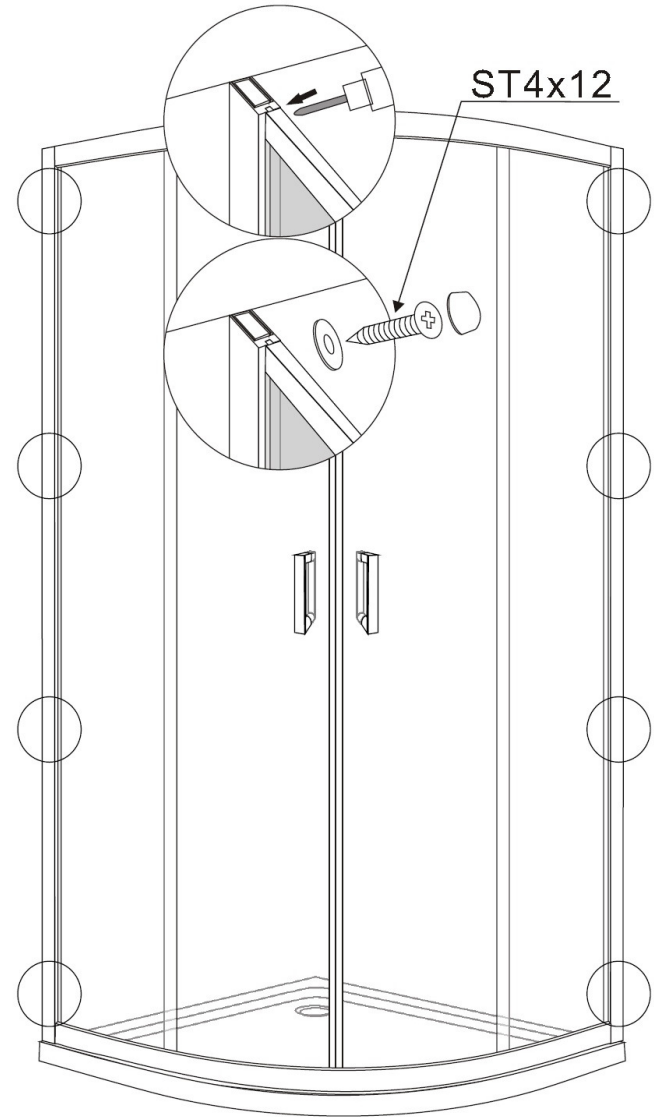

8

