



Brand: KRONER

Model: **BR-020 80*80 (white)**

Cod Romstal: 79CD3587

CABINA DUS SQUARE2, PROFIL ALB, GEAM TRANSPARENT 6mm,
L.80xL.80xH.190cm

Model: **BR-020 90*90 (white)**


Cod Romstal: 79CD3527

















CABINA DUS SQUARE2, PROFIL ALB, GEAM TRANSPARENT 6mm,
L.90xL.90xH.190cm

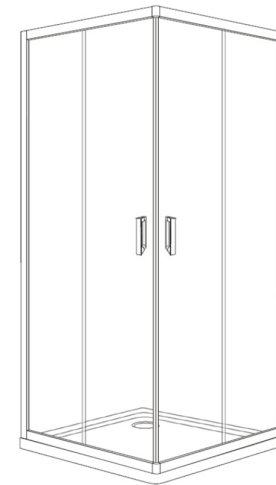Model: **BR-020 90*90 (chrome)**

Cod Romstal: 79CD3529


CABINA DUS SQUARE2, PROFIL CROM, GEAM TRANSPARENT 6MM,
L.90XL.90XH.190CM




A  ST4X35 X8	B  ST4X25 X8	C  ST4X12 X8	D  ST4X10 X4
E  ST4X14 X4	F  X8	G  Role superioare X4	H  Role inferioare X4
I  X2	J  Garnitura X4	K  Garnitura magnetica X2	L  Profil fixare pe perete X2
M  Profile orizontale X4	N  X2	O  ST4X35 X4	P  3mm X1

Cadita de dus nu este inclusa.
The shower tray is not included.


In cazul montajului pe cadita de dus, se va realiza in prealabil montajul acesteia si apoi se poate incepe instalarea cabine de dus.
In case that will be installed on a shower tray, first will be installed the shower tray and after that will be installed the shower enclosure.

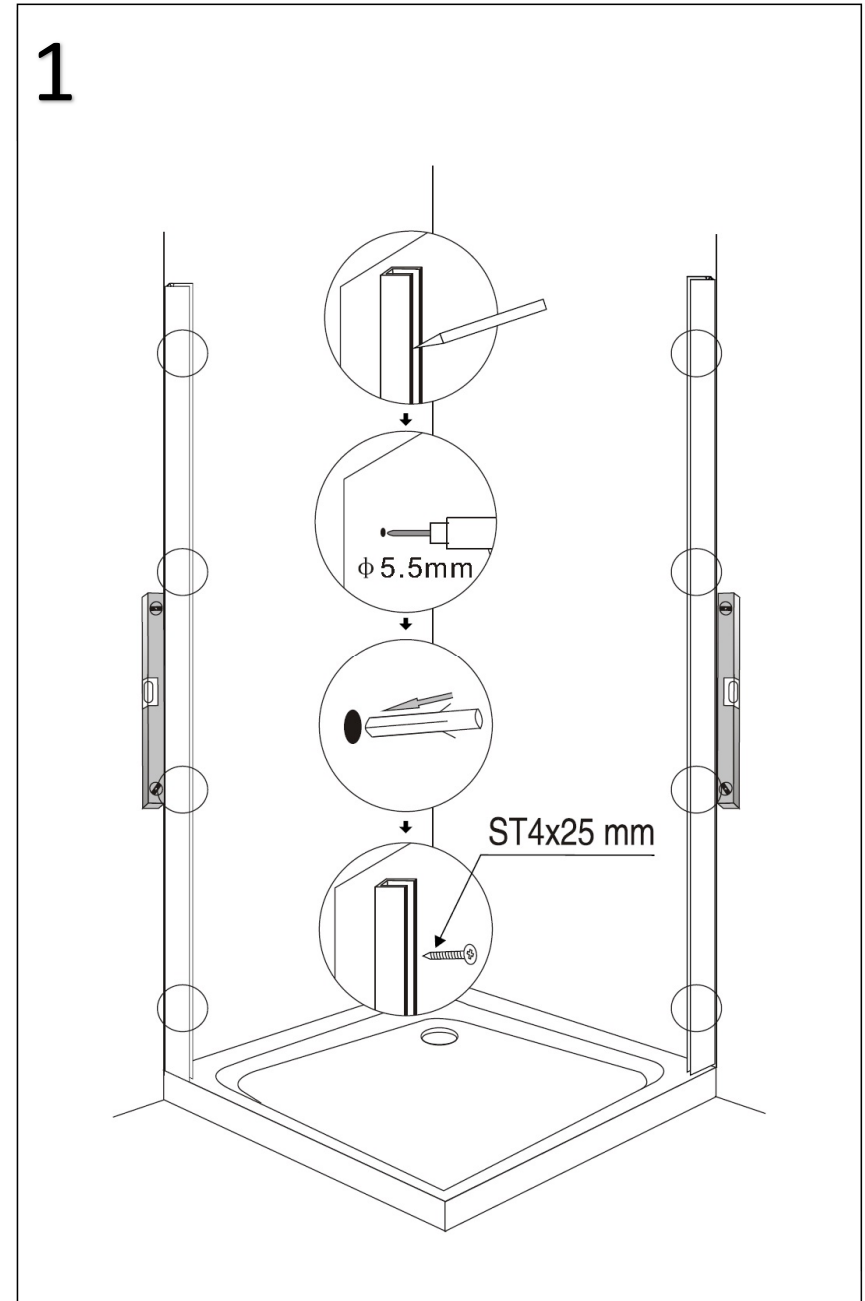


2

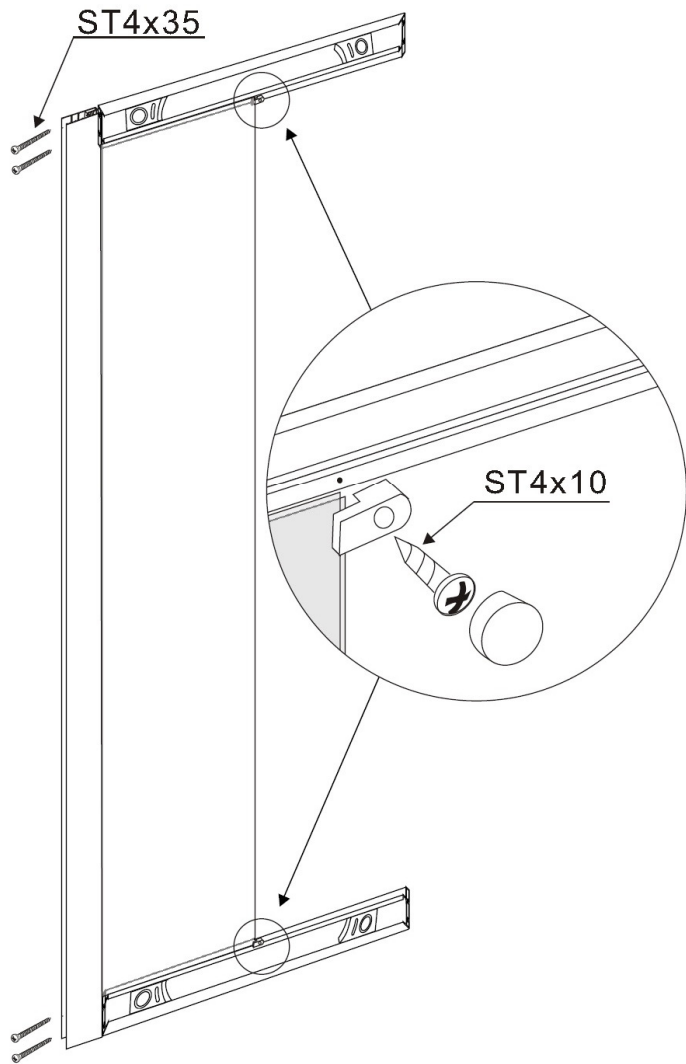


3

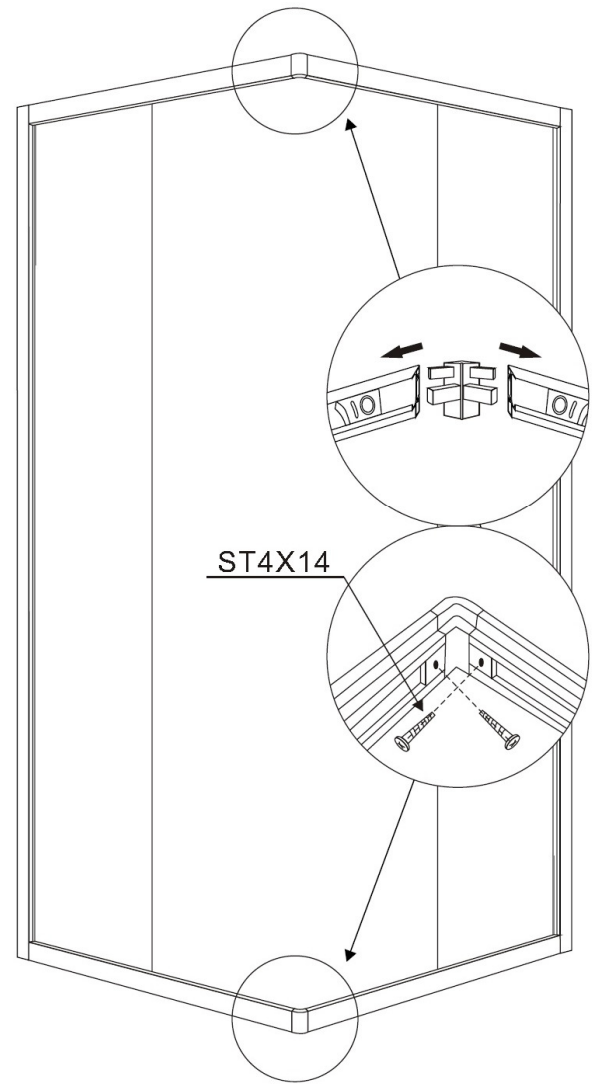


4

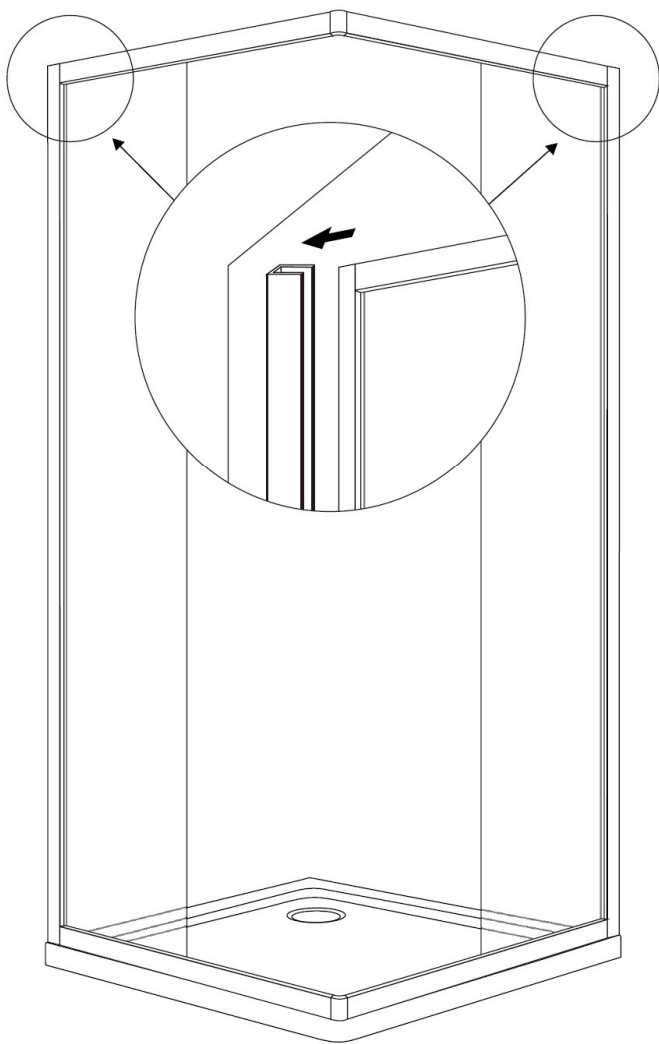


5

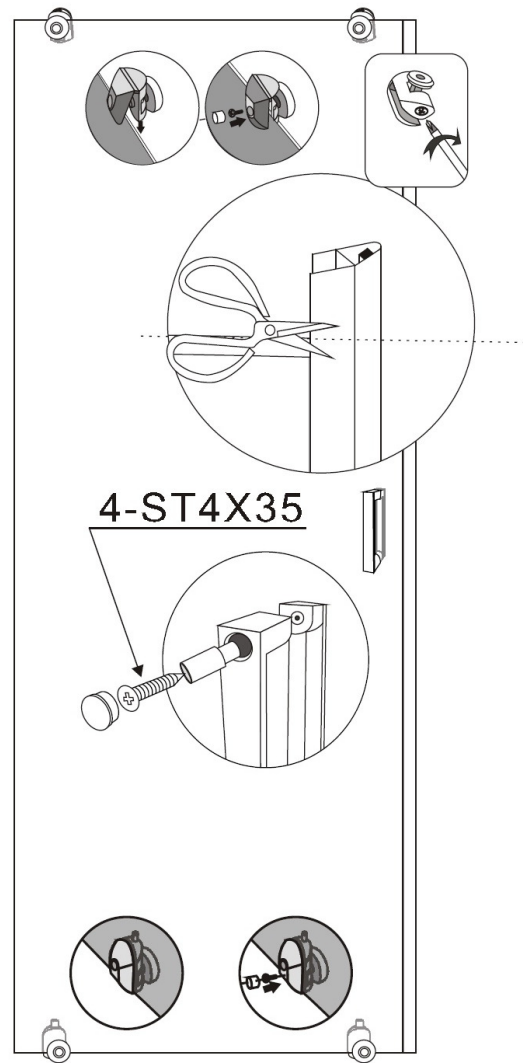

6

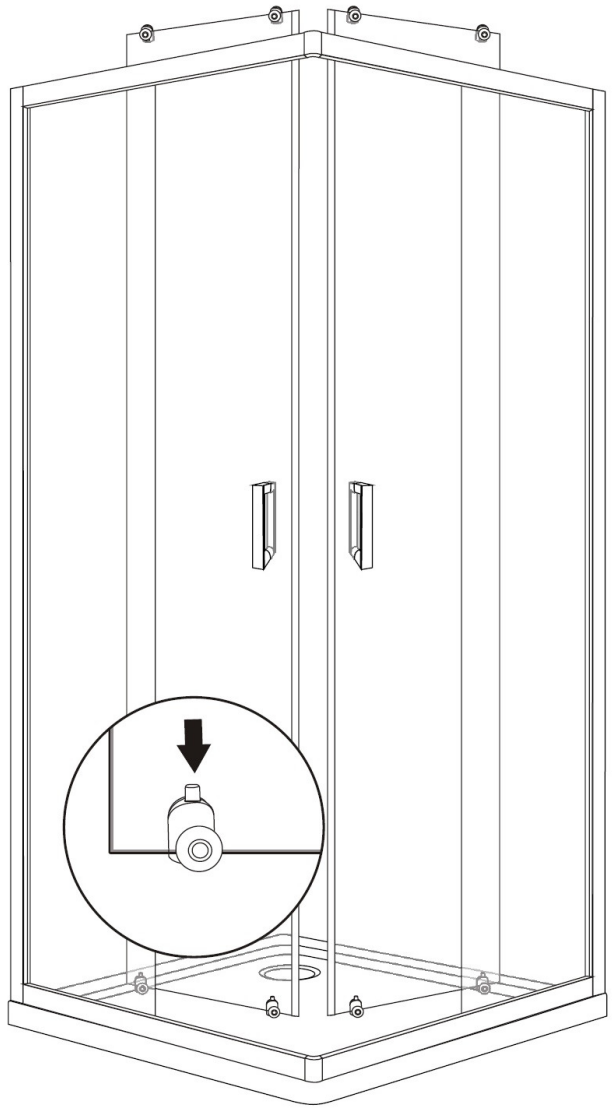

7

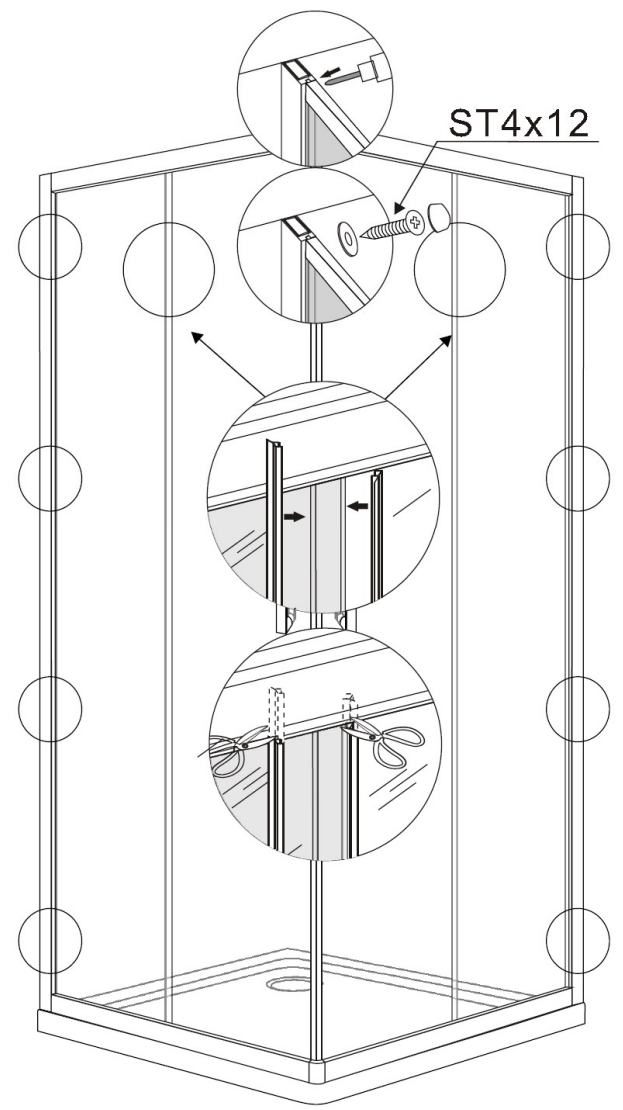

8

