




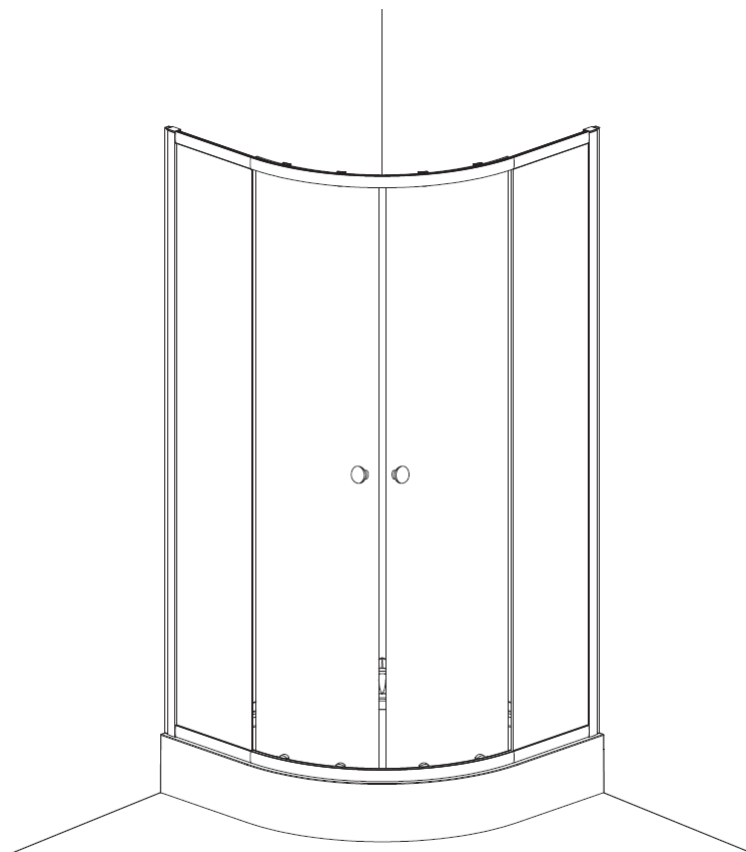

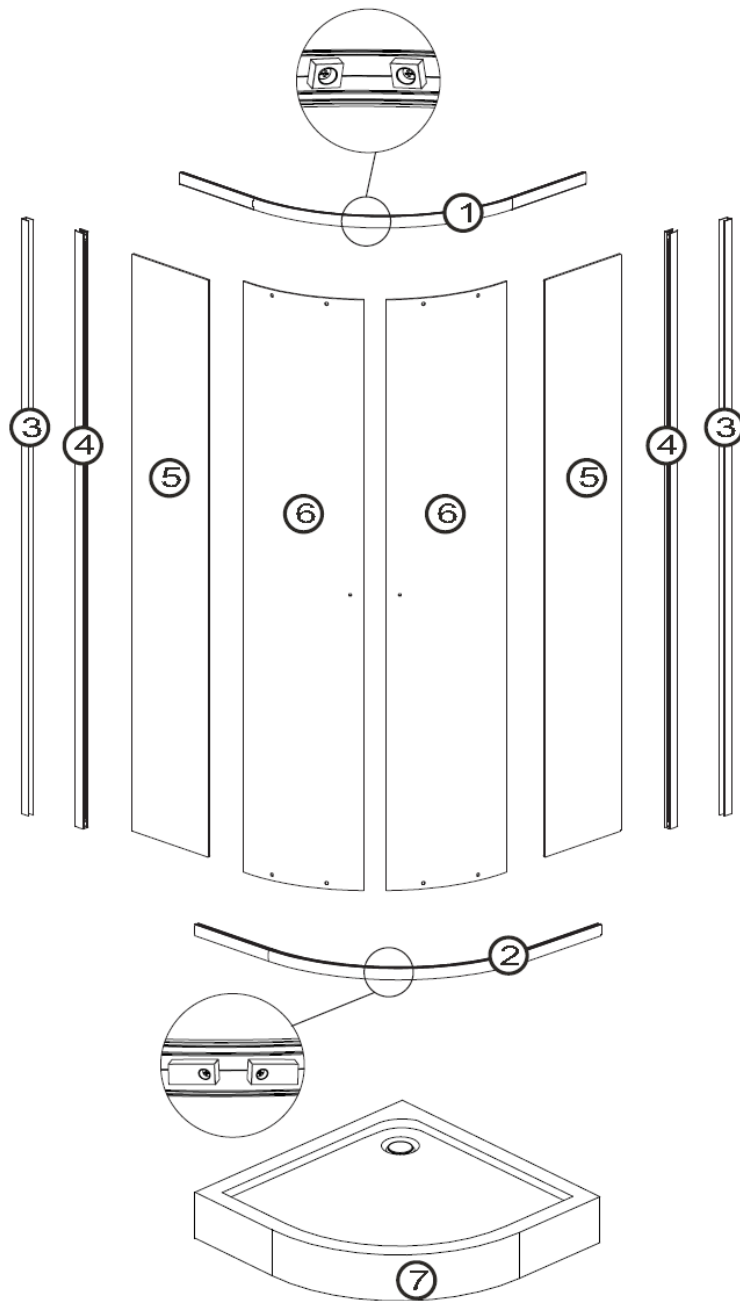

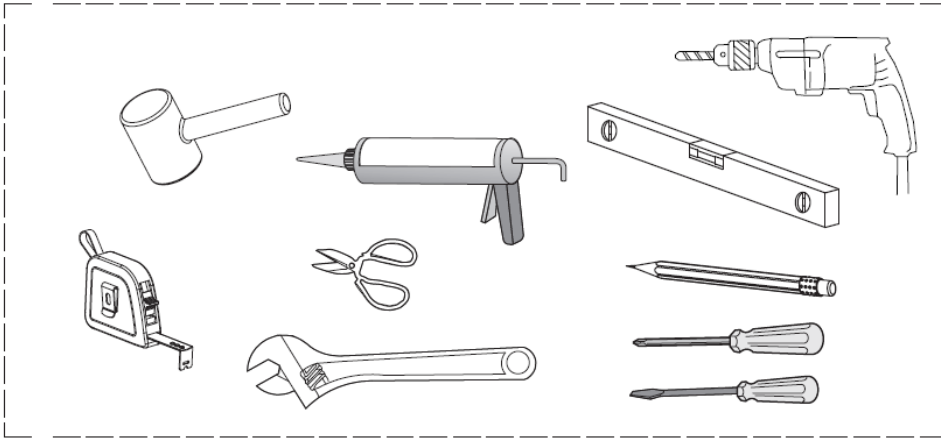






K561BW
K561B
K561BCS
K561BCF











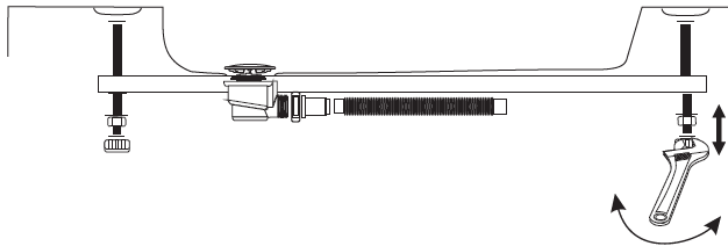
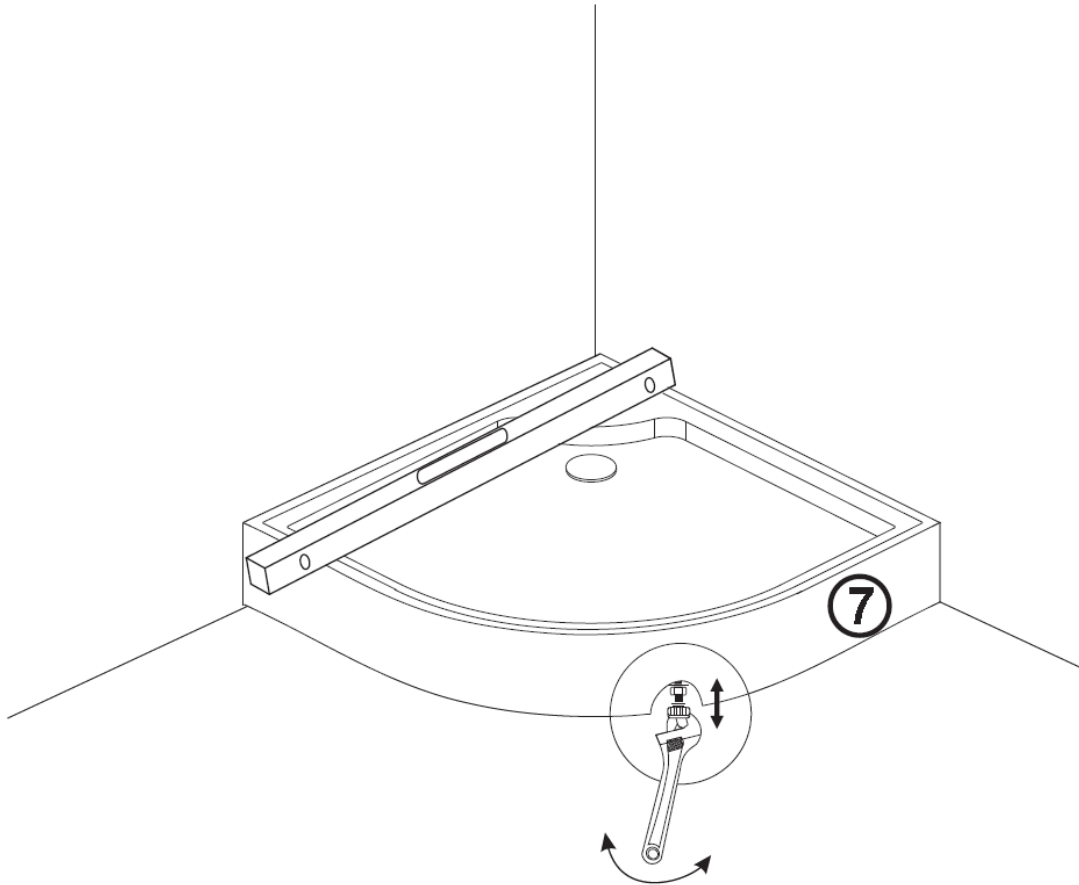
***The shower tray is not included**




| | | |
|----|---|----|
| A1 |  ST4X30 | X6 |
| A2 |  ST4X12 | X6 |
| A3 |  M4X30 | X8 |
| B1 |  | X6 |
| C1 |   | X6 |
| D1 |  | X2 |
| D2 |  | X2 |
| D3 |  | X2 |
| D4 |  | X2 |
| D5 |  | X2 |

| | | |
|----|--|----|
| E1 |  | X2 |
| E2 |   | X1 |
| F1 |  | X4 |
| F2 |  | X4 |
| G |  | X2 |

1



2

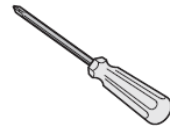


A3




M4X30


X4

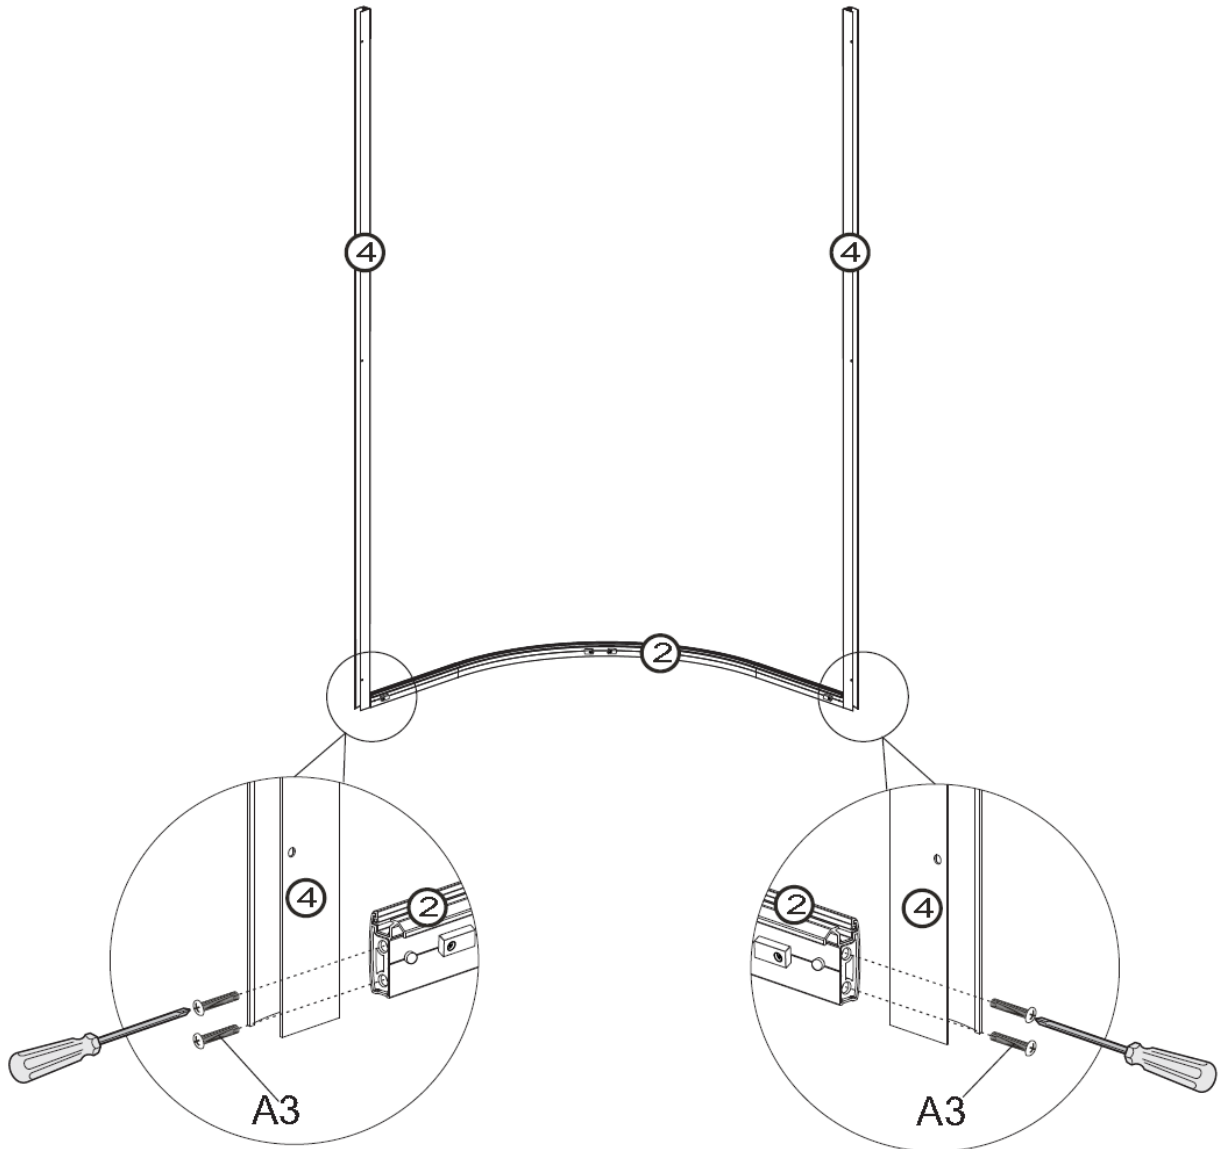

3

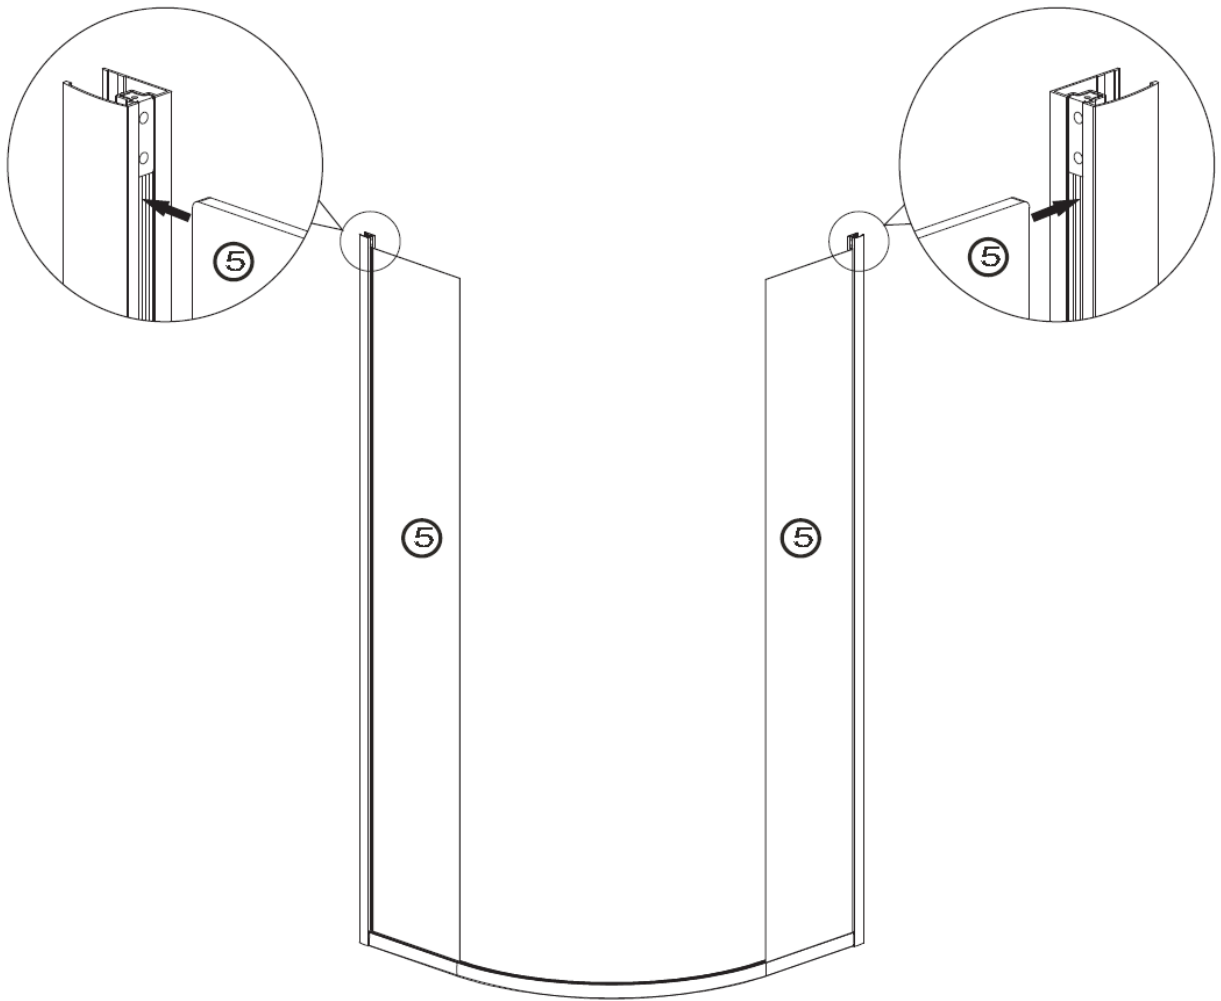

4

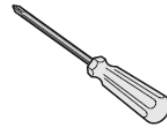


A3



M4X30

X4

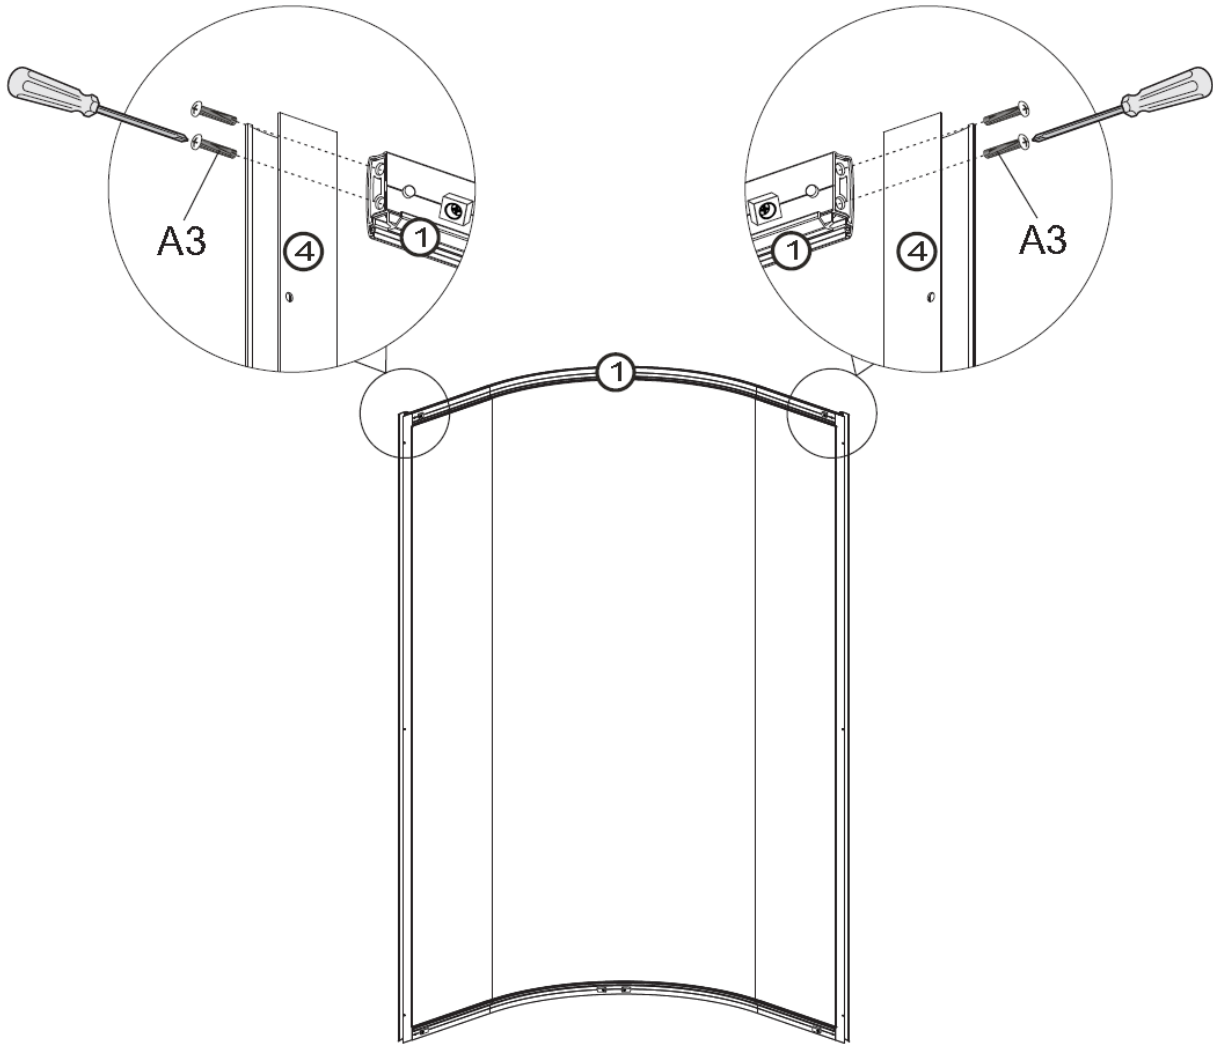

5



D4





X2




D5




X2

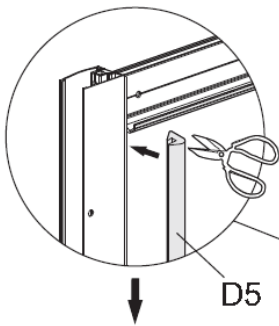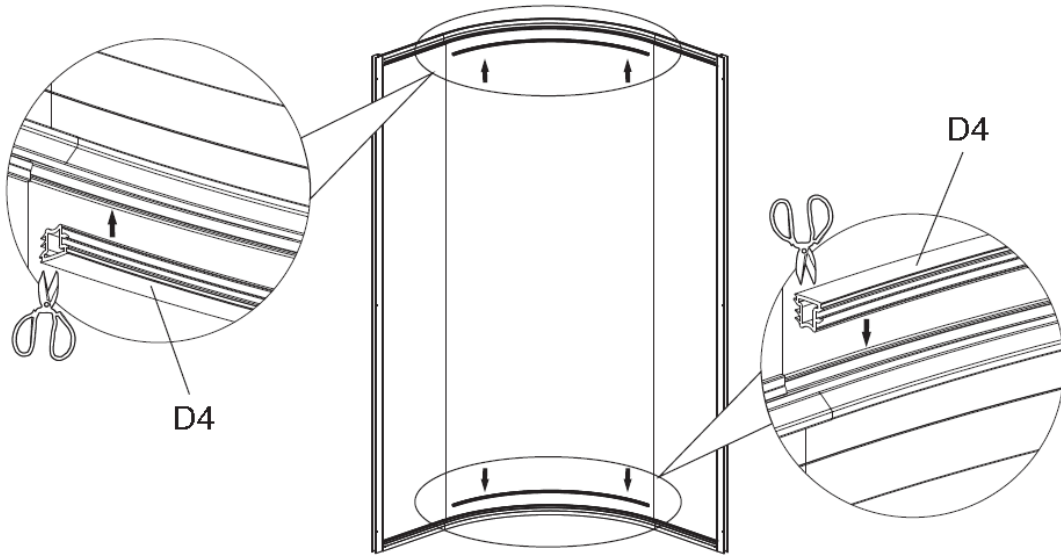


D5

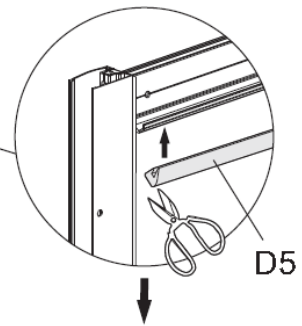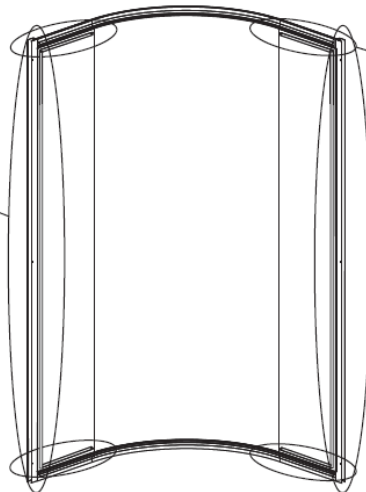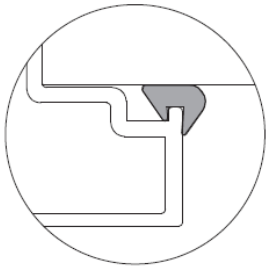


D5

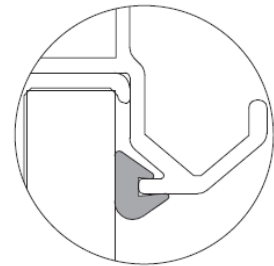


6



| | |
|---|--------|
| L | 880±10 |
|---|--------|

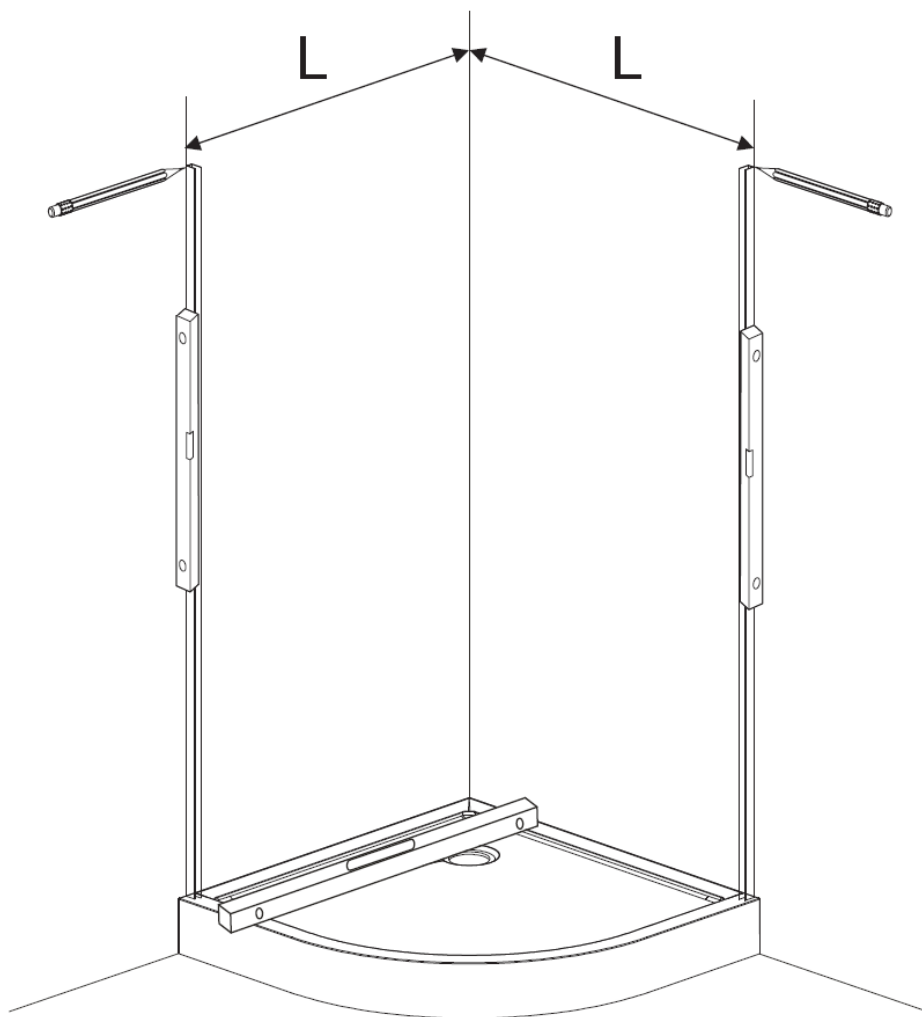

7

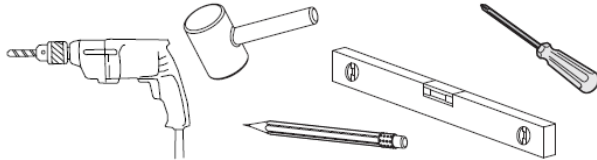

A1




ST4X30

X6


B1



X6

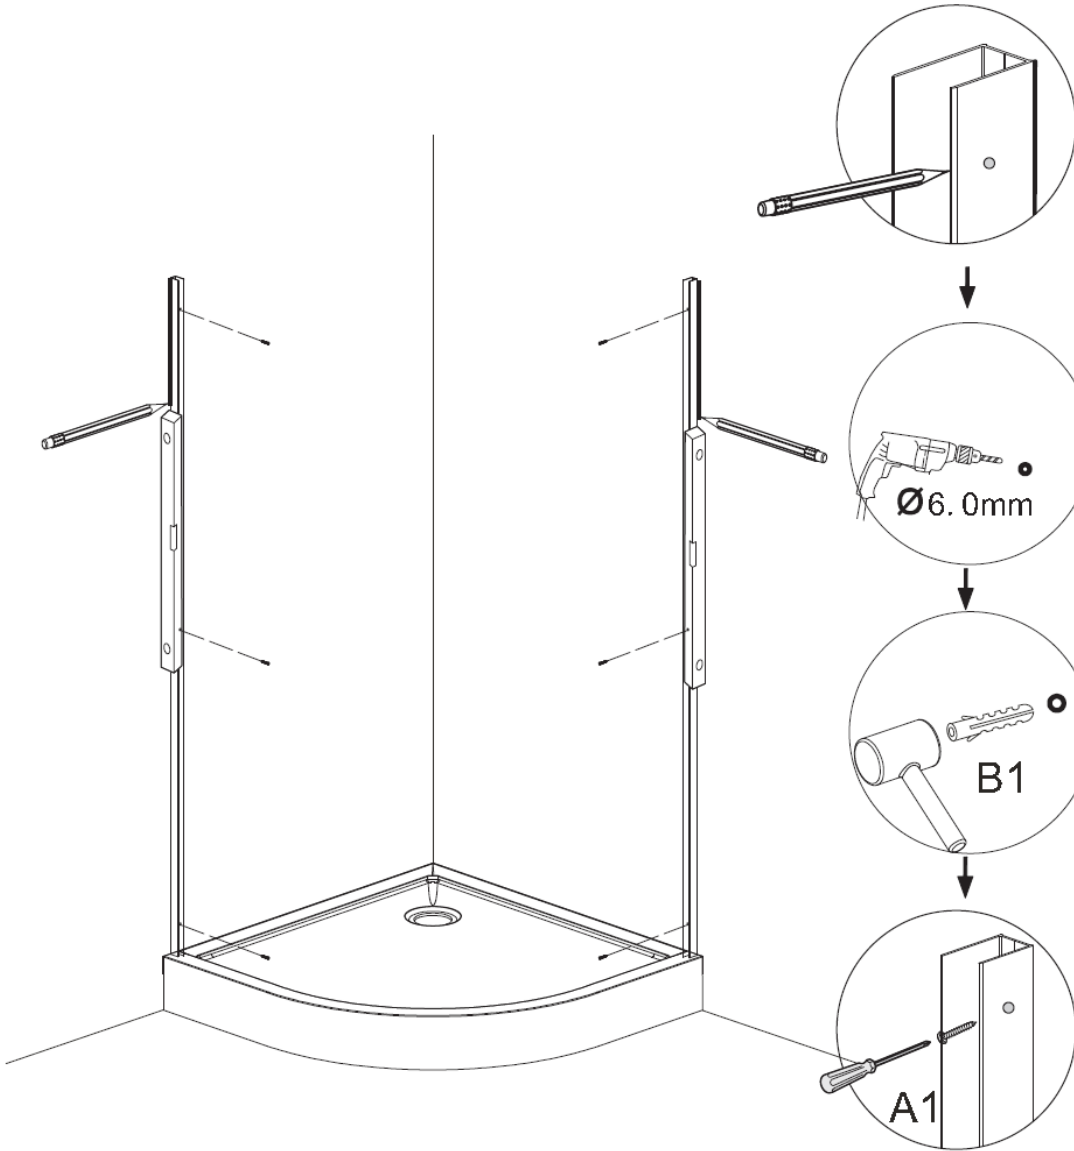

8

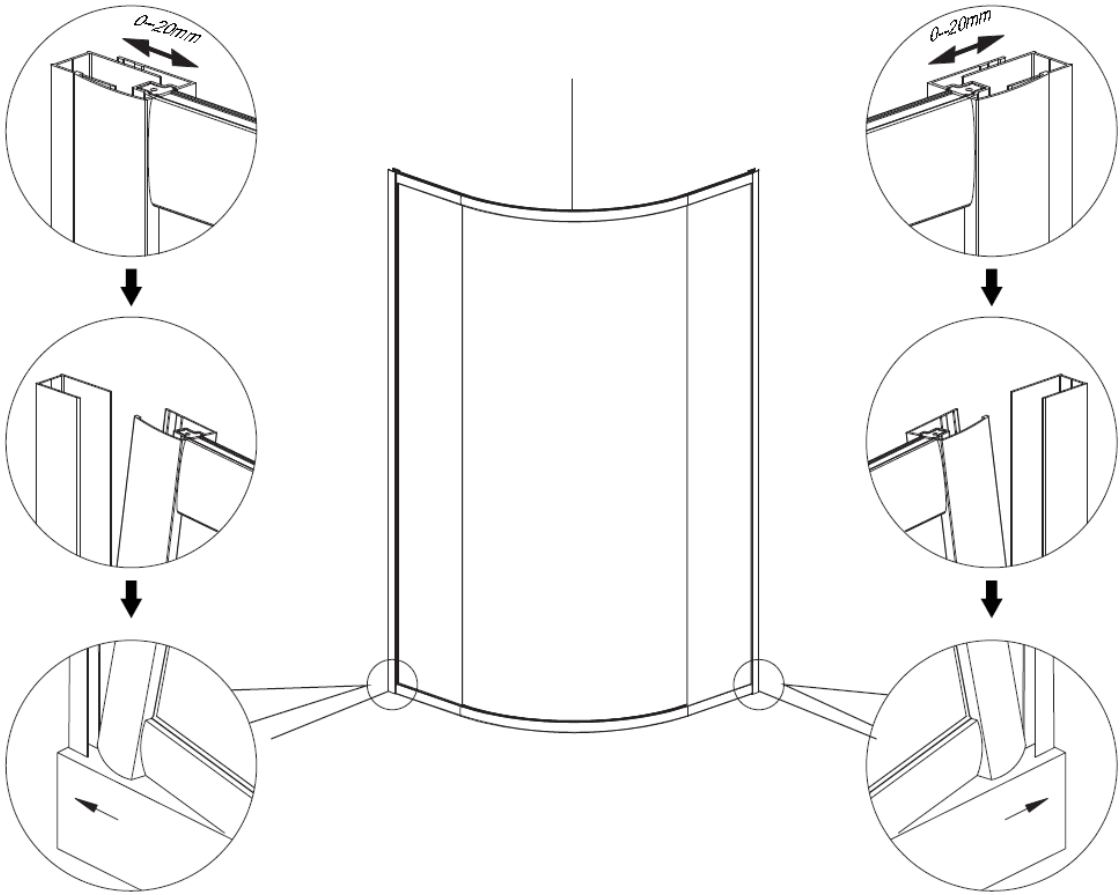

9



F1




X4


F2




X4

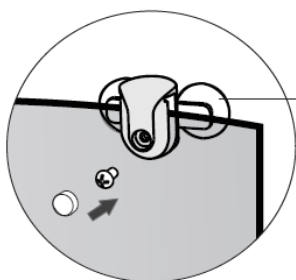

F1

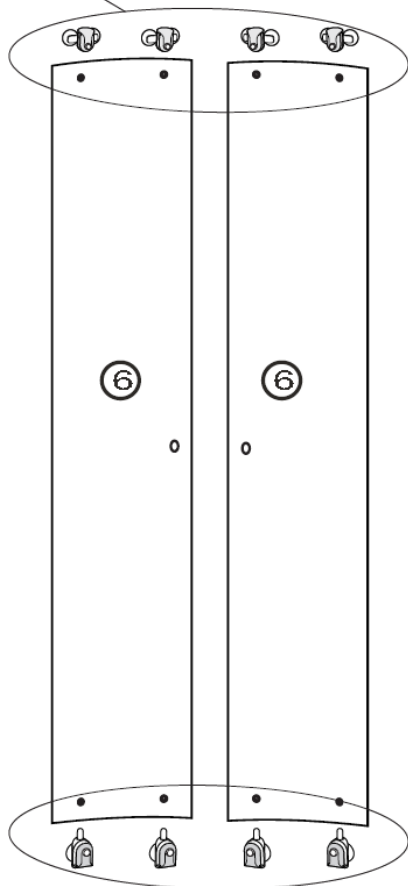


F2





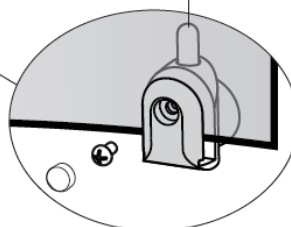





10

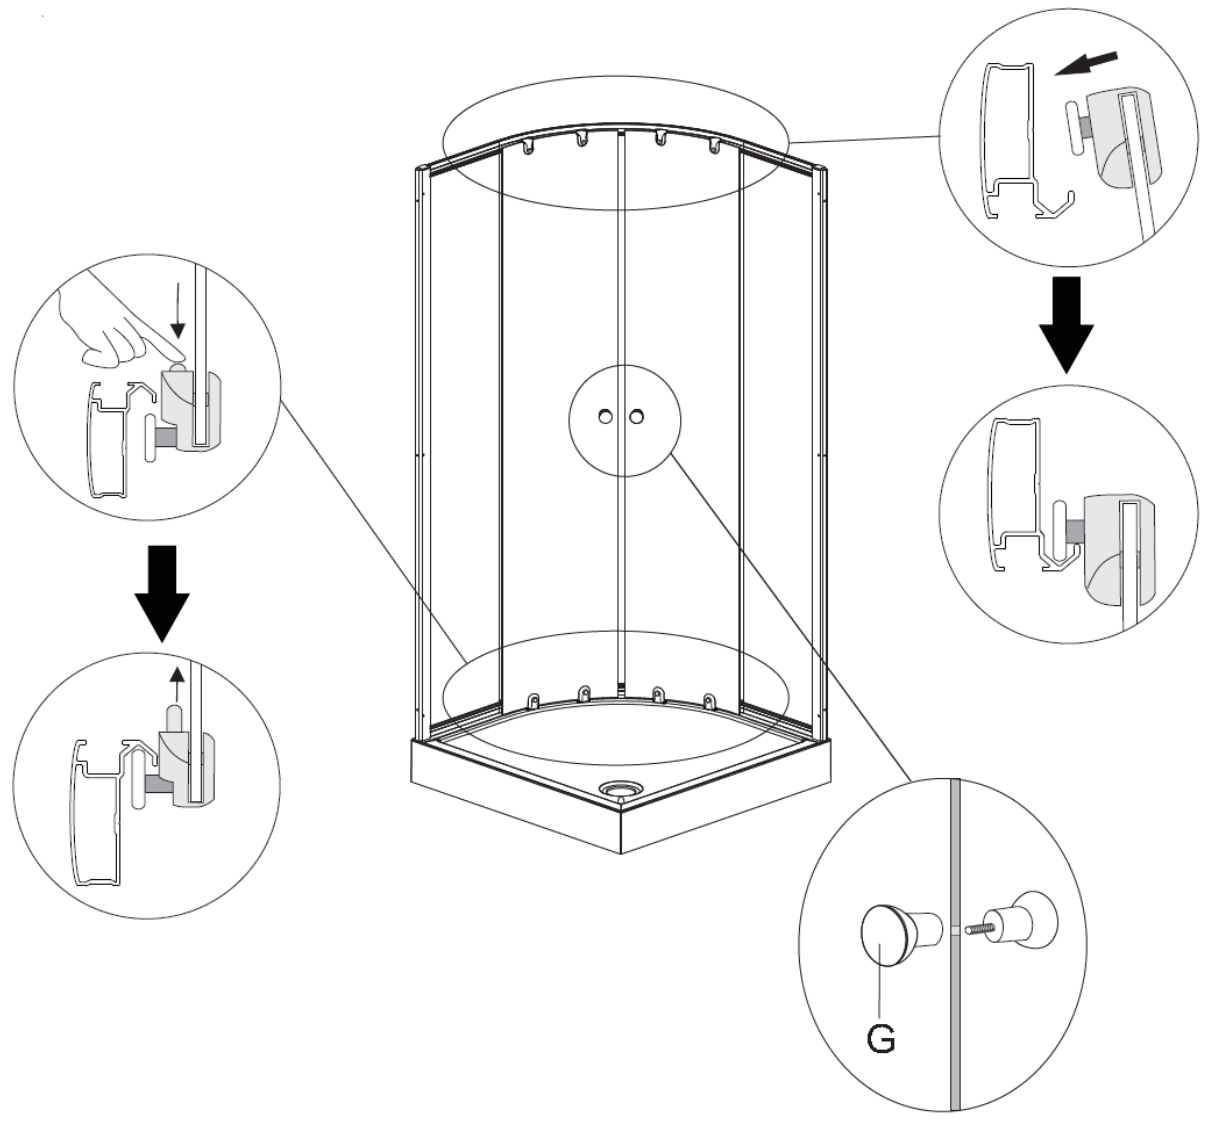


G
X2

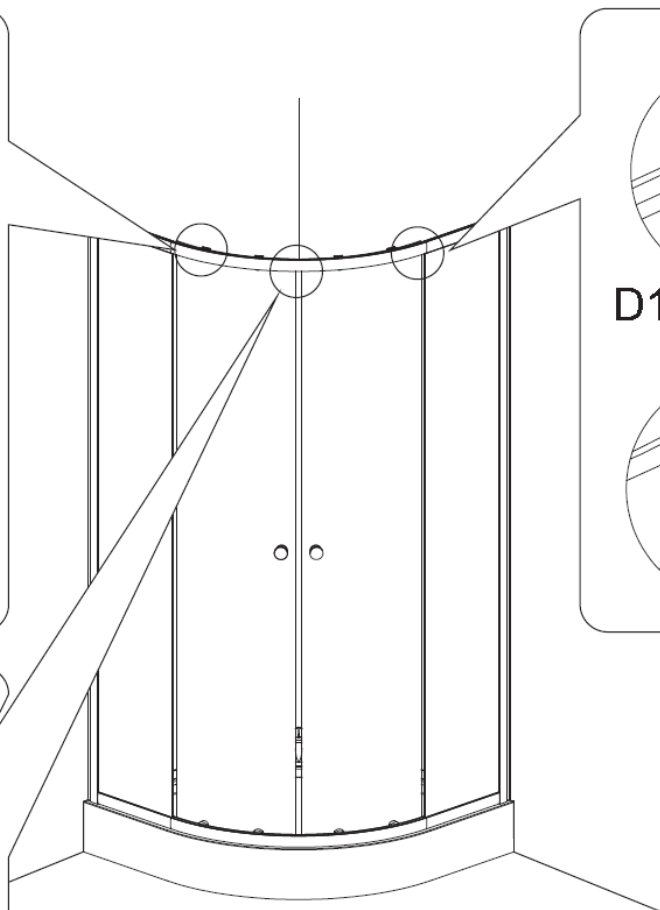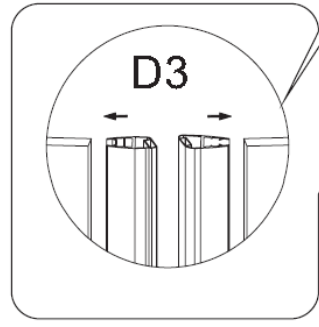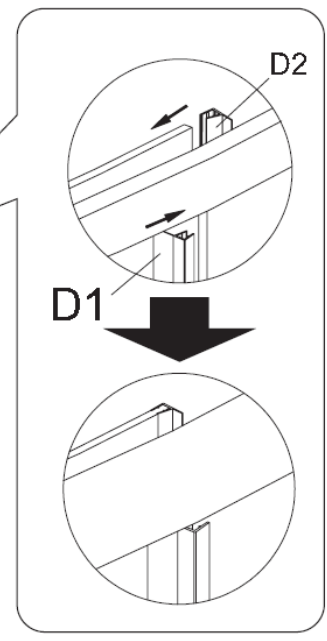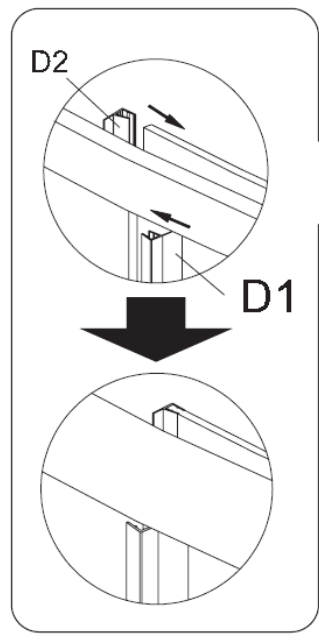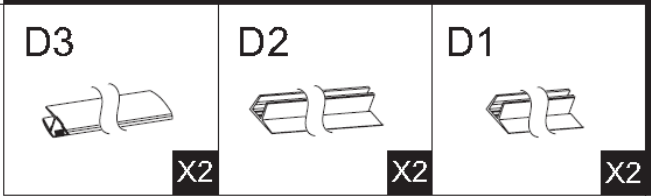


11

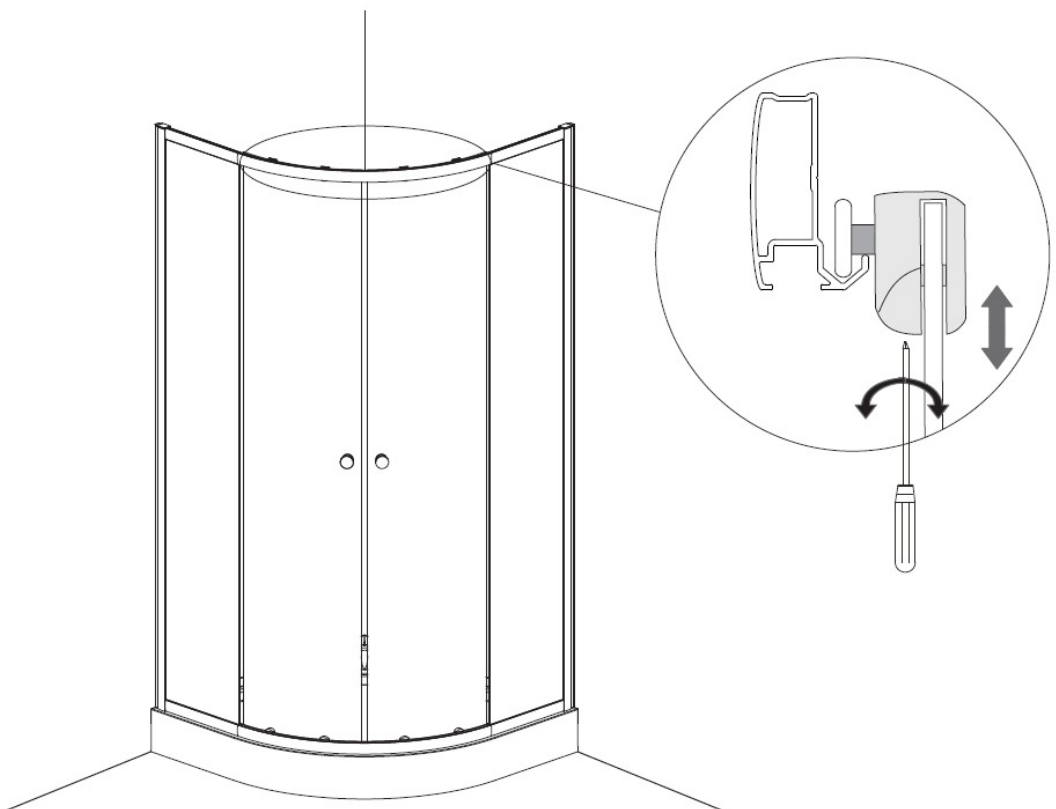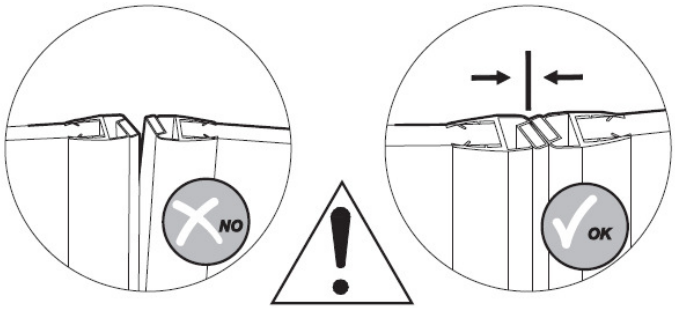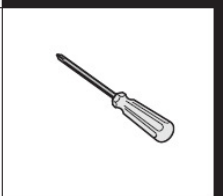



| | |
|---|---|
| <p>A2</p>  <p>ST4X12</p> <p>X6</p> | <p>C1</p>  <p>C1a</p>  <p>C1b</p> <p>X6</p> |
|---|---|

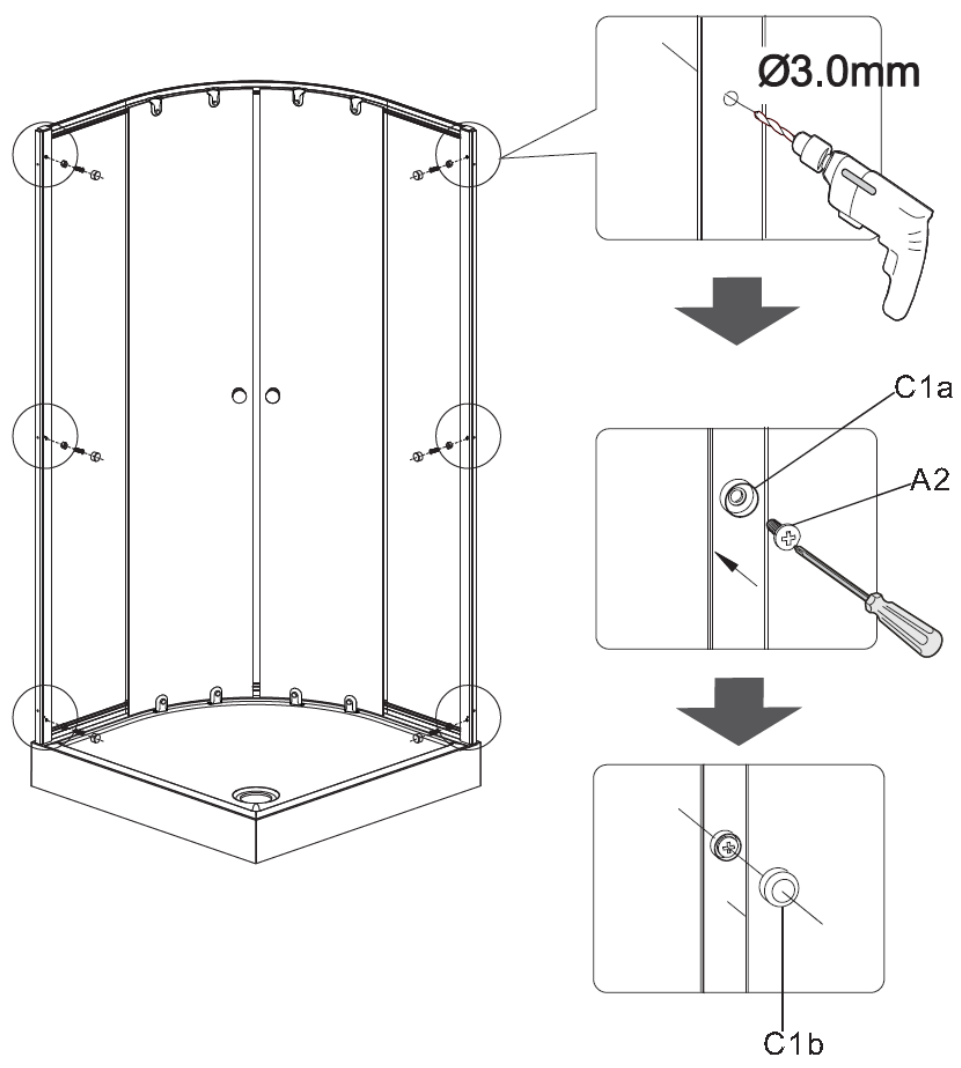

14



E1



E2



X2

X1

