

  
**romstal**<sup>®</sup>  
UNIVERSUL INSTALAȚIILOR  
**romstal**  
**ZEYA**

Model: **BMA-13813 120\*190**

Cod Romstal: 79CD3595


















USA DUS DALIA, PROFIL CROM, GEAM TRANSPARENT 8mm,  
L.120XH.190CM

Model: **BMA-13813 140\*190**

Cod Romstal: 79CD3596


USA DUS DALIA, PROFIL CROM, GEAM TRANSPARENT 8mm,  
L.140XH.190CM




<b>A</b>  ST4X25 X8	<b>B</b>  ST4X25 X8	<b>C</b>  ST4X10 X8	<b>D</b>  X8
<b>E</b>  Role inferioare X2	<b>F</b>  Role superioare X2	<b>G</b>  X1	<b>H</b>  Garnitura X2
<b>I</b>  Garnitura magnetica X1	<b>J</b>  Profil fixare pe perete X2	<b>K</b>  Profil usa X1	<b>L</b>  Perete sticla (fix) X1
<b>M</b>  Usa X1	<b>N</b>  Profil orizontal X2	<b>O</b>  Set prindere sticla X2	<b>P</b>  3mm X1
<b>Q</b>  3mm X1			

Cadita de dus nu este inclusa.  
The shower tray is not included.


In cazul montajului pe cadita de dus, se va realiza in prealabil montajul acesteia si apoi se poate incepe instalarea cabine de dus.  
In case that will be installed on a shower tray, first will be installed the shower tray and after that will be installed the shower enclosure.

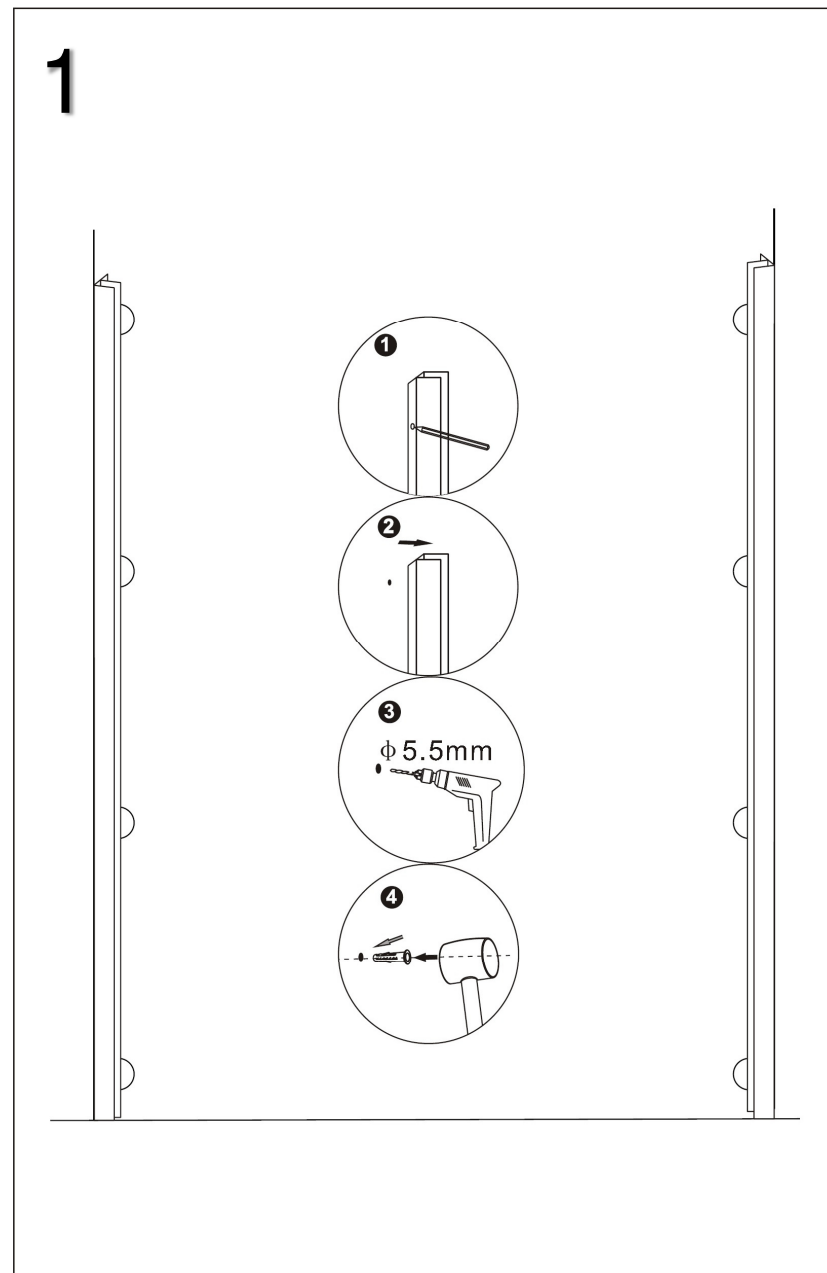


2

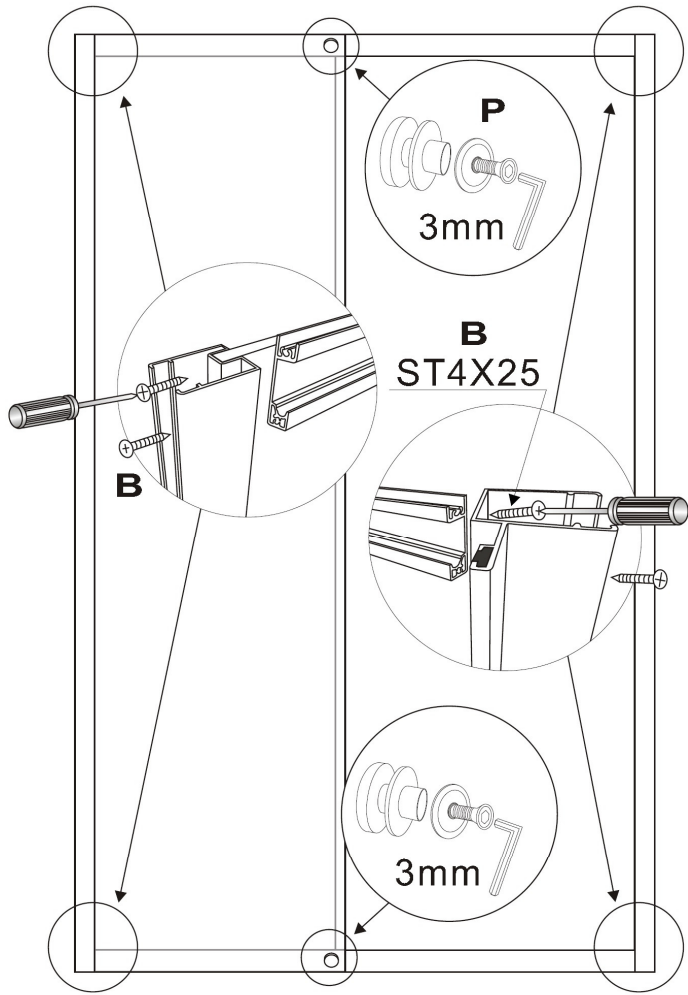


3

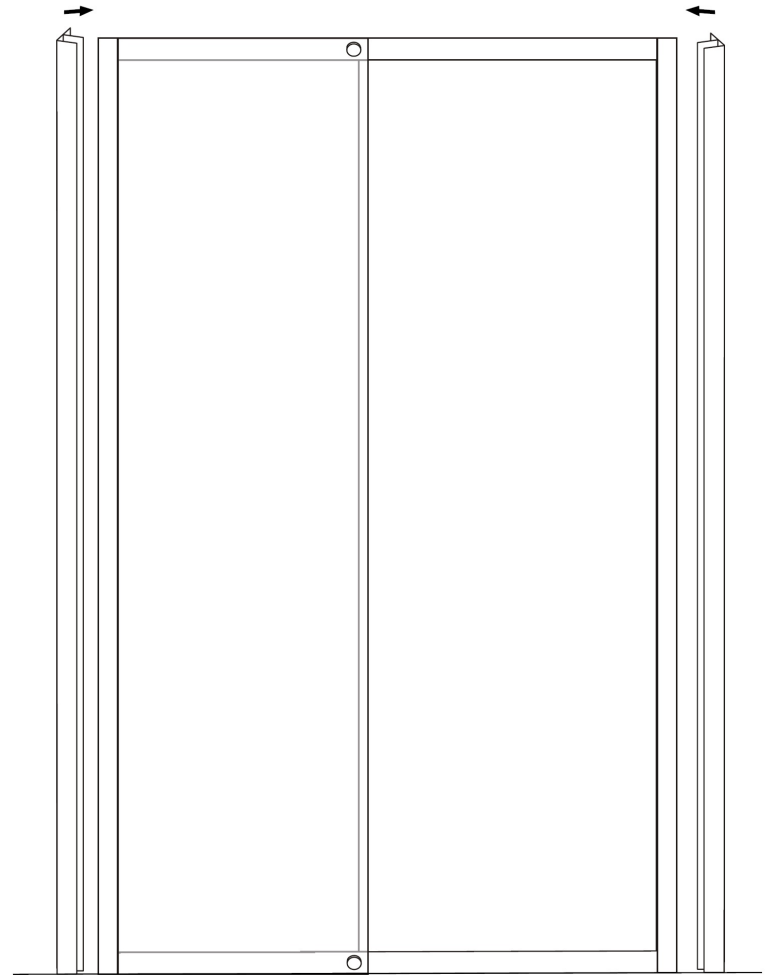


4

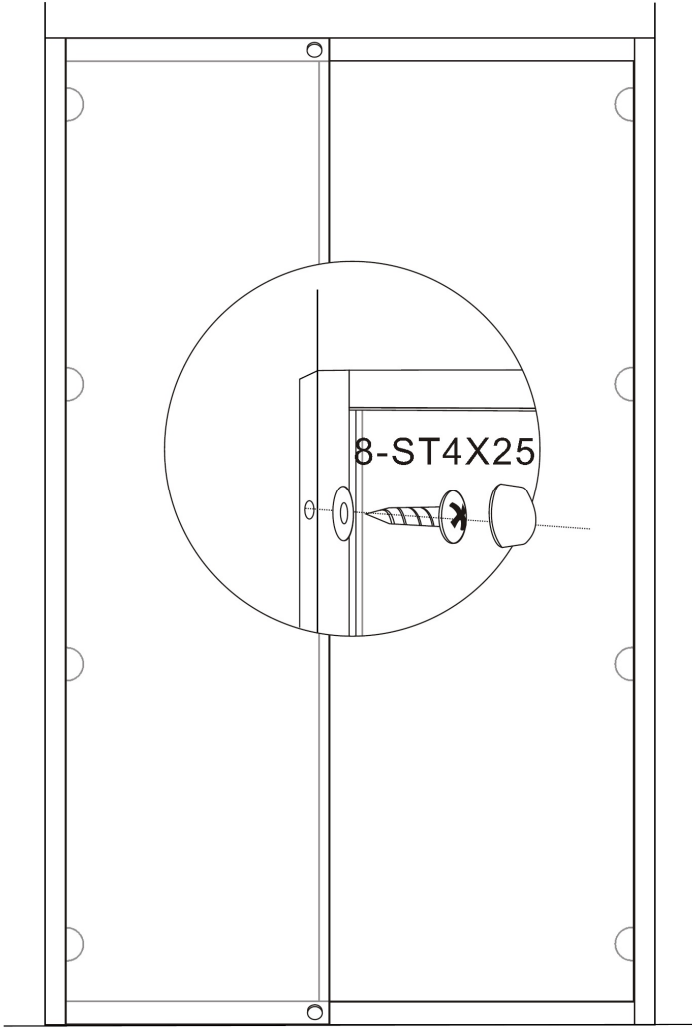


5

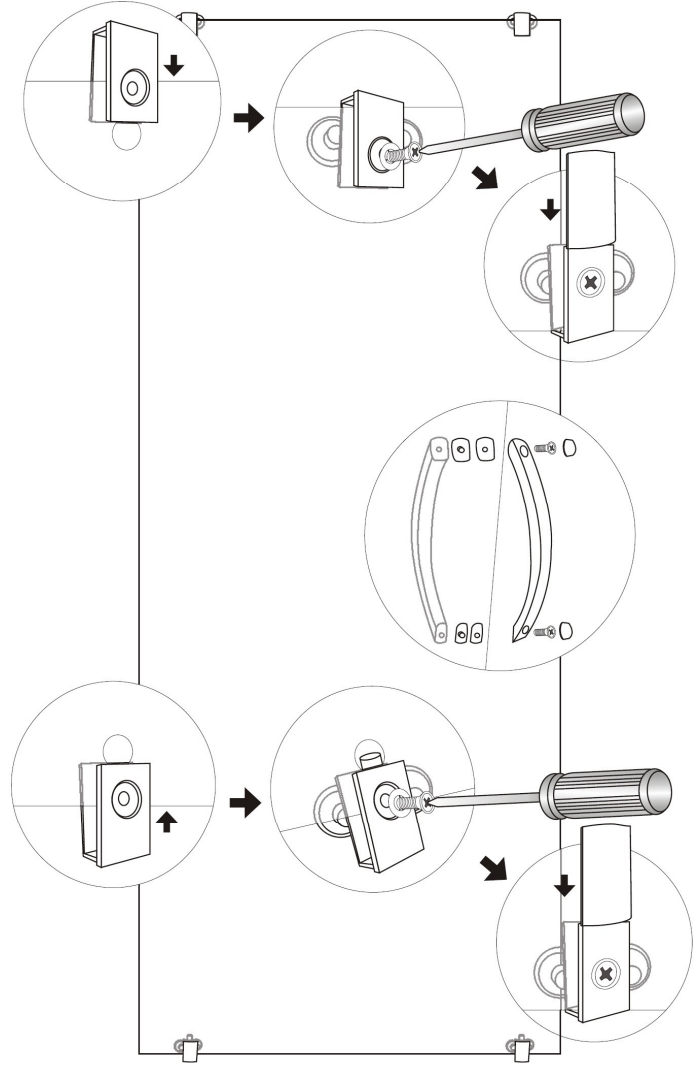


6

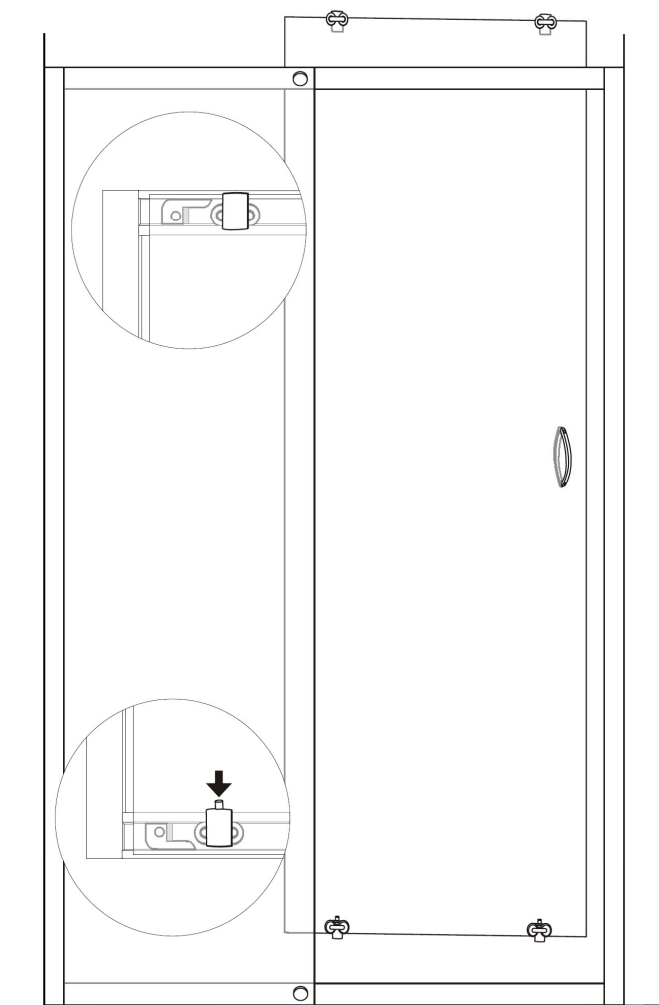

7

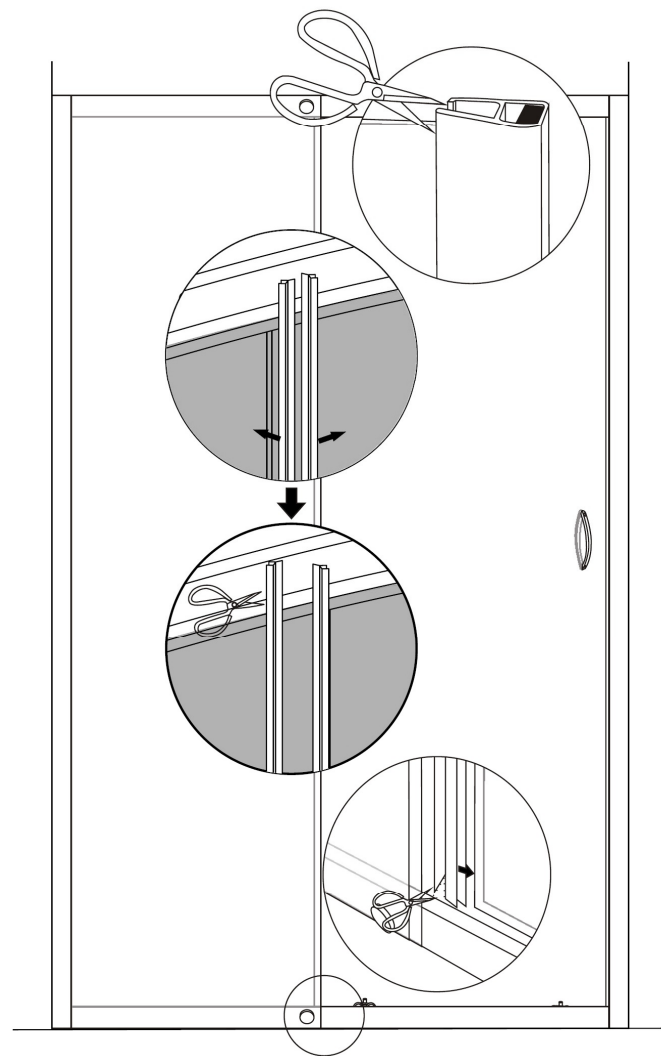

8

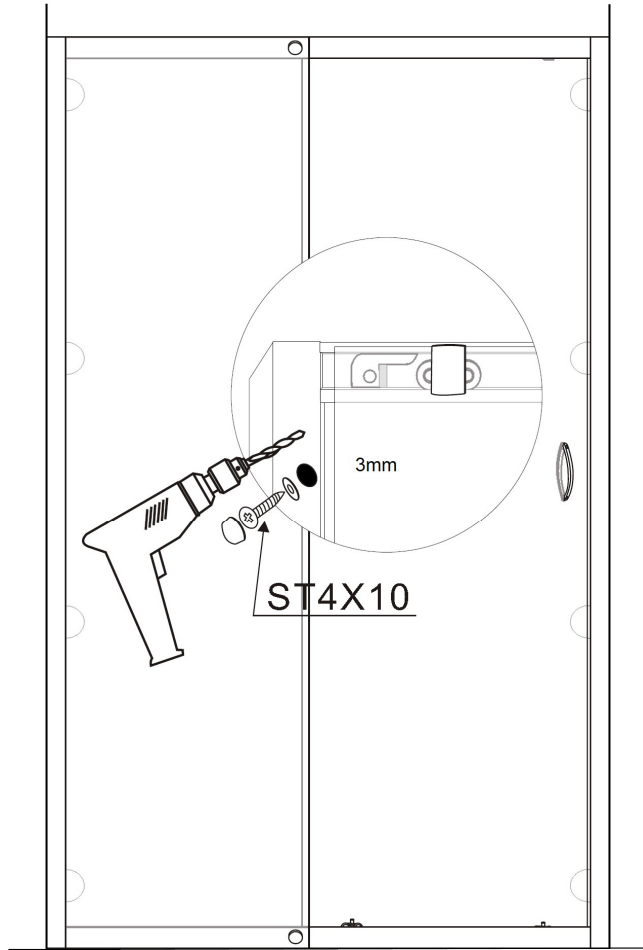

9

