



Model: **KL-002 120\*80**

Cod Romstal: 79CD3606
















CABINA DREPTUNGHILARA ASCOT, PROFIL CROM, GEAM TRANSPARENT  
8mm, L.120xL.80xH.200cm

Model: **KL-002 140\*80**

Cod Romstal: 79CD3607


CABINA DREPTUNGHILARA ASCOT, PROFIL CROM, GEAM TRANSPARENT  
8mm, L.140xL.80xH.200cm




<b>A</b>  ST4X25 X10	<b>B</b>  ST4X25 X2	<b>C</b>  ST4X12 X8	<b>D</b>  M5X16 X1
<b>E</b>  X10	<b>F</b>  X1	<b>G</b>  3mm X1	<b>H</b>  X1
<b>I</b>  X1	<b>J</b>  X1	<b>K</b>  X1	<b>L</b>  X1
<b>M</b>  X1	<b>N</b>  4mm X1	<b>O</b>  X1	

Cadita de dus nu este inclusa.  
The shower tray is not included.


In cazul montajului pe cadita de dus, se va realiza in prealabil montajul acesteia si apoi se poate incepe instalarea cabine de dus.  
In case that will be installed on a shower tray, first will be installed the shower tray and after that will be installed the shower enclosure.

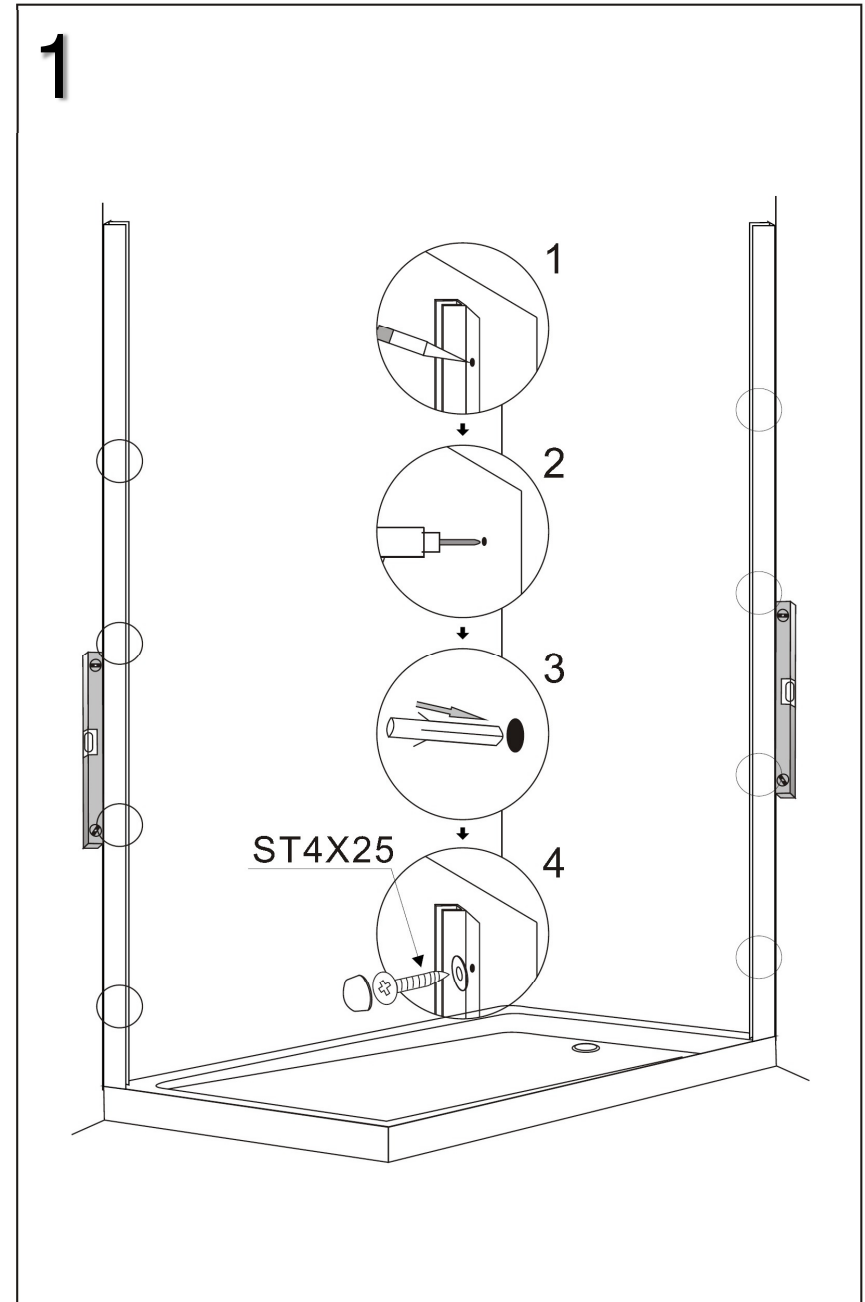


2

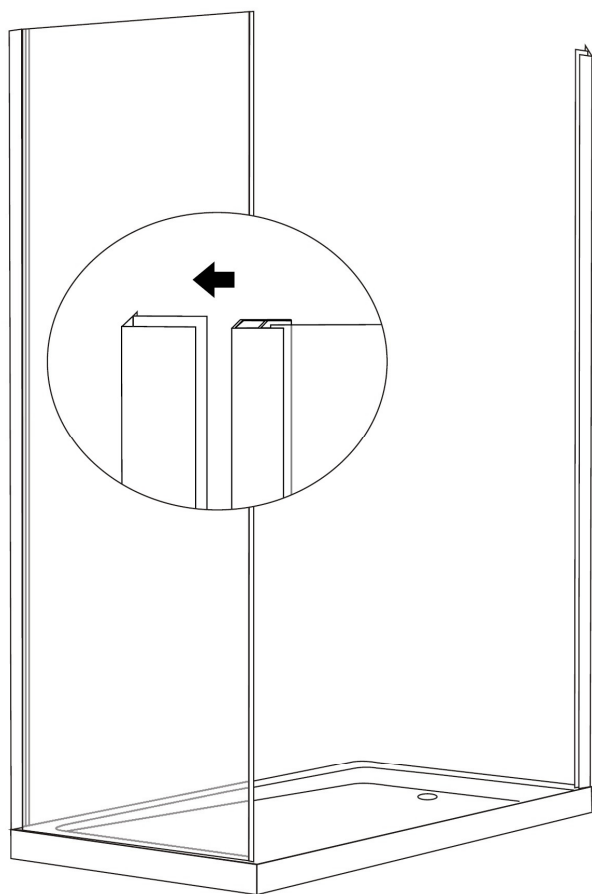


3

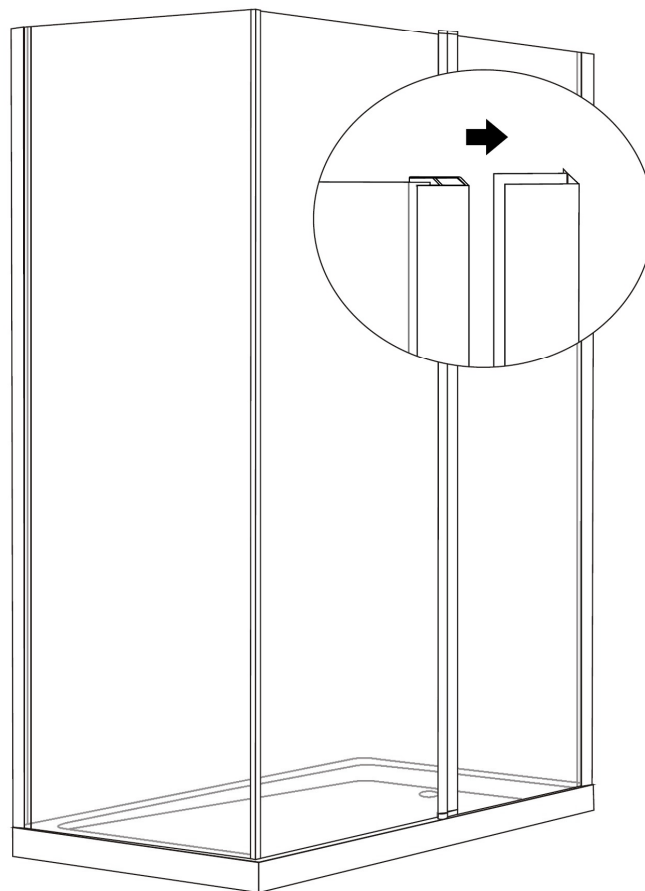


# 4

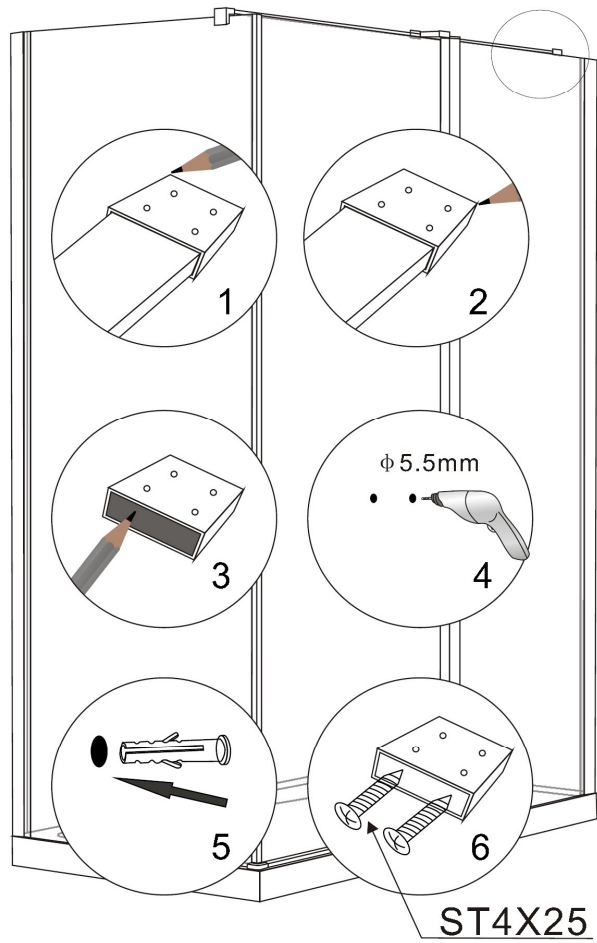


# 5

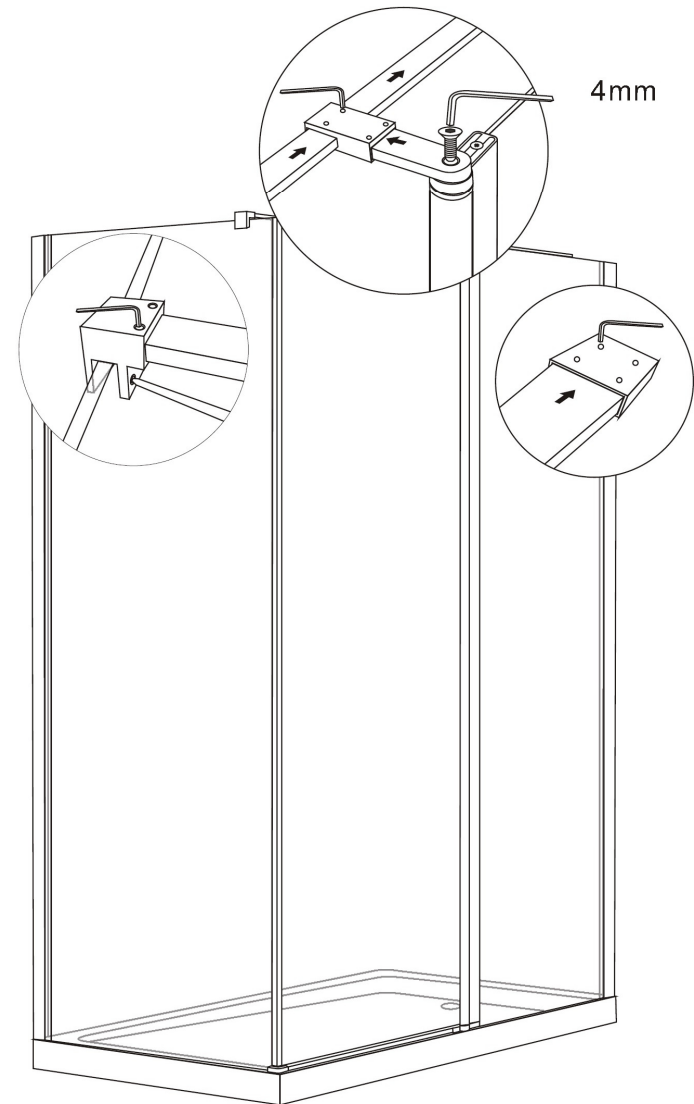

6

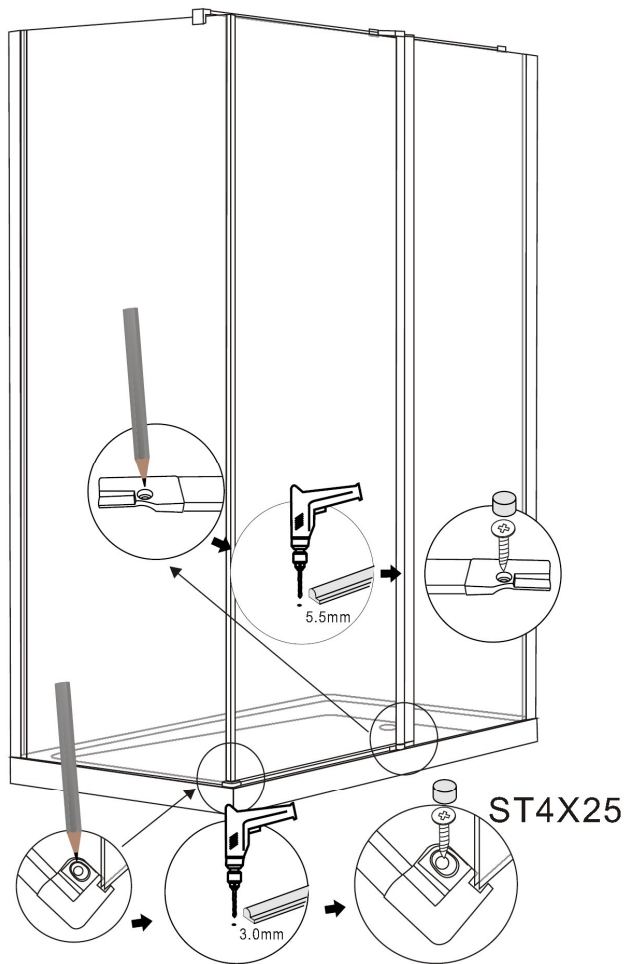

7

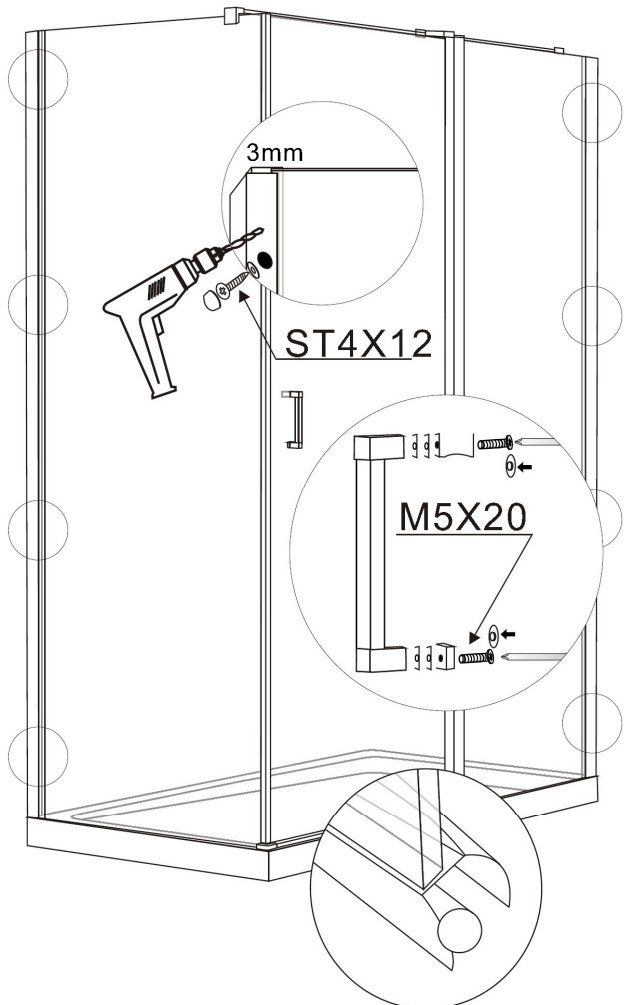

8

