

Installation instructions

Model: HX-109T 70*190

Cod Romstal: 79CD4212

Model: HX-109T 80*190

Cod Romstal: 79CD4213

Model: HX-109T 90*190

Cod Romstal: 79CD4214

Model: HX-109T 100*190

Cod Romstal: 79CD4622

Model: HX-109T side panel 70*190



Cod Romstal: 79CD4215

Model: HX-109T side panel 80*190

Cod Romstal: 79CD4216

Model: HX-109T side panel 90*190

Cod Romstal: 79CD4217

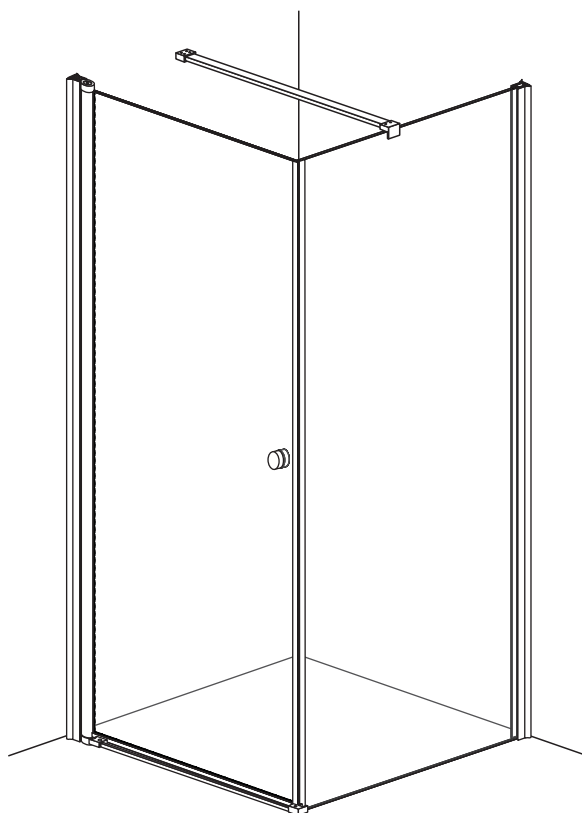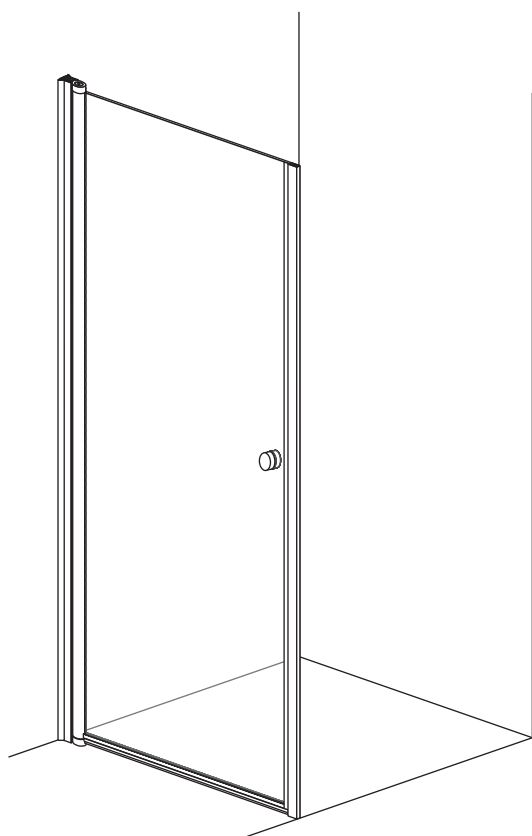


Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start. make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.

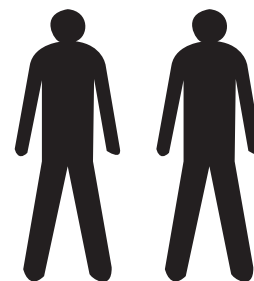


Drill bit to suit wall type
6mm

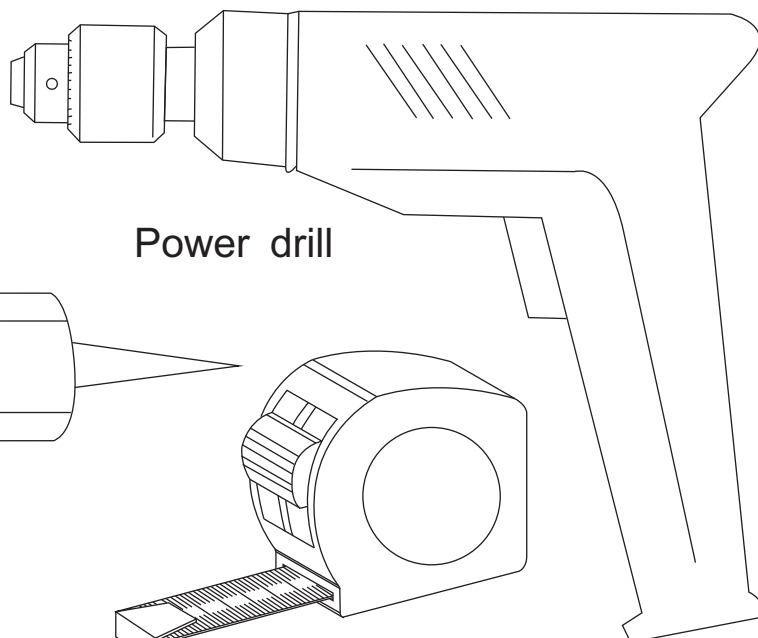


Power drill

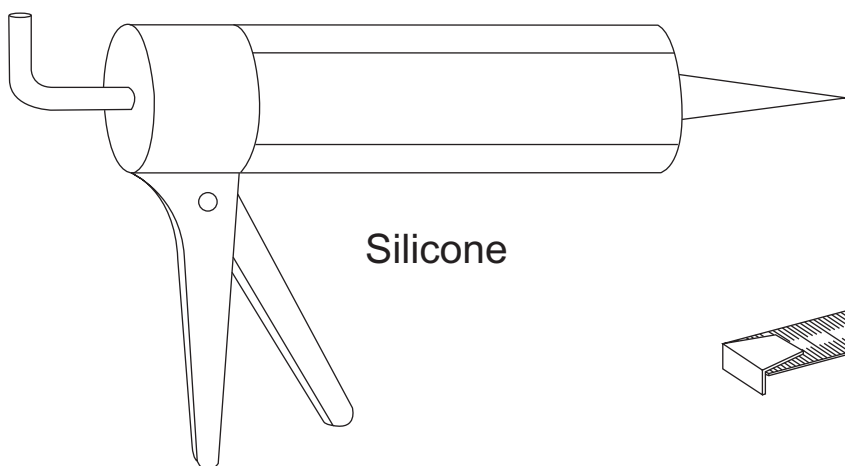


Silicone

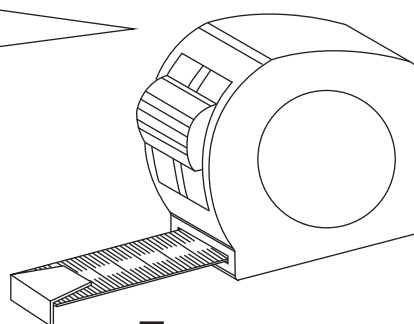


Tape measure

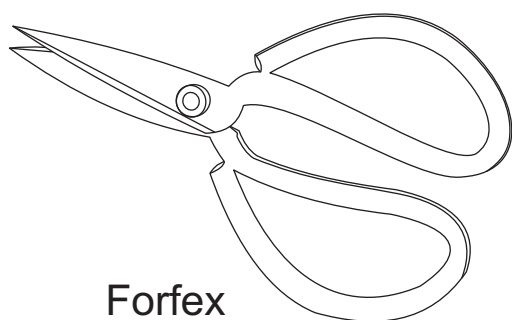


Forfex

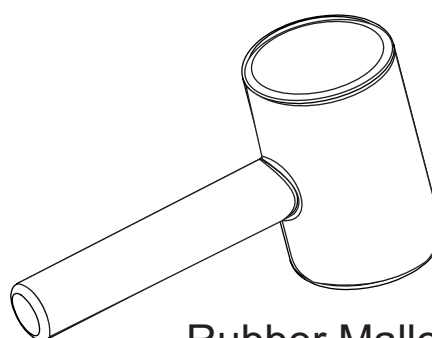


Rubber Mallet



Pencil




Magnetic cross head screw driver

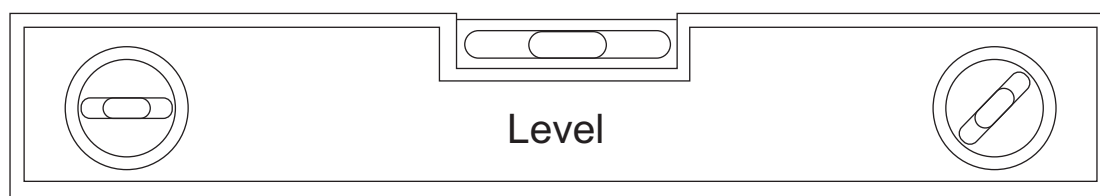


Level

SINGLE DOOR

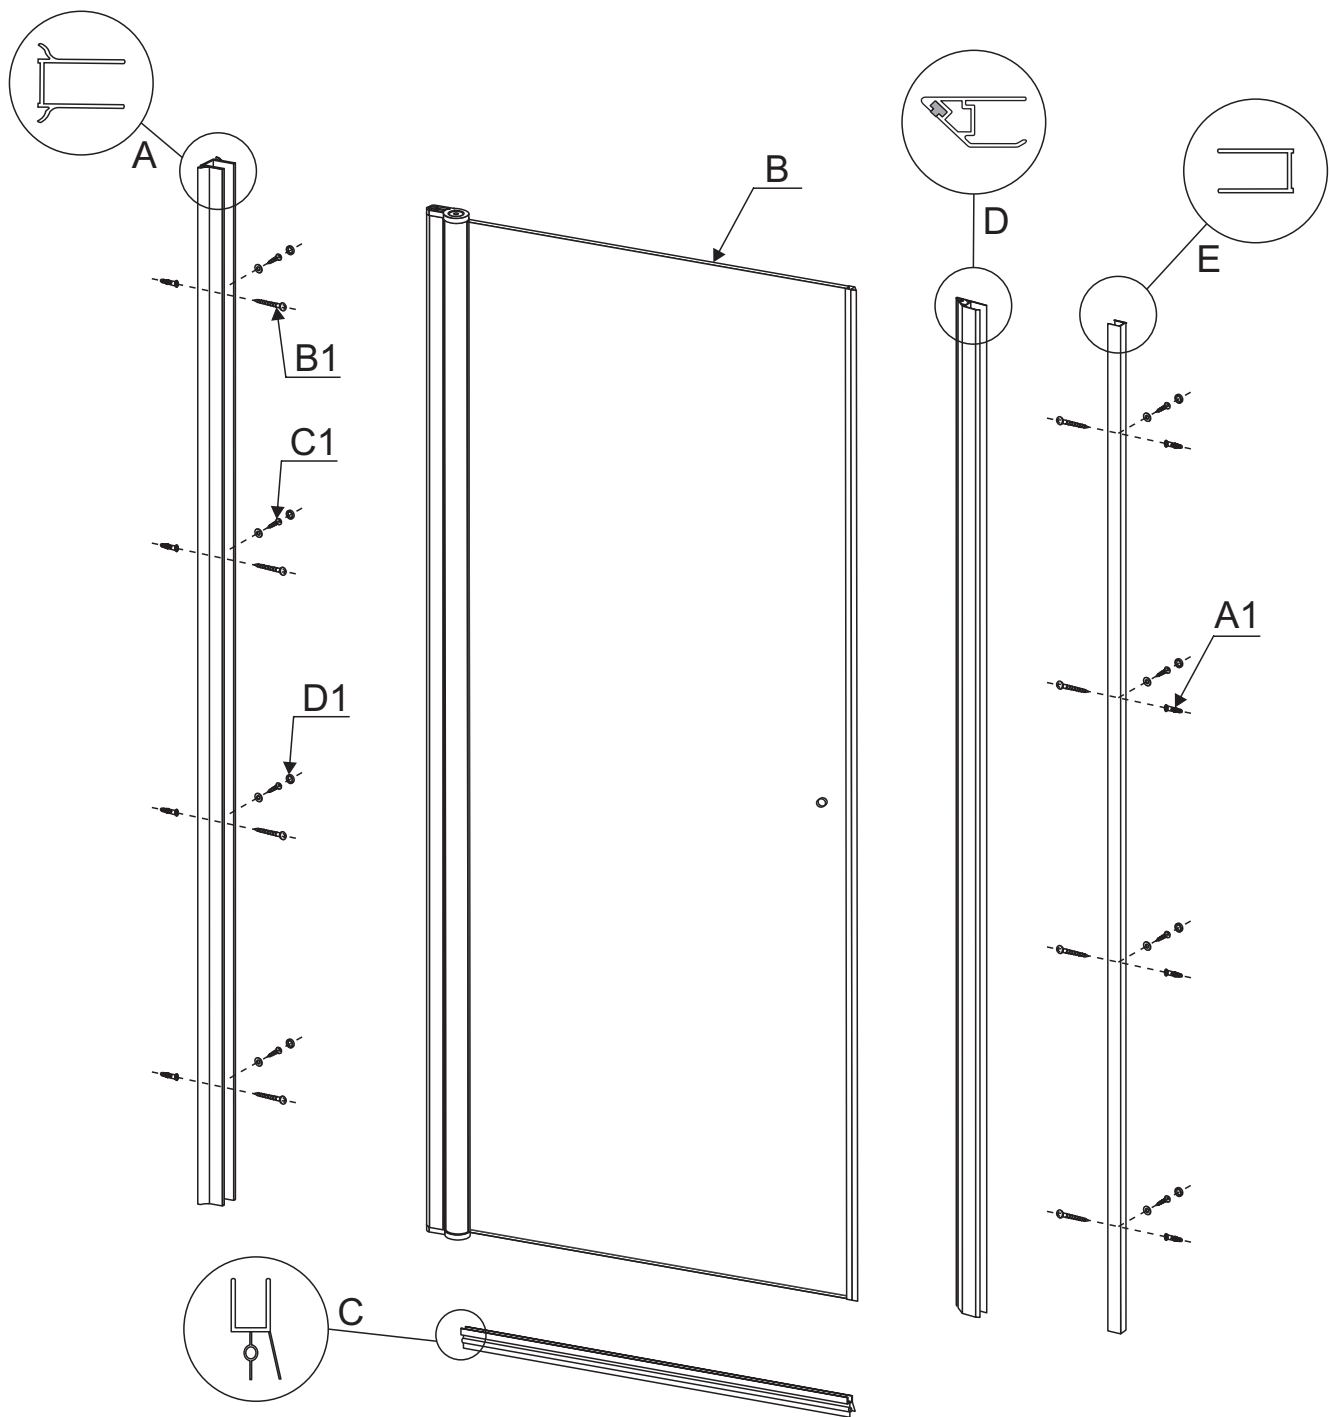


A1



X8

B1



4X25mm

X8


C1



4X10mm


X8

D1



X8

E1



X1

F1




3mm Drill bit


X1

Installation instructions

1

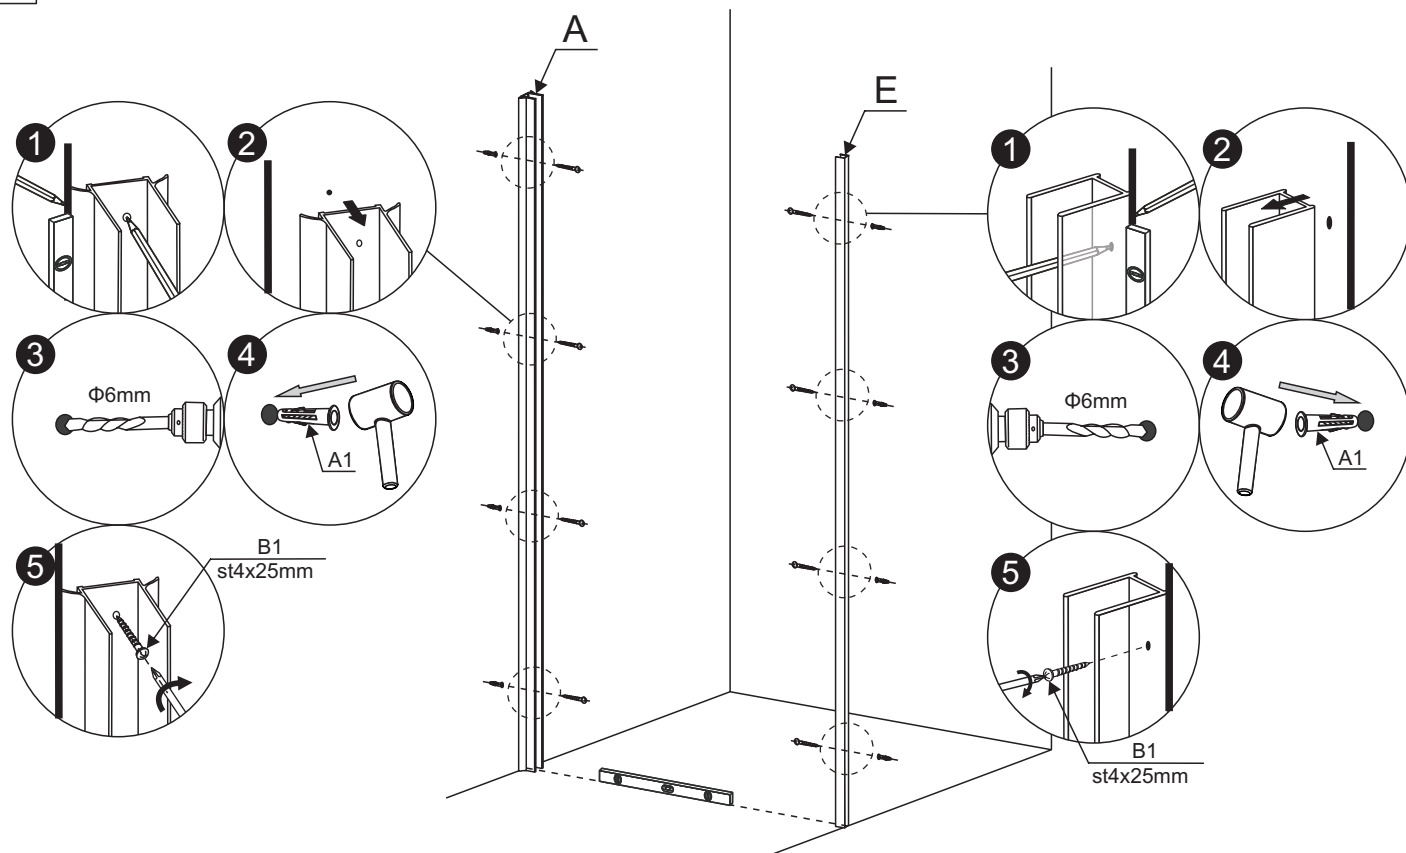


2

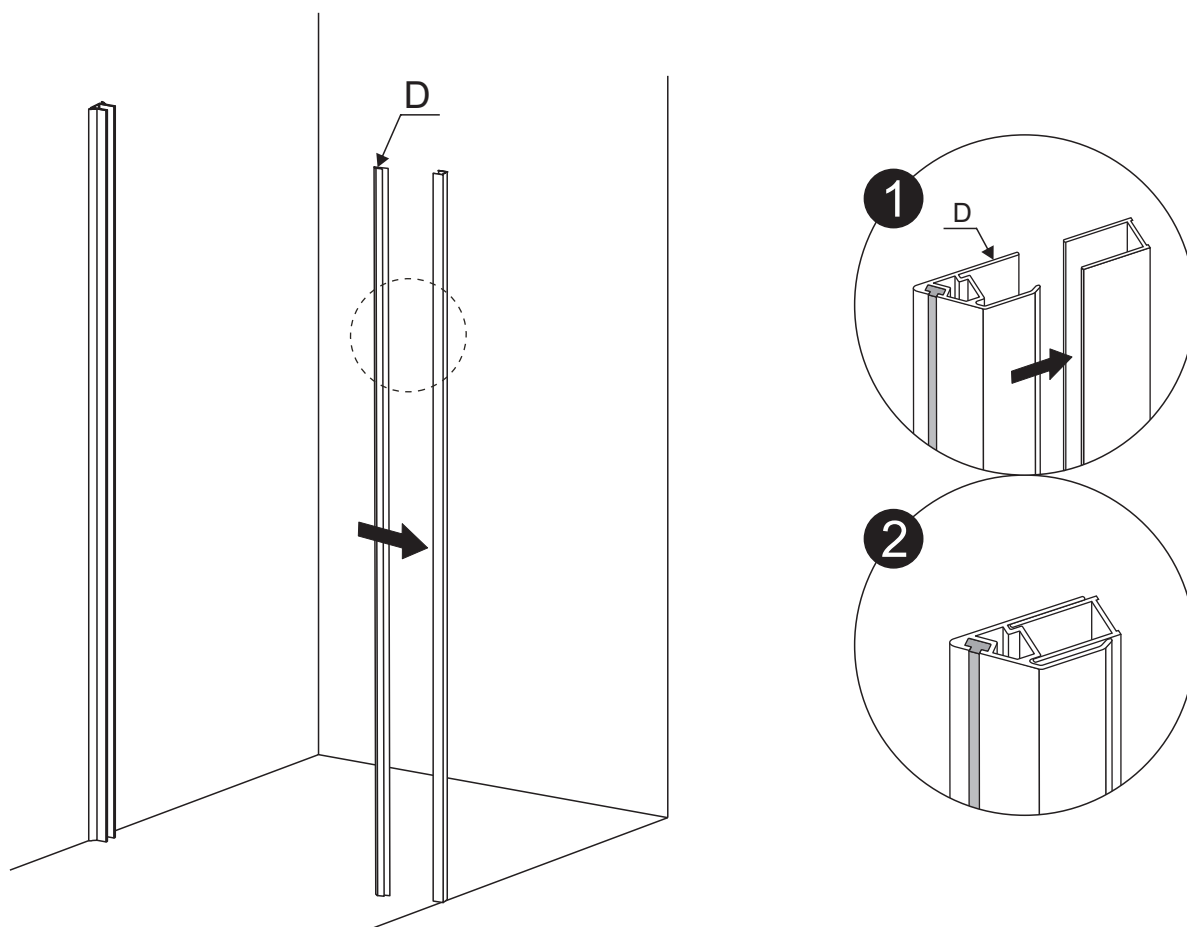


Installation instructions

3

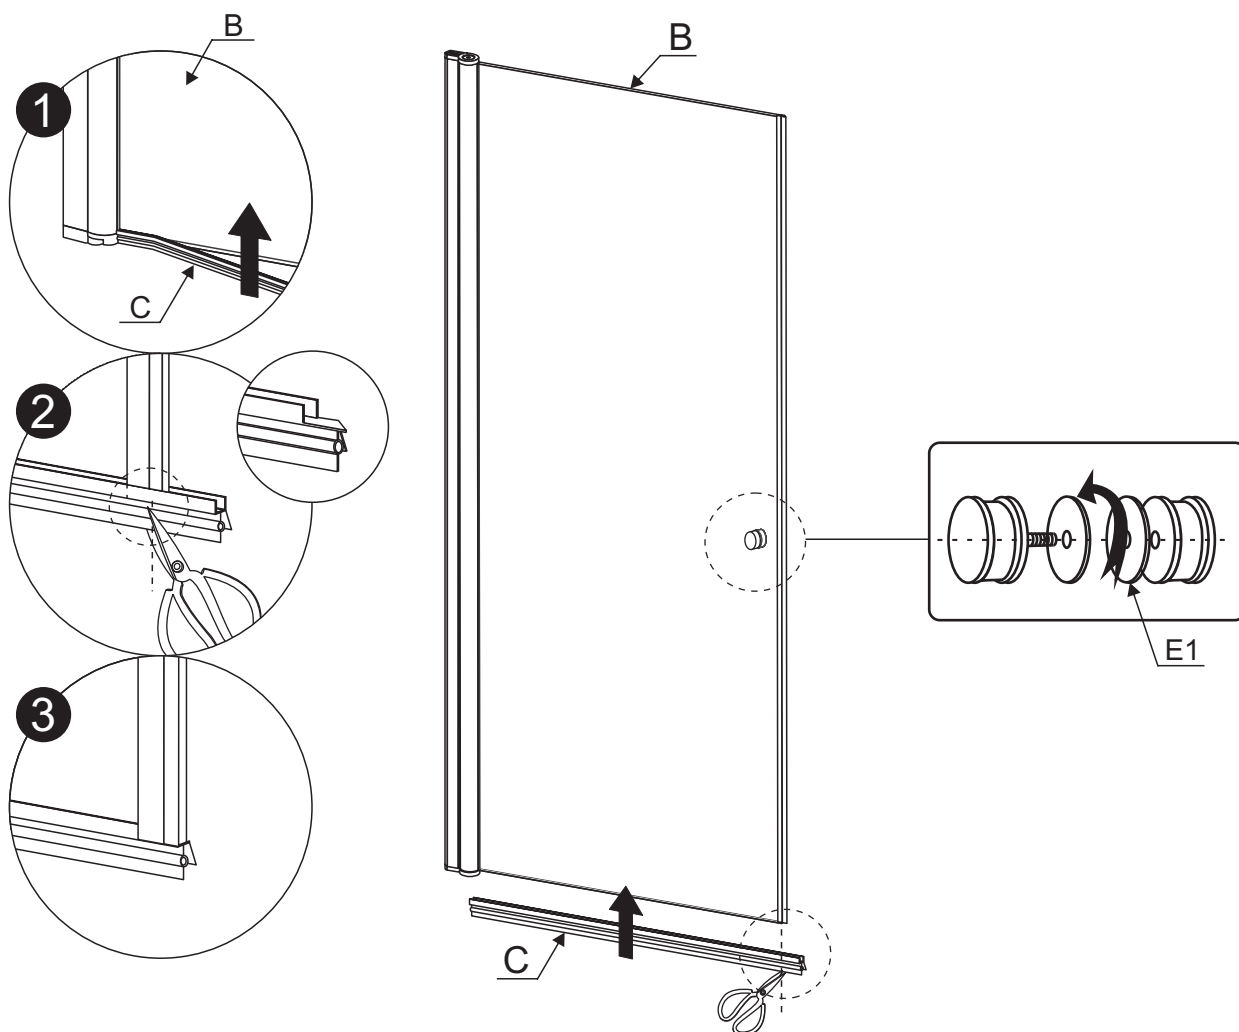


4

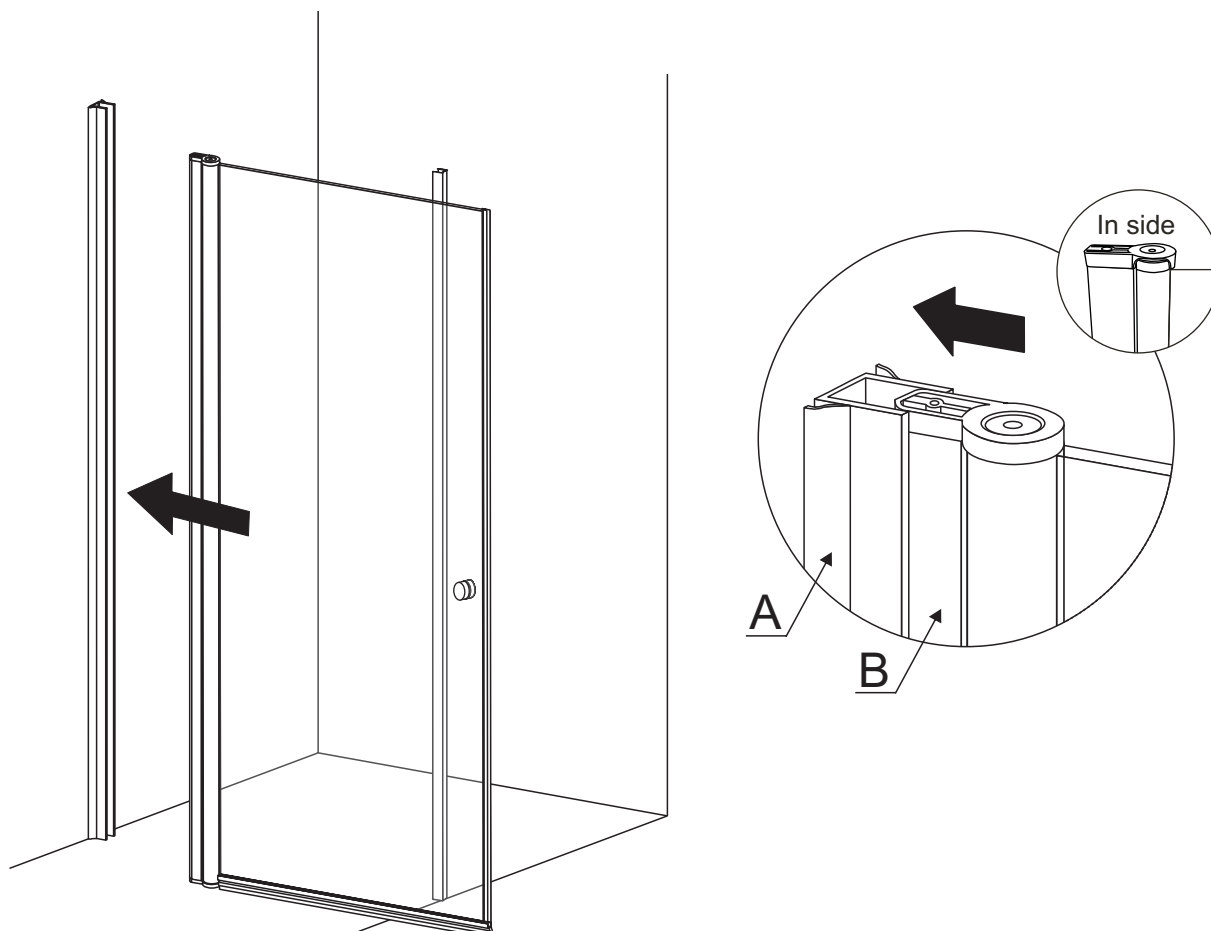


Installation instructions










5

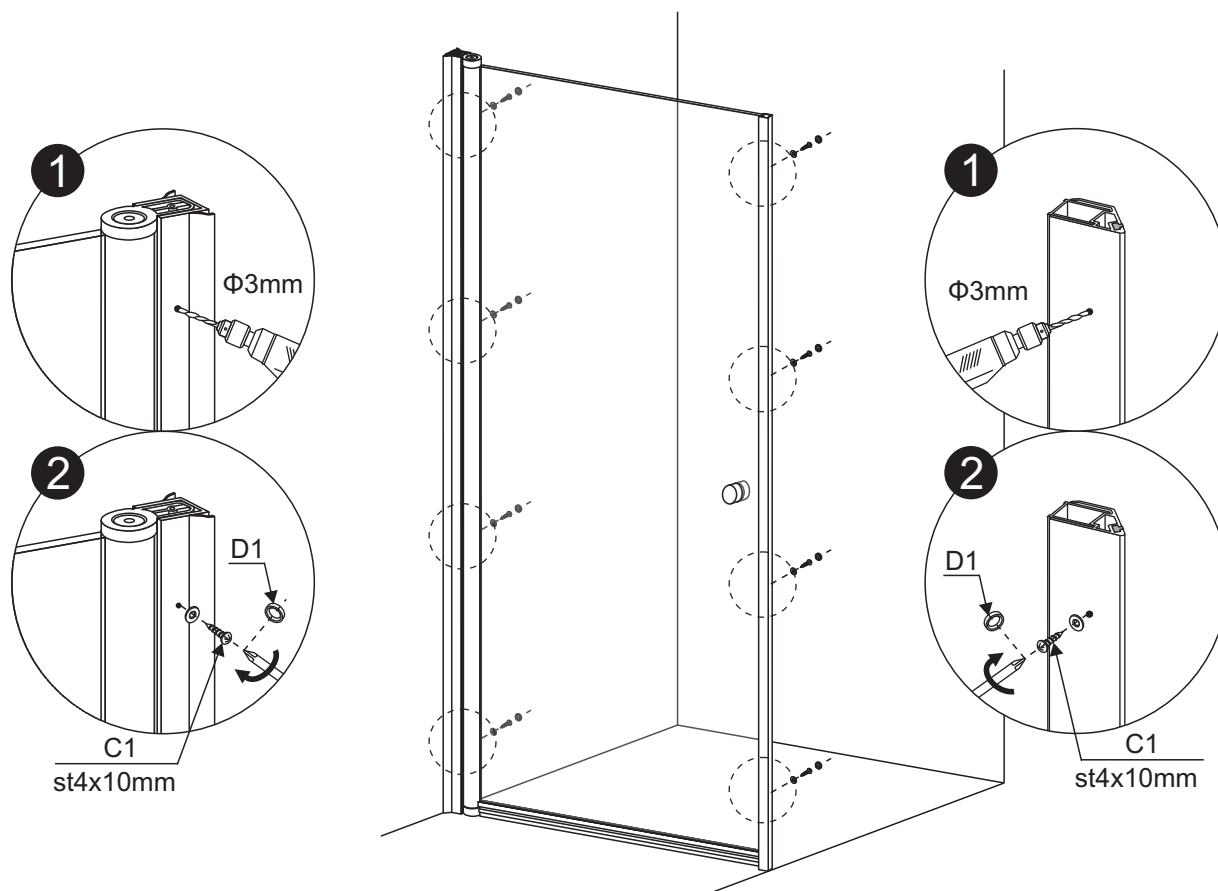

6

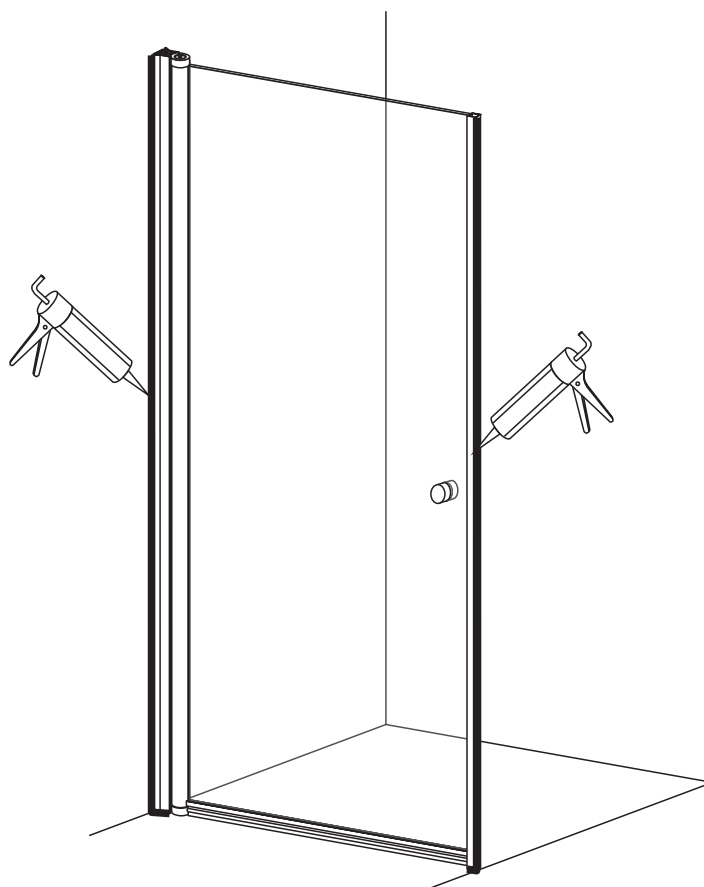


SIDE FIXED GLASS

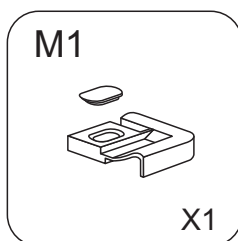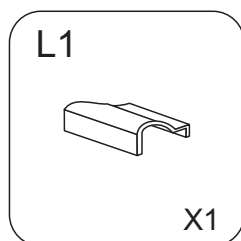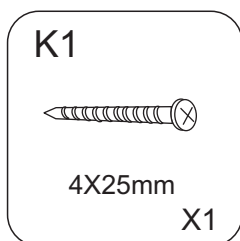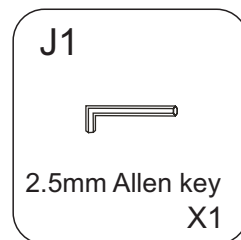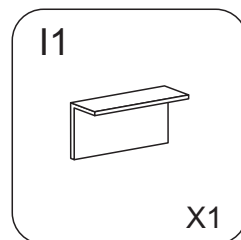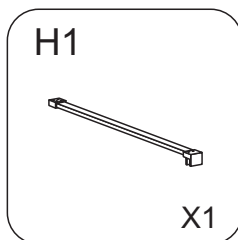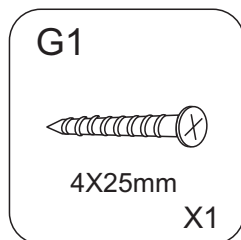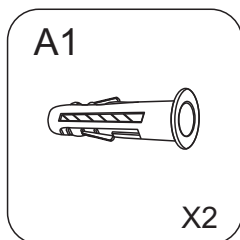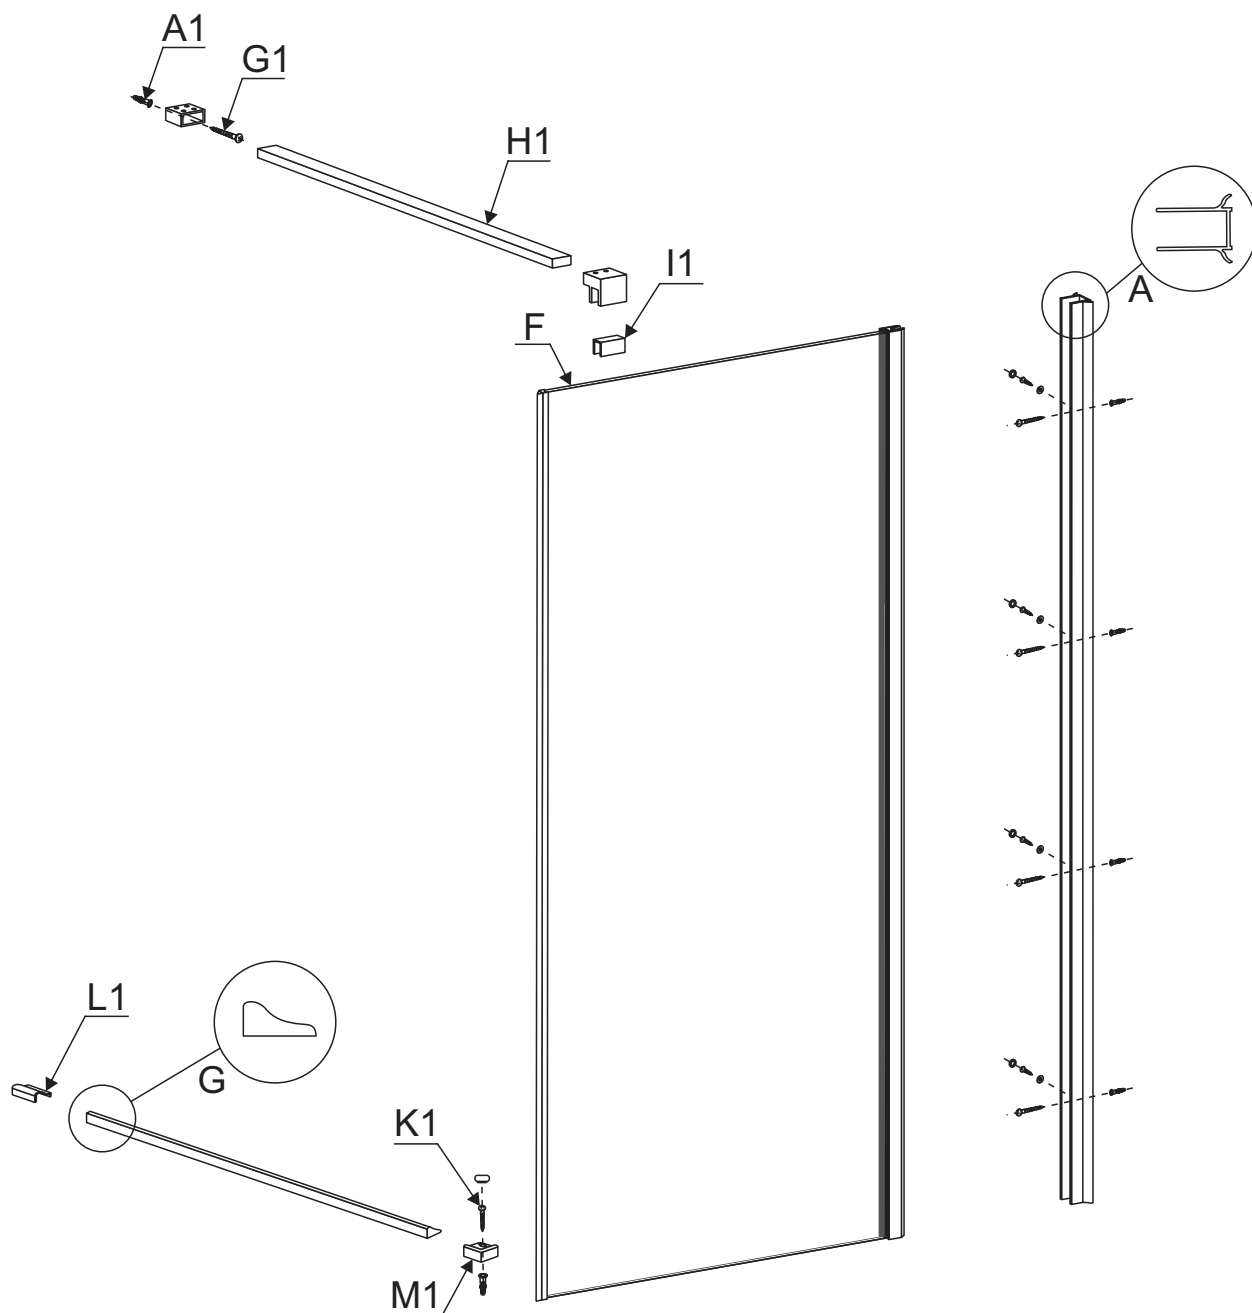


Installation instructions

1

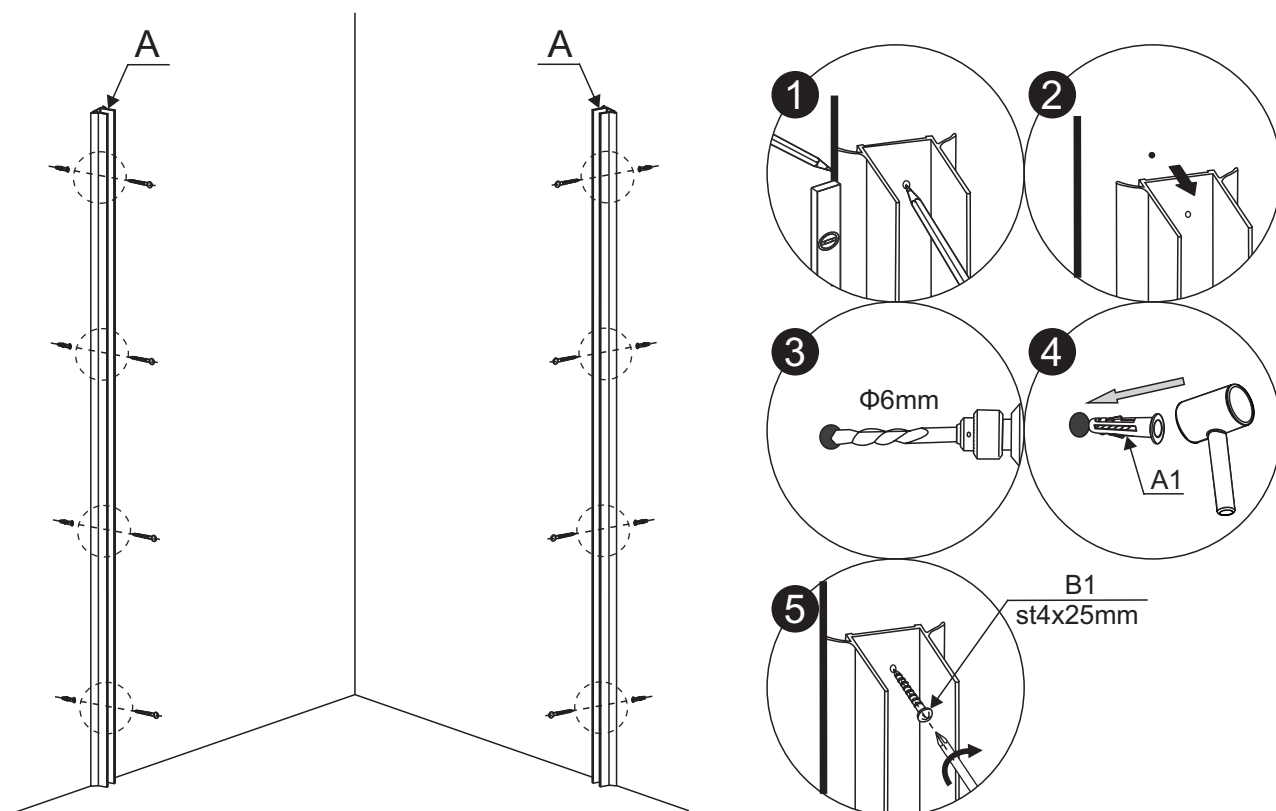


2

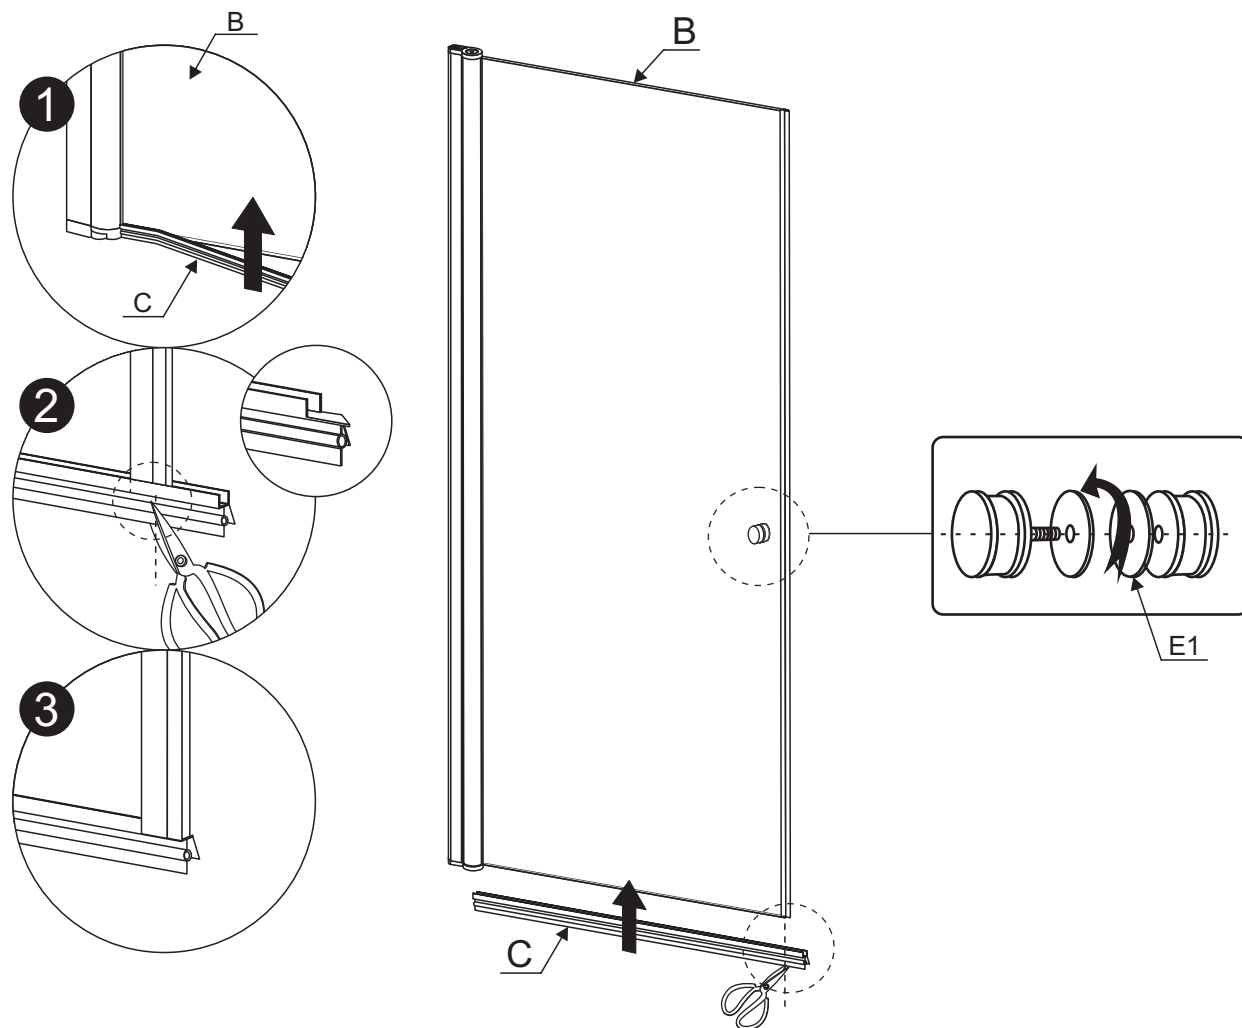


Installation instructions

3


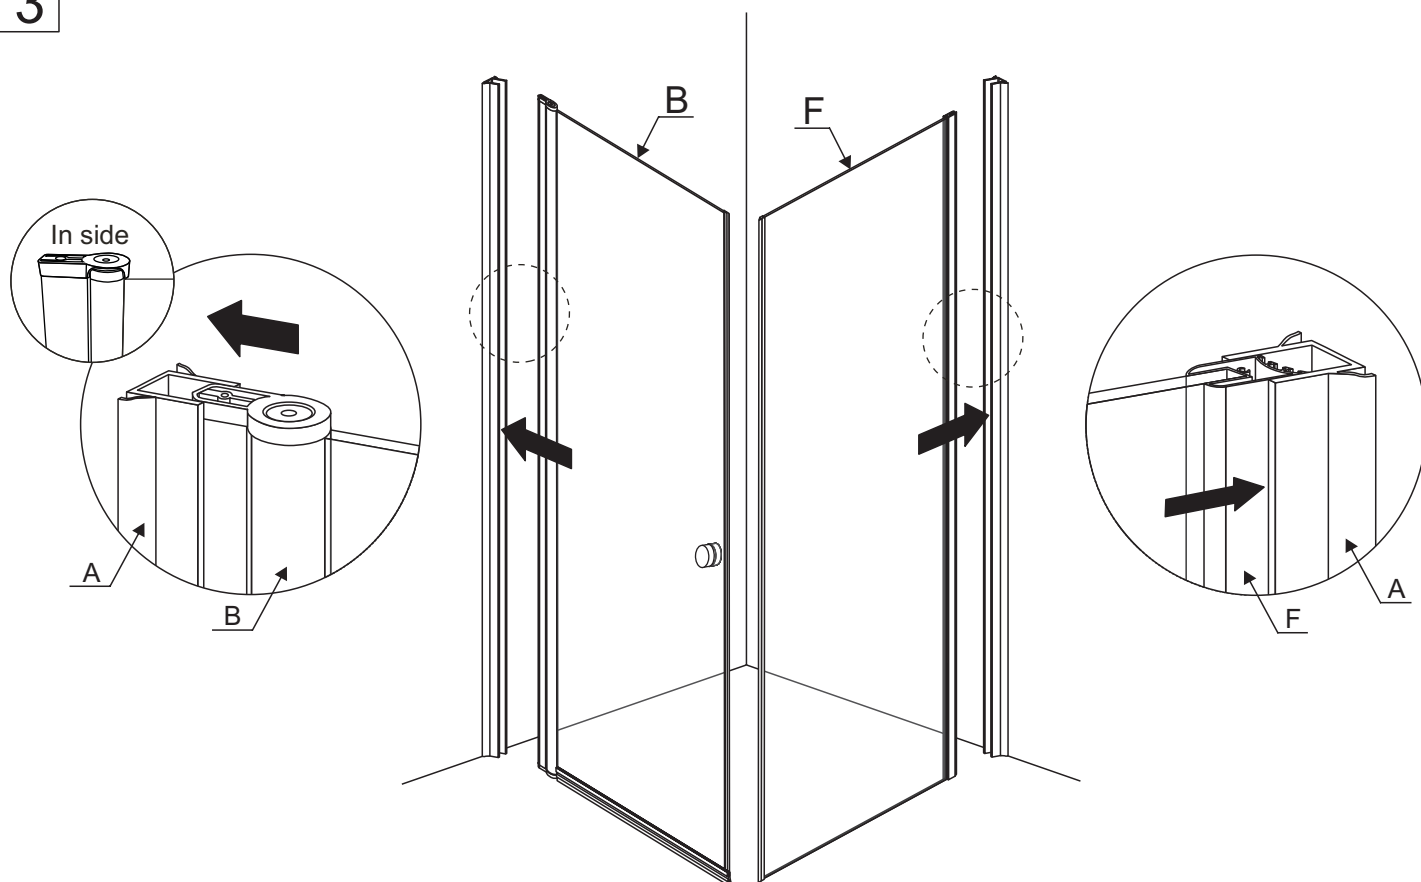


4


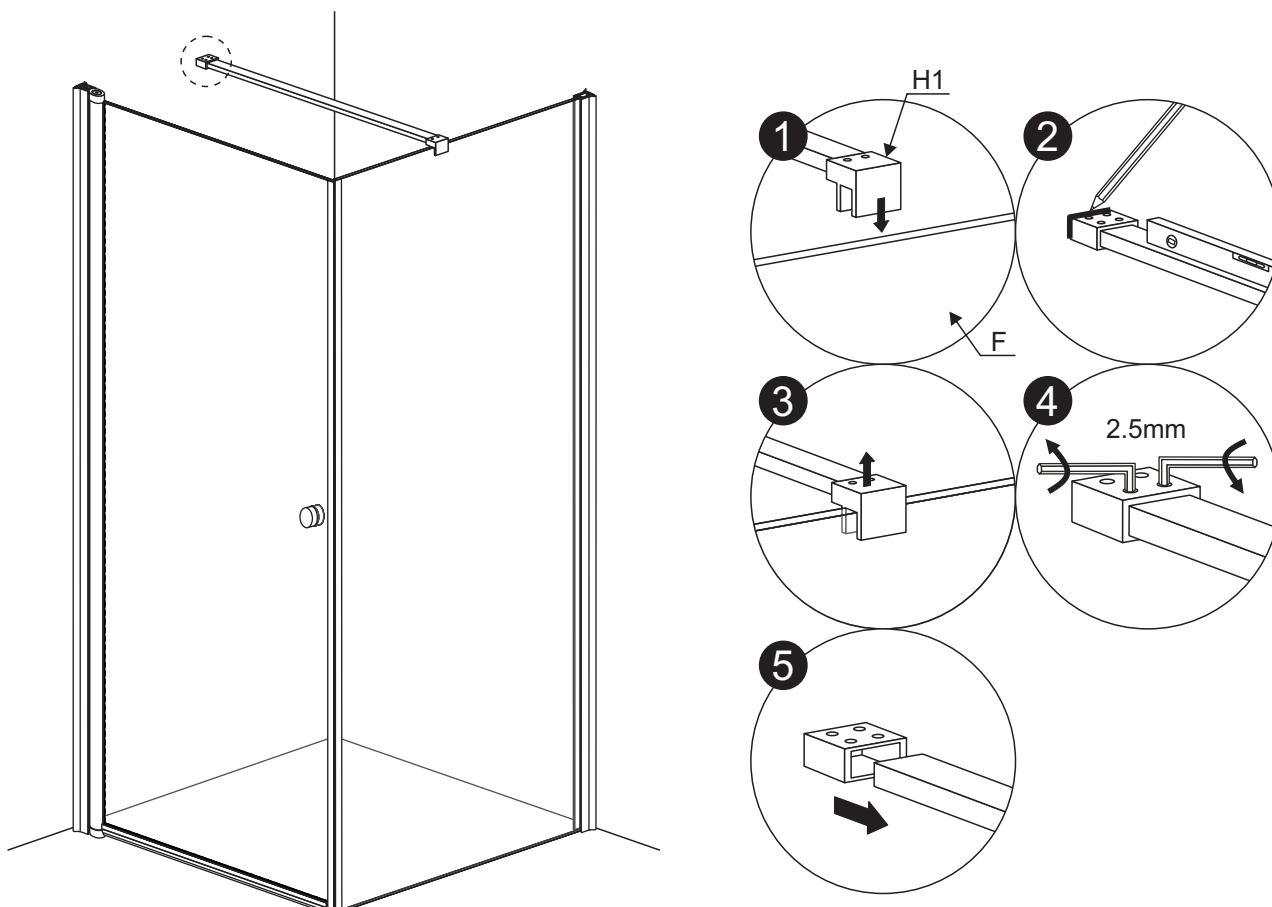


Installation instructions

5

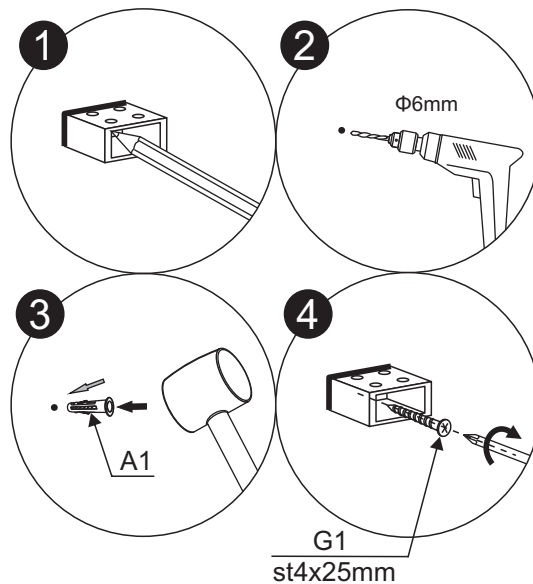
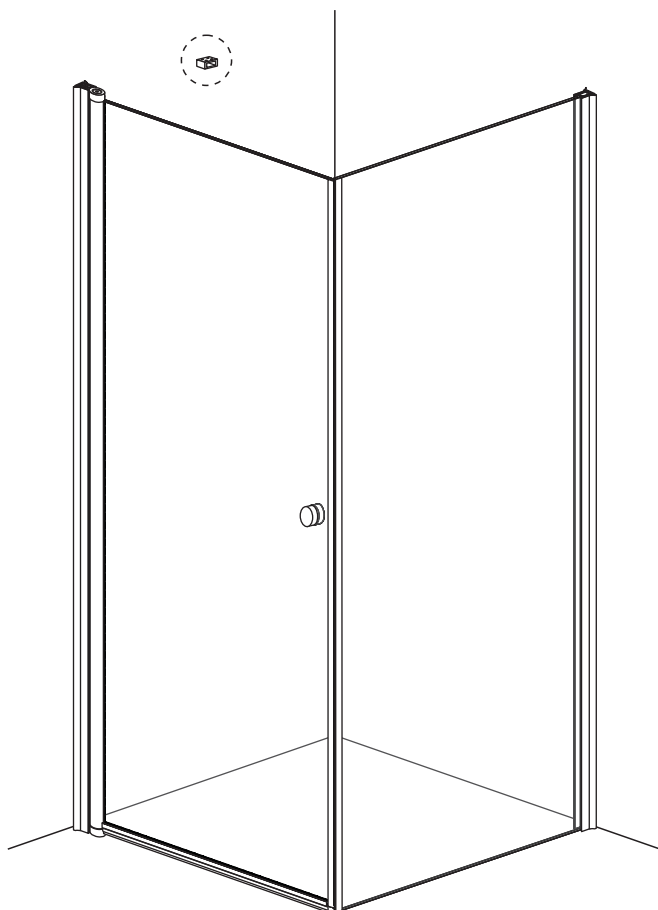


6

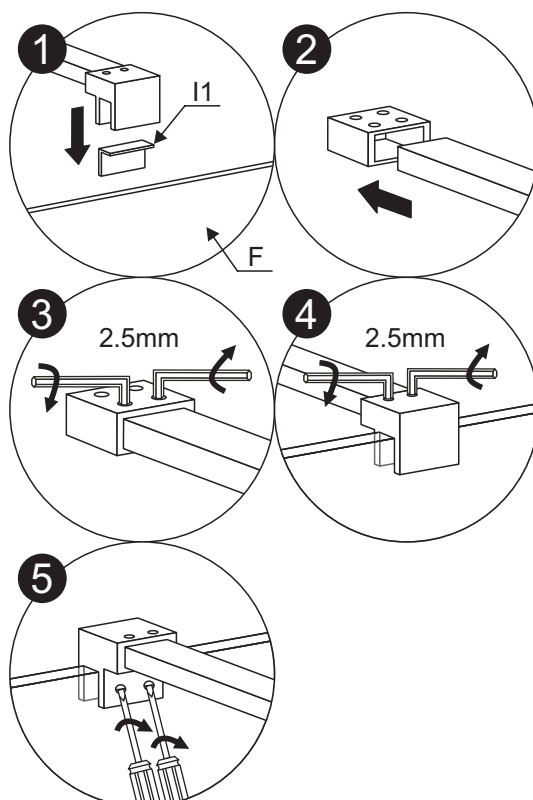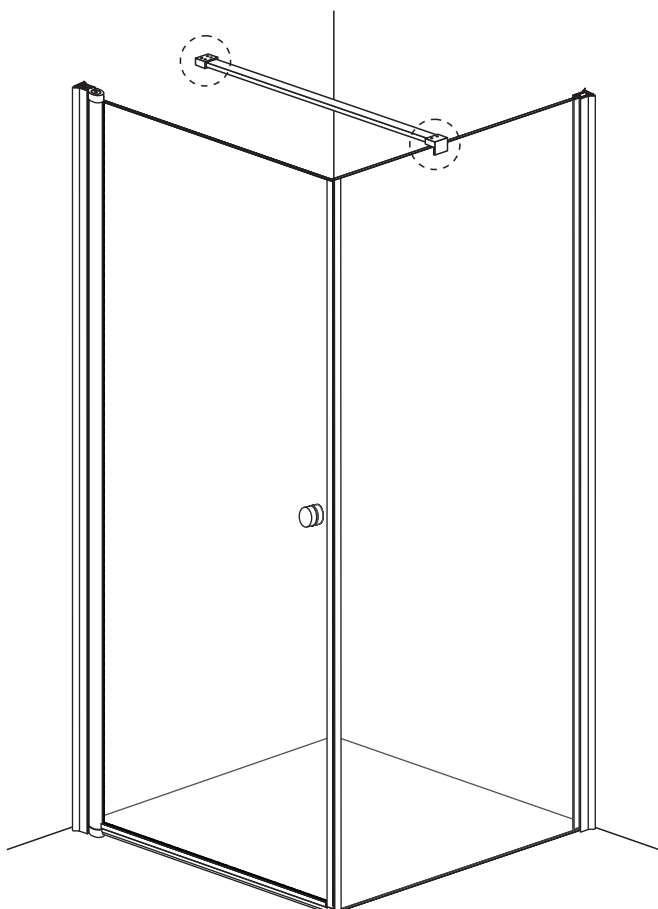

Installation instructions

7

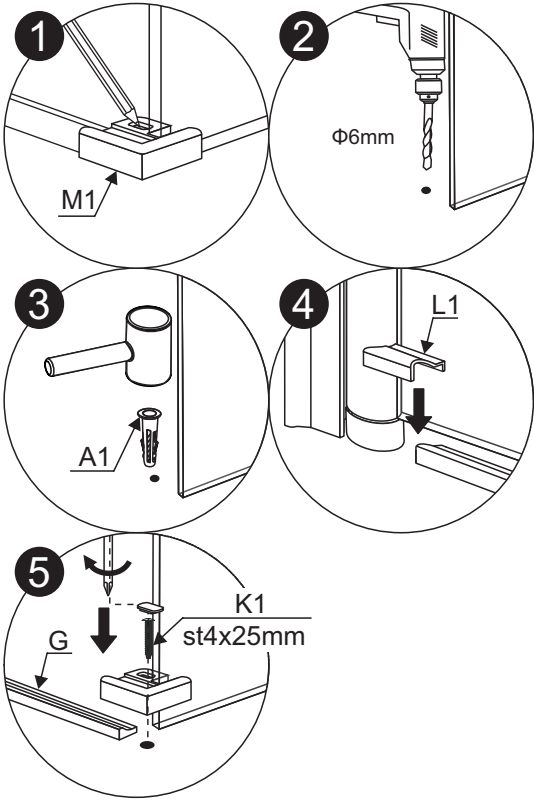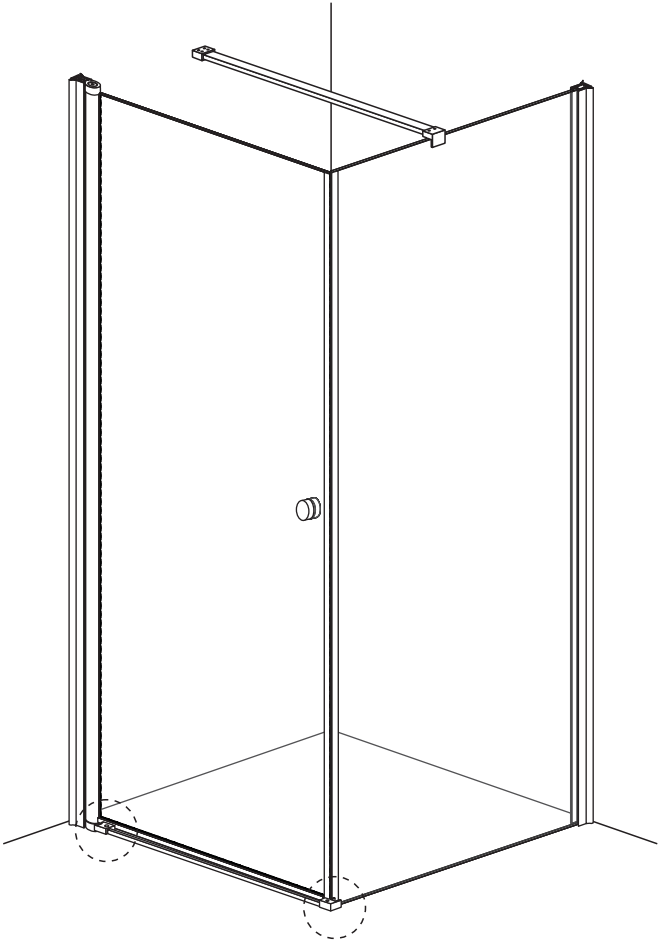

8

