







- RO** Instrucțiuni de montaj
 - EN** Assembly instruction
-


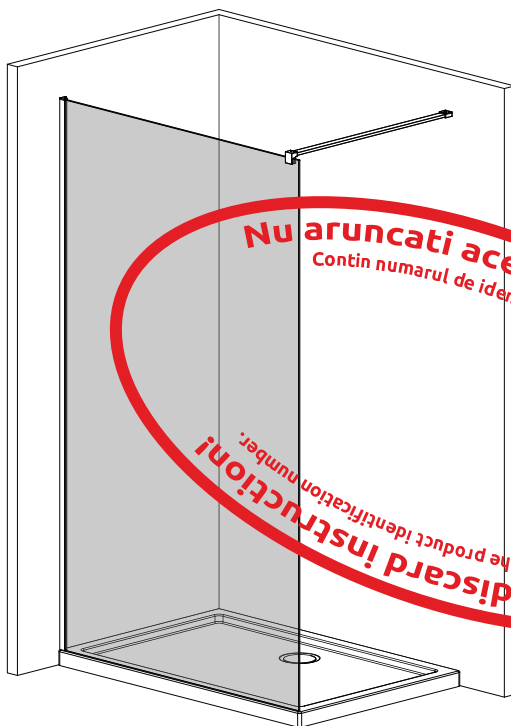






DEZIT Walk-in 6mm

- RO** Instrucțiunile de montaj se refera la instalarea cu deschidere pe stanga
- EN** Assembling instruction shows installation of left-side version

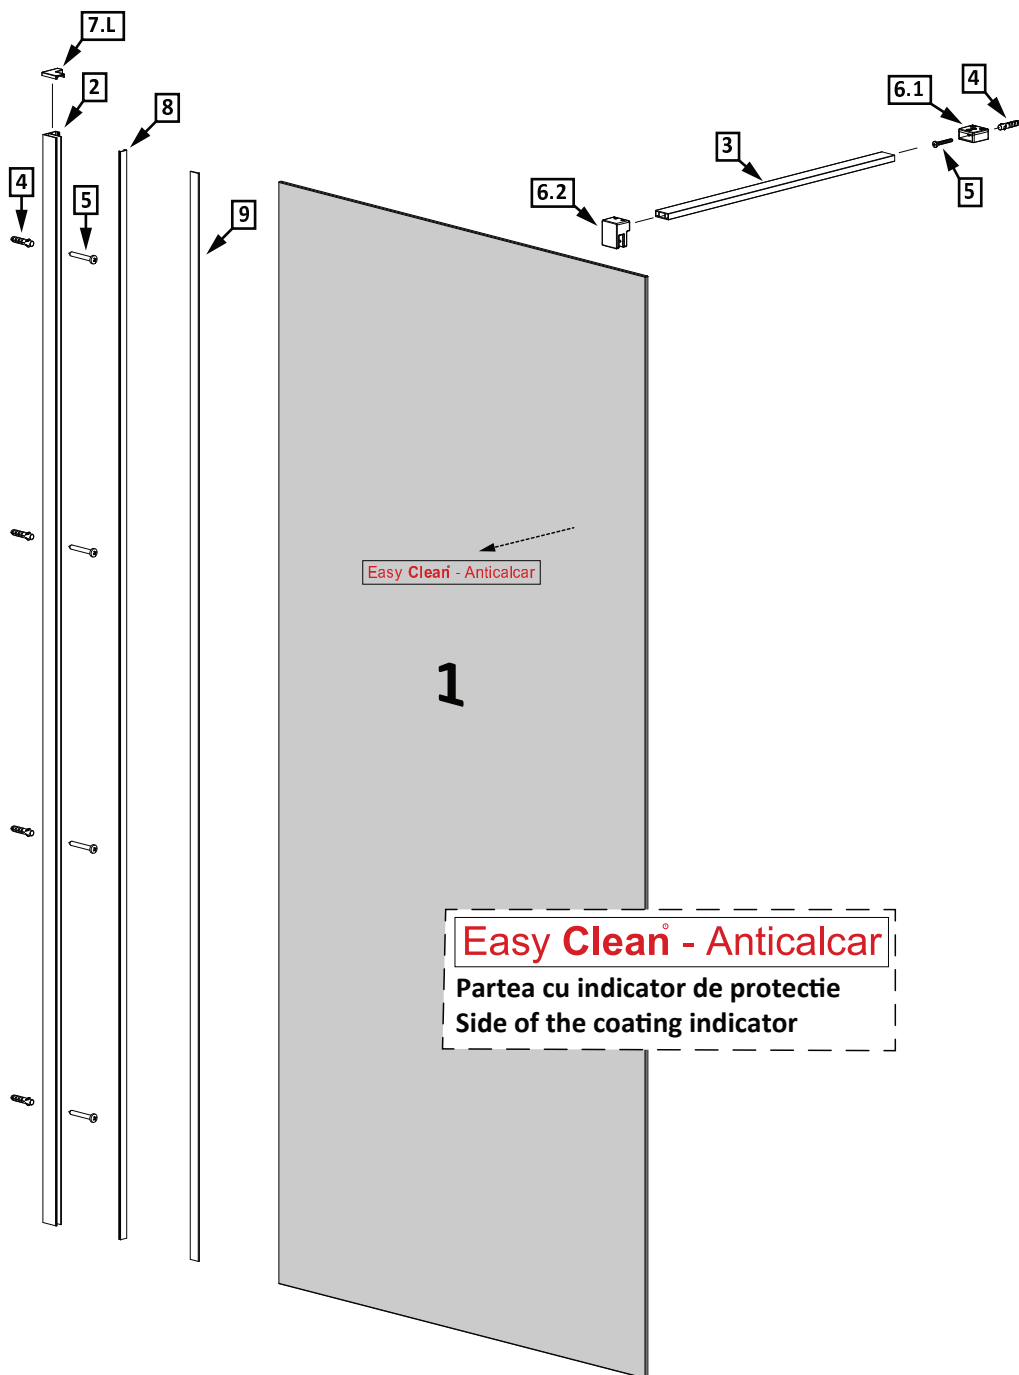


Numar Nr	Componenta Mark	Bucati Pcs.
1.		1
2.		1
3.		1
4.	 $\phi 8$	5
5.	 5x40 DIN 7981	5
6.1		1
6.2		1
7.L		1
7.R		1
8.	 L = 2000mm	1
9.	 L = 2100mm	1
10.	 1mm  2mm  3mm  4mm  5mm	4

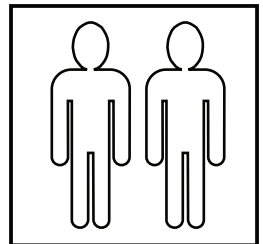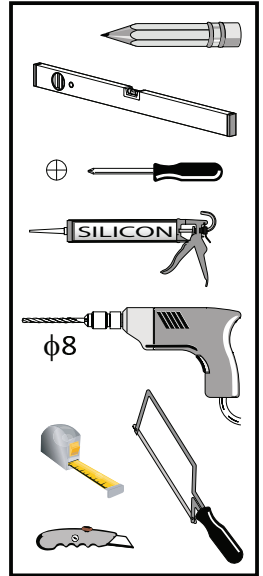

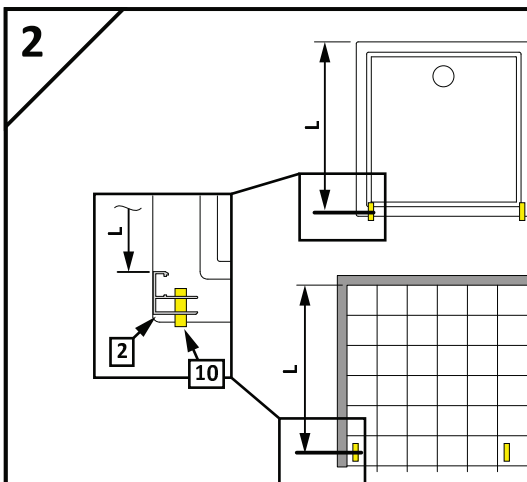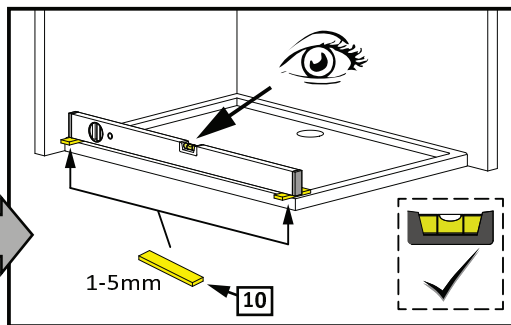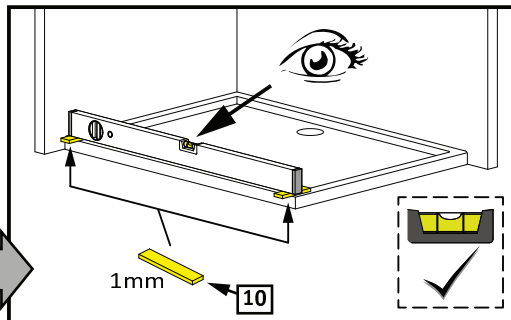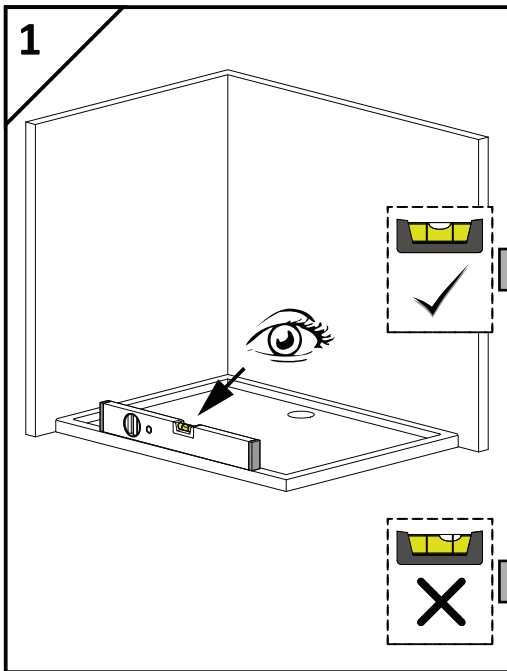




Y	700	750	800	900
L	666*	716*	766*	866*

Y	1000	1100	1200	1400
L	966*	1066*	1166*	1366*

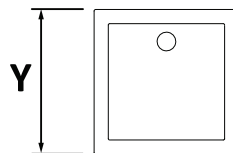

(RO) * Toate dimensiunile se referă la instalarea pe cădița de duș


(EN) * All dimensions refer to installation on shower tray

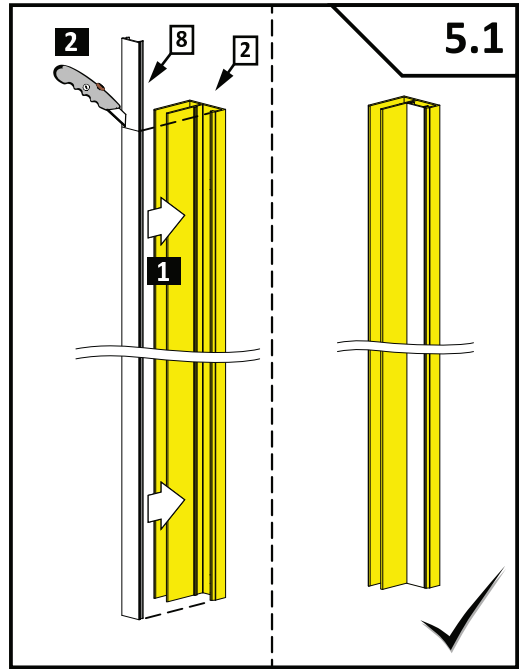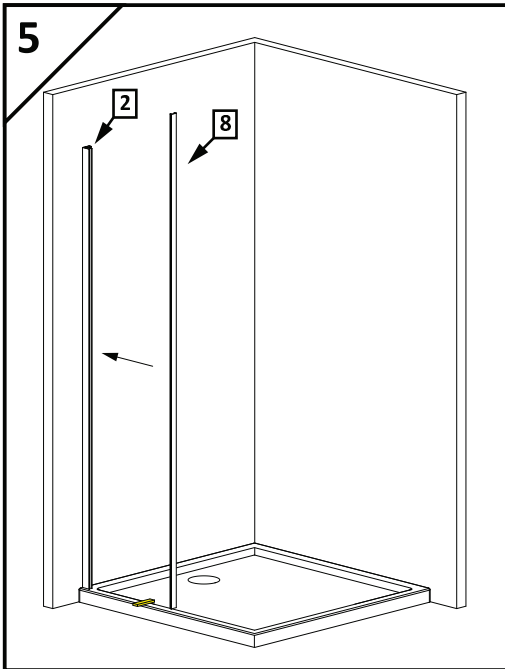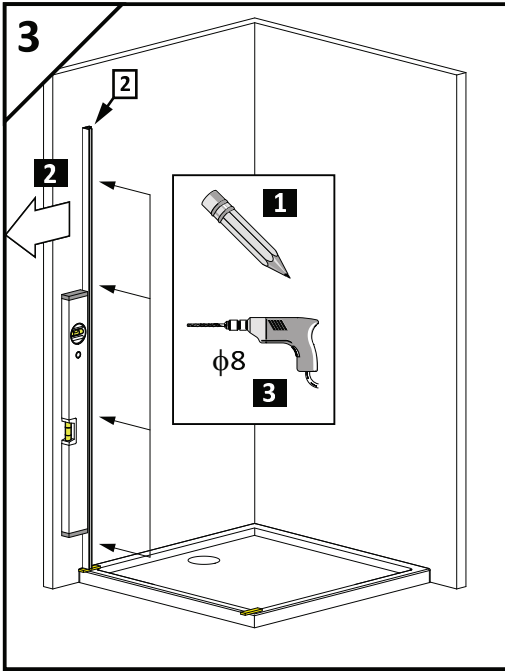


6

Easy Clean® - Anticalcar


Partea cu indicator de protecție
Side of the coating indicator

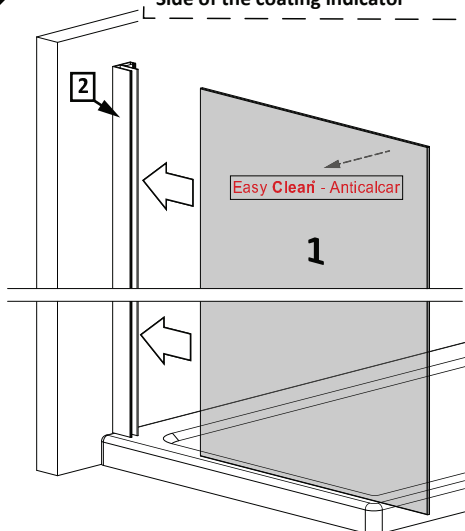

6.1

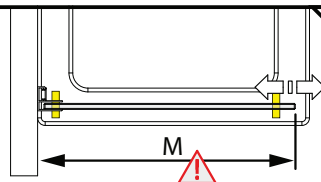

X	700	800	900	1000	1100	1200	1300	1400
M	~690*	~790*	~890*	~990*	~1090*	~1190*	~1290*	~1390*



RO

* Toate dimensiunile se referă
la instalarea pe cădița de duș


EN

* All dimensions refer
to installation on shower tray



6.2

Easy Clean® - Anticalcar

Partea cu indicator de protecție
Side of the coating indicator

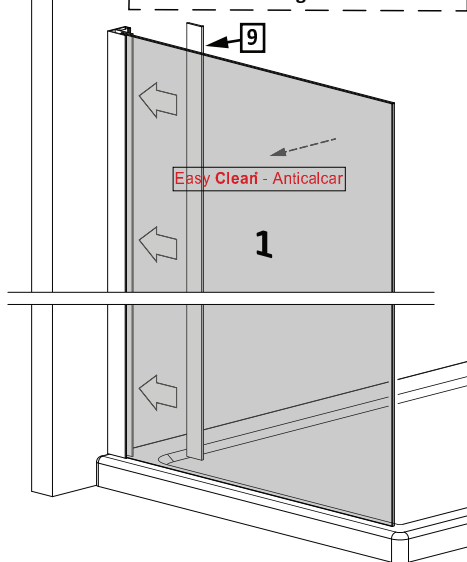

6.3

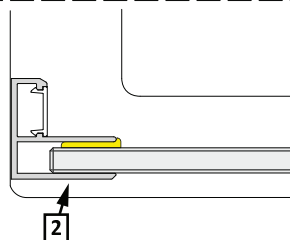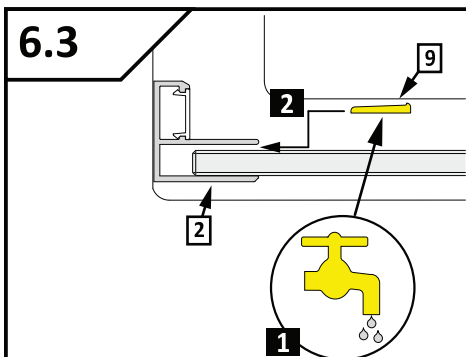

OK



