


Art Basin Instruction

The expert practical advice contained in this leaflet assists you in carrying out your home improvement projects both safely and successfully.




Make sure that the drain hole of your vanity top or bathroom countertop is larger in diameter than the pop-up waste and large enough to accommodate the ceramic sink waste hole.

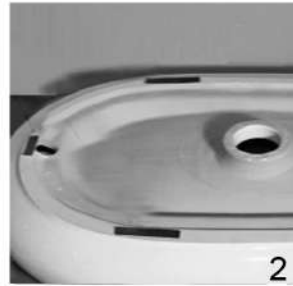

The sink does not fix permanently on top of the vanity top or countertop so you must use the included sealing tape to make sure that the sink does not move. The weight of the sink will secure it in its place.




Before installing the Pop-Up waste, make sure that you have the correct style. If you have a ceramic vessel sink with overflow, you need a special Pop-Up waste that has additional openings. If you are installing a ceramic sink without overflow, you need to install a regular Pop-Up waste.

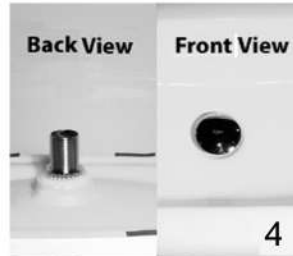

Disassemble the Pop-up waste so you are able to install it in your ceramic bathroom sink. Screw the waste into the waste hole and tighten with the mounting ring. Make sure that the plastic and rubber washers are placed correctly to avoid water leakage.




Screw in the tail pipe and tighten using the included mounting ring.

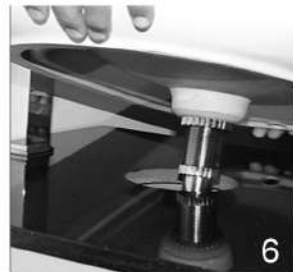

Carefully, place your ceramic vessel sink on top of your vanity top or bathroom countertop by inserting first the tail pipe already installed on the Pop-Up waste. Make certain that the ceramic sink is aligned correctly.



Prepare the Pop-Up waste to connect the P-Trap by sliding all of the plastic and rubber washers. Then, using the nut, screw tightly the P-Trap to the tail pipe.

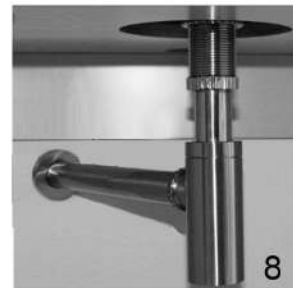

Prepare the drain pipe to connect to the P-Trap by sliding all of the plastic and rubber washers. Complete the installation by connecting the drain pipe to the wall. Make sure all parts are secured tightly to avoid leakage.



Check all of the parts correctly and finish the installation.