


1604060 Instructions of assembly


Tool Needed

1. Tape measure(Max 3 Metre)
2. Horizontal ruler
3. Cross Screw driver
4. Electric drill
5. Hammer

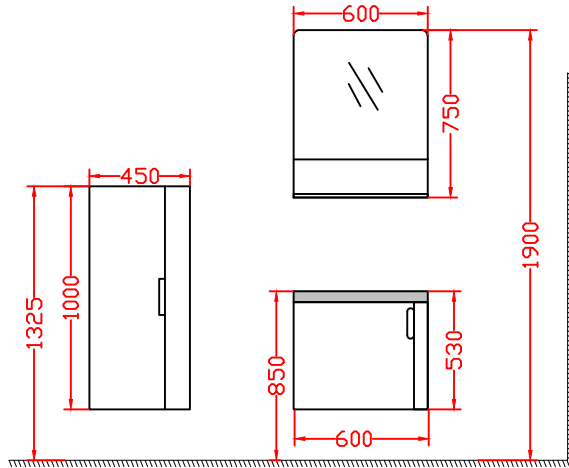


STEP 1)

As drawing shows, make holes with drill horizontally ,fill with expansion screw .

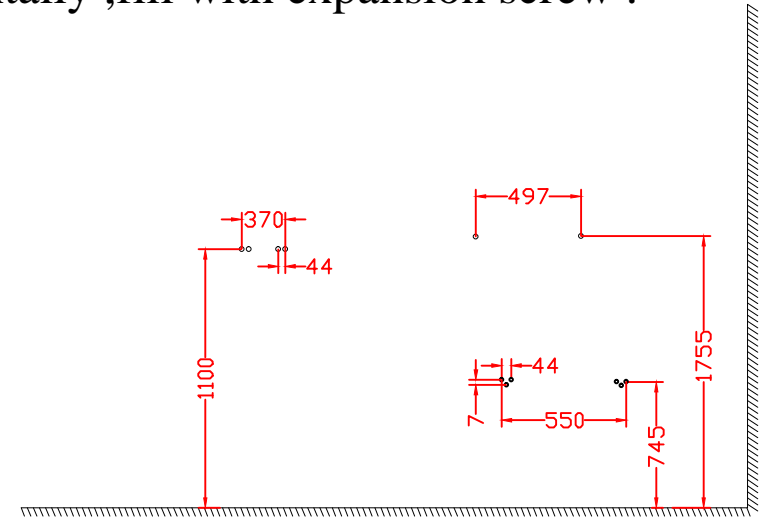

STEP 2)

As drawing shows, fill screw into expansion screw

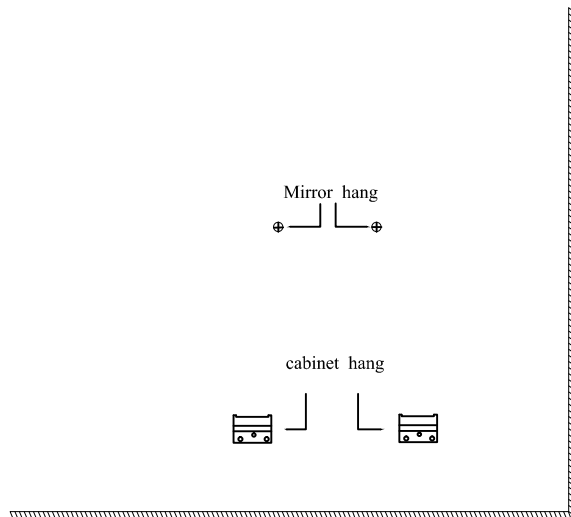

STEP 3)

Suspending mirror and cabinet horizontally

