


1702060 Instructions of assembly


Tool Needed

1. Tape measure(Max 3 Metre)
2. Horizontal ruler
3. Cross Screw driver
4. Electric drill
5. Hammer

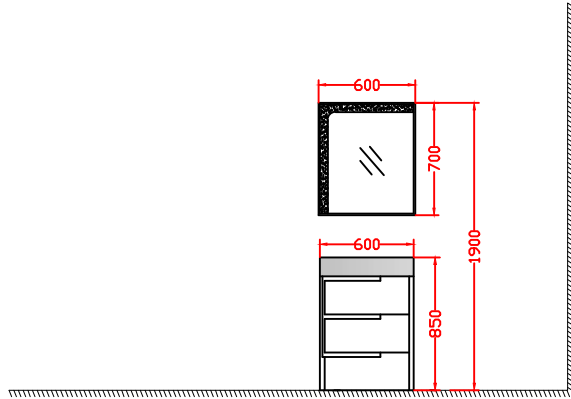


STEP 1)

As drawing shown to make hole with drill and horizontal

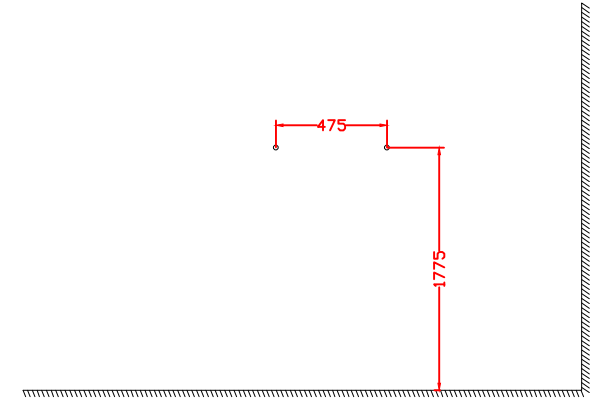

STEP 2)

As drawing shown,fix hang with driver and horizontal

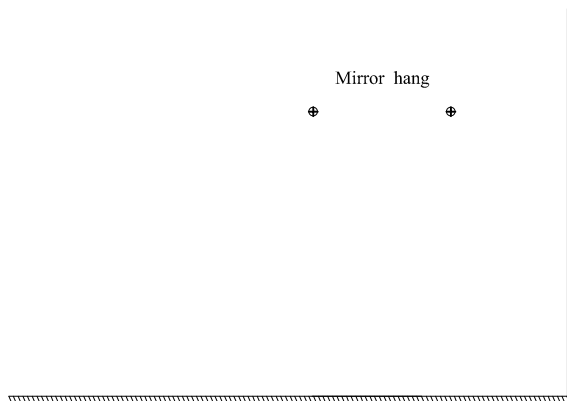

STEP 3)

Suspending cabinet into hang ,and adjust perfect

