


2577355 Instructions of assembly


Tool Needed

- 1.Tape measure(Max 3 Metre)
- 2.Horizontal ruler
- 3.Cross Screw driver
- 4.Electric drill
- 5.Hammer

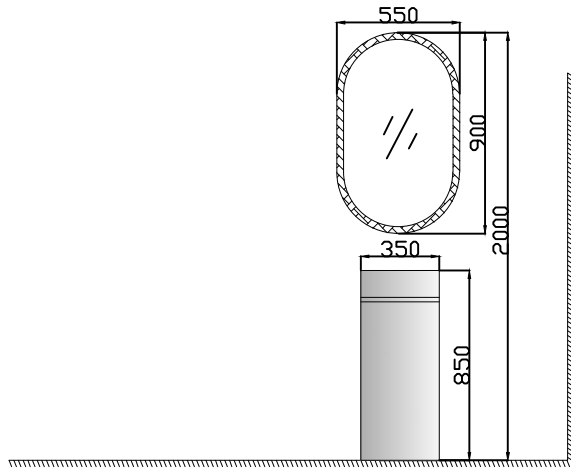


STEP 1)

As drawing shows, make holes horizontally with drill

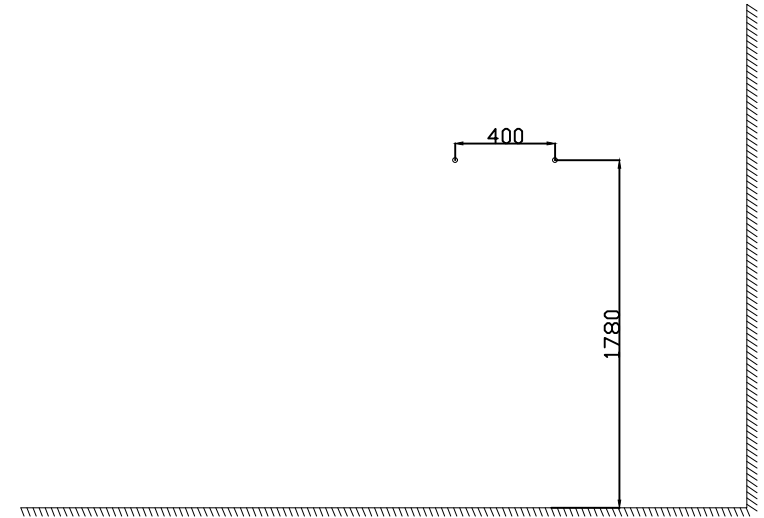

STEP 2)

As drawing shows,drill the hole and put the expansion tube into the wall by hammer

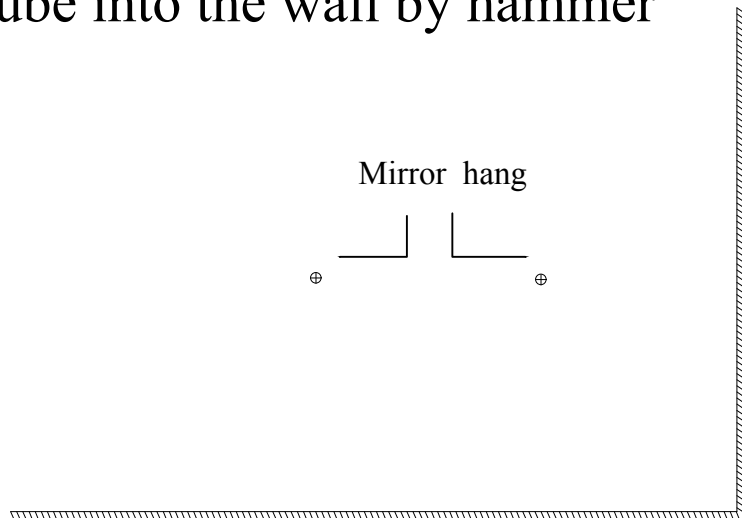

STEP 3)

Suspending mirror on the wall, then adjust horizontally and perfectly

