

K-505 SIZE:1100X750X2000


K-506 SIZE:1200X800X2000

TOOLS REQUIRED (NOT SUPPLIED)

-When you're ready to start, make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.



Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

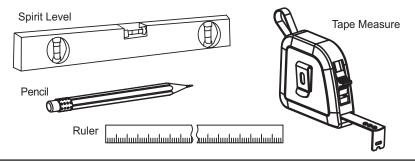







Cross head driver bit



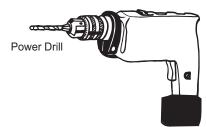

Adjustable Spanner

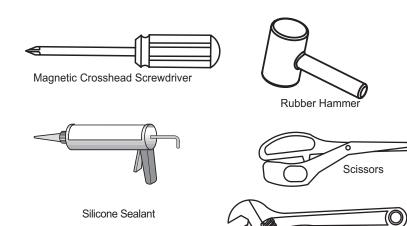


Part list


Item no	Description	Product	Quantity
A	waste siphon	°	1
В	(B1)Fixed glass		1
	(B2)Fixed glass		1
С	(C1)Movable glass		1
	(C2)Movable glass		1
D	Profile		2
_	(E1)Curved track(Top)		1
E	(E2)Curved track(Top)		1
	(E3)Curved track(Bottom)		1
	(E4)Curved track(Bottom)		1
F	Track connector		2
G	Handle	00110 -	2
Н	Glass Stopper		8


Part List

Item no	Description	Product	Quantity
I	Glass Clamp		4
J	Wheel set	J ₁ J ₂ J ₃ J ₄ J ₅	8
K	Screw Cover Cap	K1 (1) K2	8
L	(L1)Spalsh seal		4
	(L2)Magnetic seal		2
	(L3) seal		2
	(M1)Cross Head Screw ST4x16mm	OMITTED A	8
M	(M2)Cross Head Screw ST4x30mm	OMMINITUDE STATE OF THE PARTY O	8
	(M3)Cross Head Screw ST4x10mm		14
N	Wall Plug		8


Installation



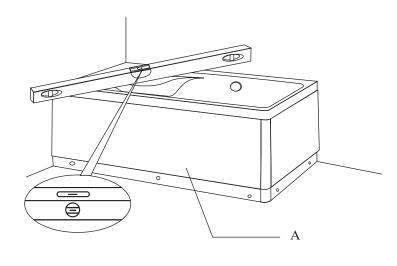

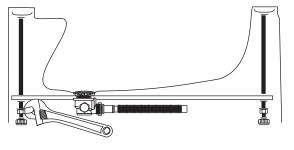

Installation M3 M3 M3 В1 B2 <u>↓</u> M3

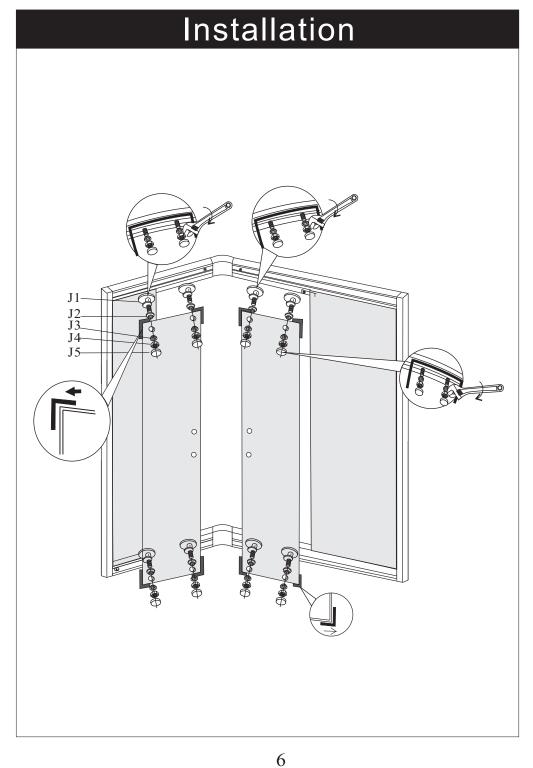

5

Installation 00₩0₩ H M1

