


Installation instructions of back to wall toilet and bidet


1

Lay the pipe as shown
Priprava priključka za dotok in odtok vode.

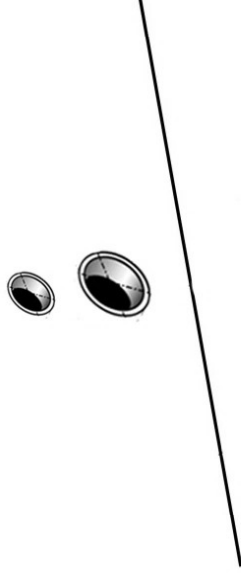


2

Mark white cement line or silicone and screw holes
Označi končno pozicijo WC/BIDE in označi pozicijo vijaka

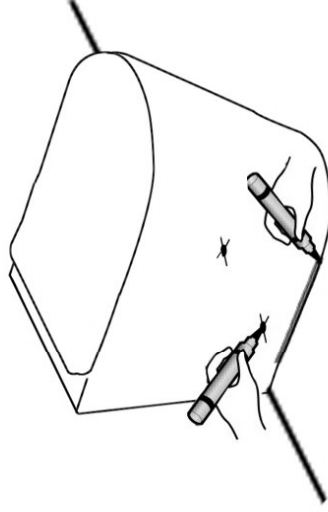


3

Fix the fixing screws
Postavi WC/BIDE na označeno mesto in ga pritrdi z vijaki

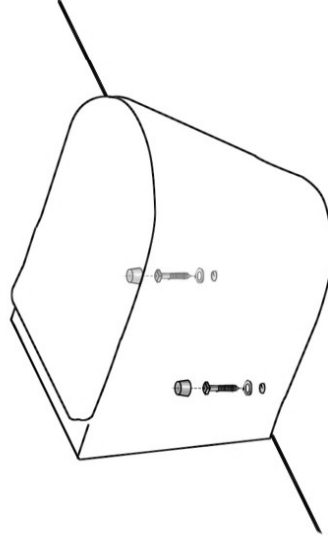


4

Check the overall installation and seal the base
V kolikor je WC/BIDE v livelu, priporočamo zatesnitev fuge med keramiko in ploščicami s silikonom.

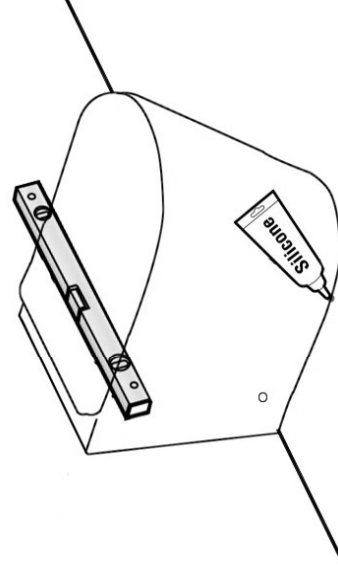

TOILET INSTALLATION

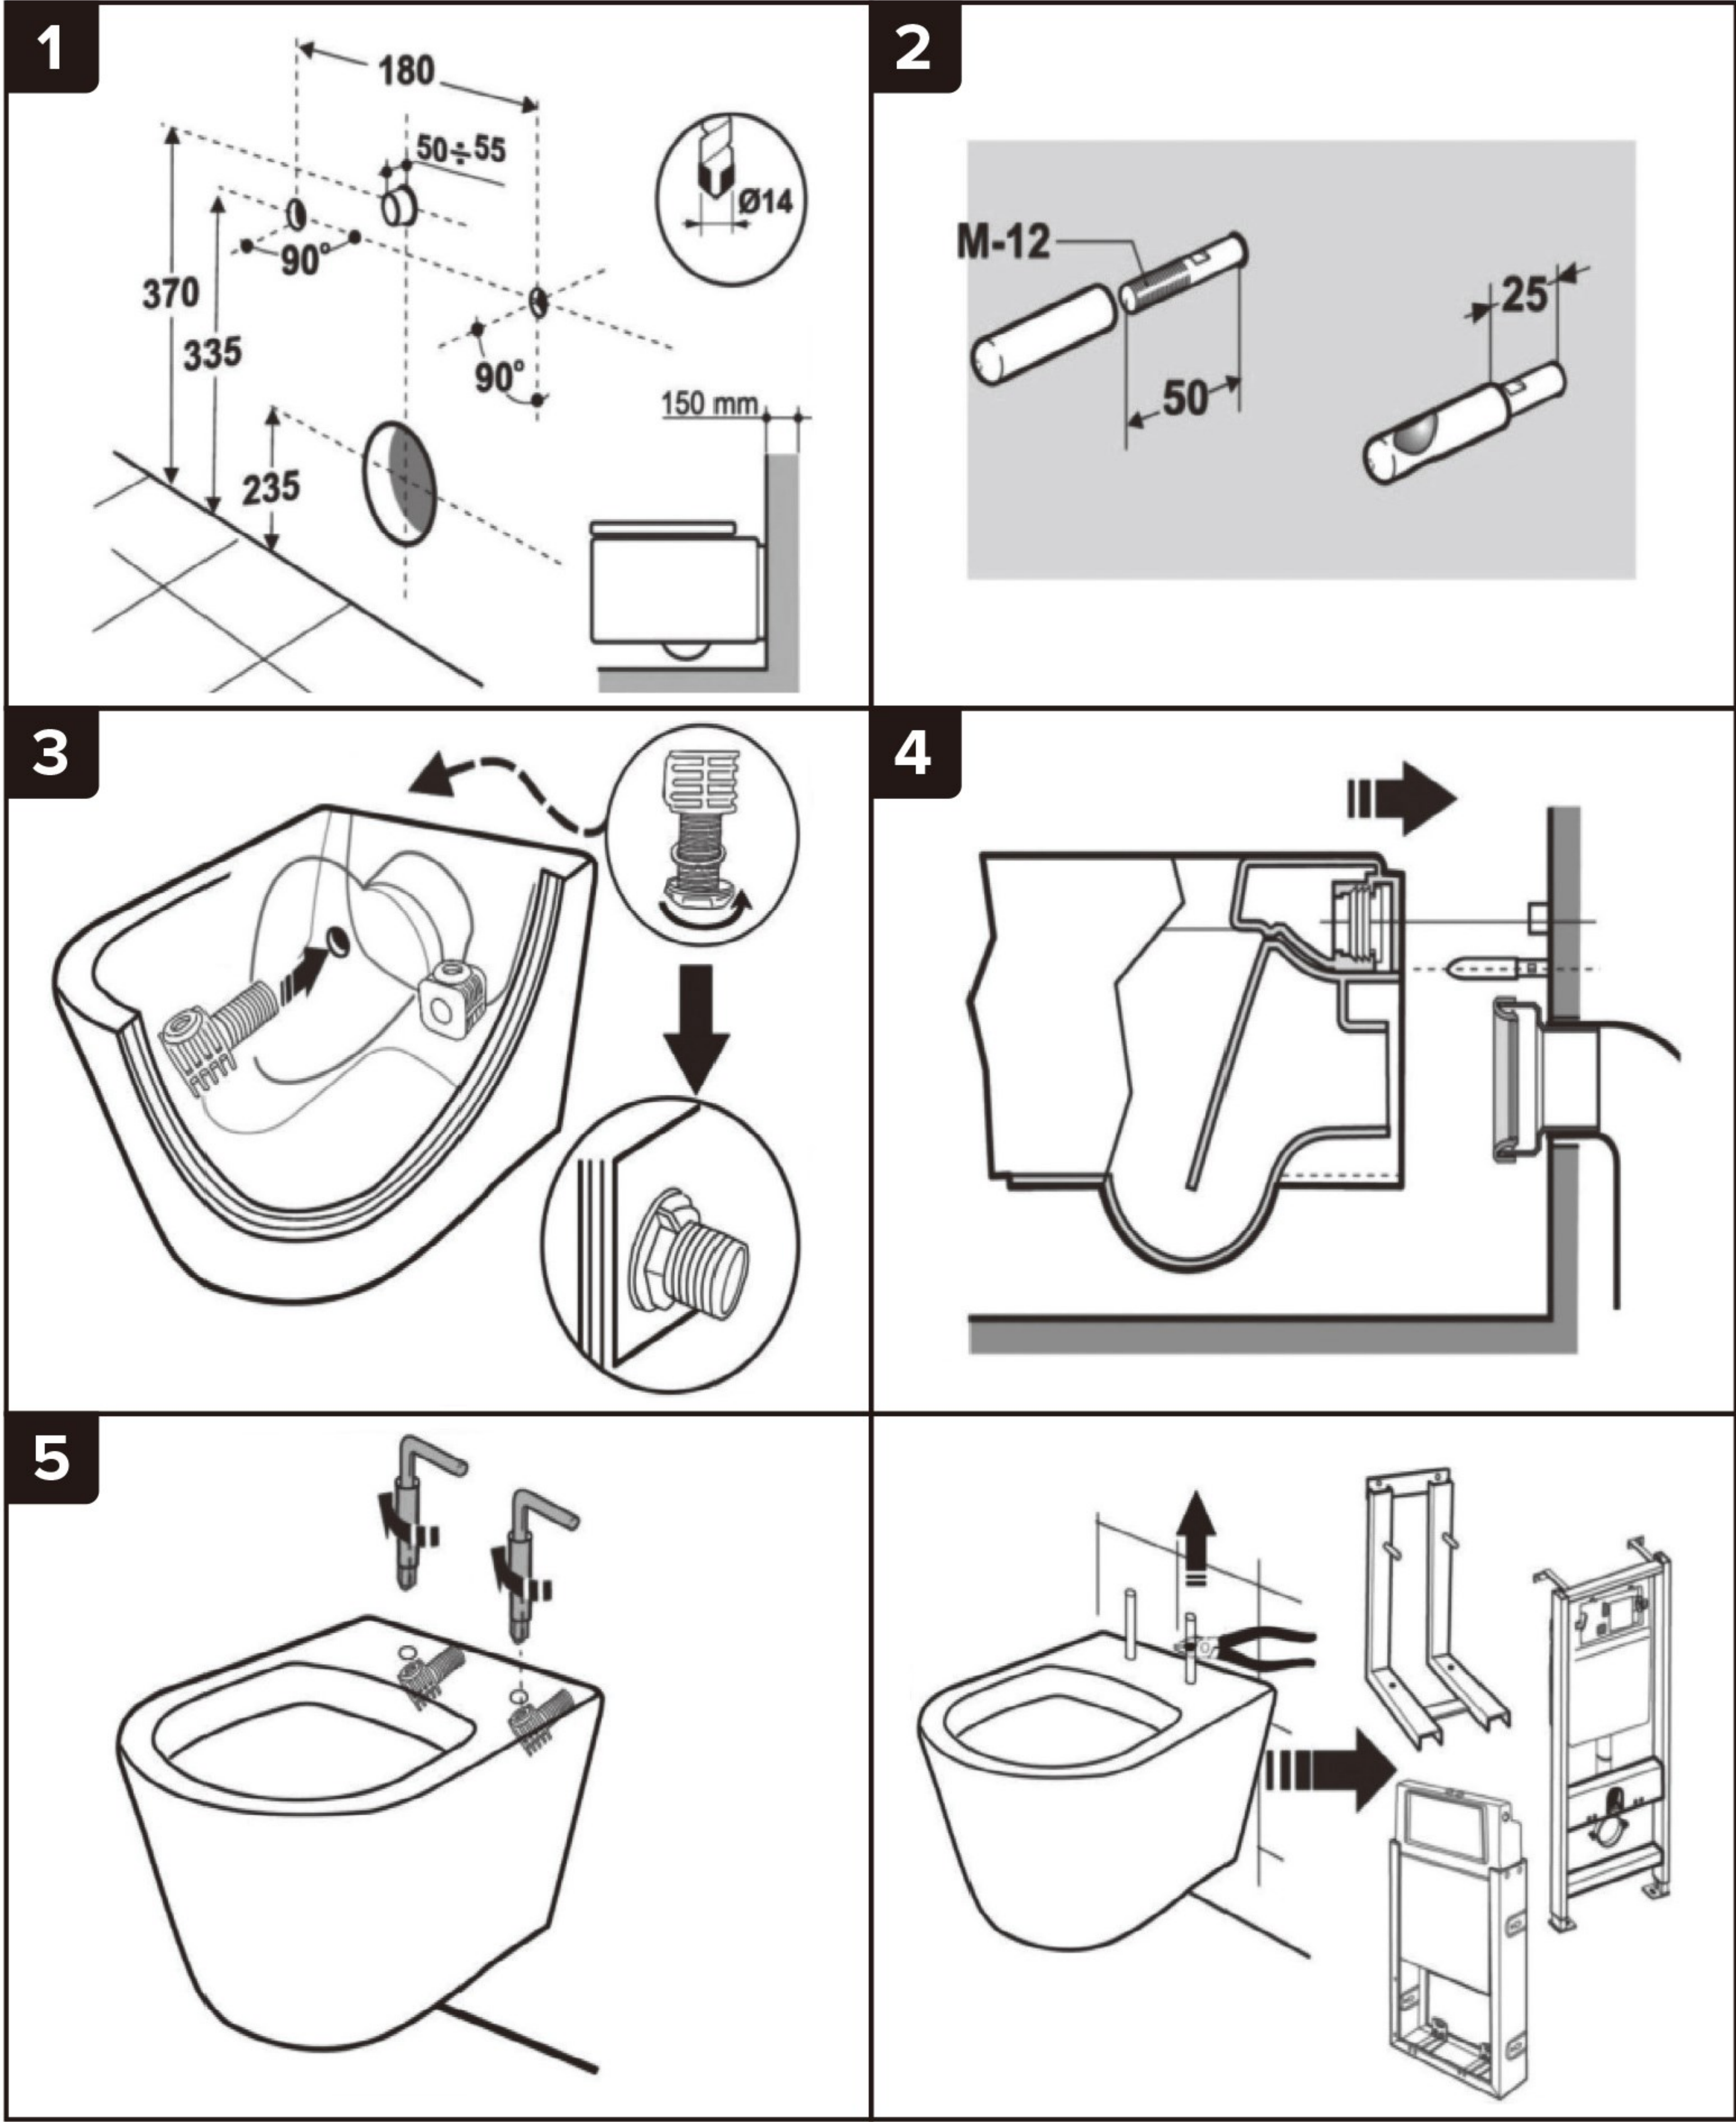

SEAT COVER INSTALLATION

